Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- ipega /
- › ipega PG-9078 Universal Wireless Bluetooth Game Controller User Manual

ipega PG-9078

ipega PG-9078 Universal Wireless Bluetooth Game Controller User Manual

Model: PG-9078

1. Introduction

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your ipega PG-9078 Universal Wireless Bluetooth Game Controller. Please read this manual carefully before use to ensure proper functionality and to extend the lifespan of your device. The PG-9078 is designed to provide a versatile gaming experience across multiple platforms including Android, iOS, Tablet, TV, and PC.



Figure 1.1: Package Contents - ipega PG-9078 Controller, detachable bracket, USB cable, and user manual.

2. SETUP

2.1. Charging the Controller

Before initial use, fully charge the controller. Connect the supplied USB cable to the Micro-USB port on the controller and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged.

2.2. Attaching the Phone Bracket

The PG-9078 comes with a detachable bracket for holding smartphones. To attach, align the bracket's base with the slot on the top of the controller and slide it into place until it clicks securely. To remove, gently press the release button (if present) or slide it off in the opposite direction.



Figure 2.1: Controller with Phone Bracket Attached.

2.3. Bluetooth Pairing

The pairing process varies slightly depending on the operating system. Ensure the controller is charged before attempting to pair.

- Android/PC Mode: Press and hold the 'X' button + 'HOME' button simultaneously until the indicator light flashes rapidly. On your device, enable Bluetooth, search for "PG-9078" and select it to pair.
- iOS Mode: Press and hold the 'Y' button + 'HOME' button simultaneously until the indicator light flashes rapidly. On your iOS device, enable Bluetooth, search for "PG-9078" and select it to pair.
- **Direct Play Mode (Android/iOS):** For certain games, press and hold the 'A' button + 'HOME' button. This mode is designed for direct connection without mapping.
- **PC Wired Mode:** Connect the controller directly to your PC using the USB cable. The controller will be recognized as a standard gamepad.



Figure 2.2: Controller Paired with a Smartphone.

3. OPERATING INSTRUCTIONS

3.1. Controller Layout

Familiarize yourself with the buttons and controls of the PG-9078 controller:

- Left Analog Stick: Movement control.
- D-Pad (Directional Pad): Directional input.
- SELECT Button: Function varies by game/system.
- HOME Button: Power on/off, pairing mode, return to home screen.
- START Button: Function varies by game/system.
- Right Analog Stick: Camera control or secondary movement.
- Action Buttons (A, B, X, Y): Primary game actions.
- Shoulder Buttons (L1, R1): Top triggers.

• Trigger Buttons (L2, R2): Bottom triggers.



Figure 3.1: Front View of the Controller.

3.2. Gaming Experience

Once paired, the controller should be recognized by compatible games and applications. For optimal performance, ensure your device's operating system and game applications are up to date. Some games may require in-game controller settings adjustments.



Figure 3.2: Hands-on View of the Controller in Use.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, ensure the battery is partially charged (around 50%) to preserve battery health.
- Battery Care: Avoid fully discharging the battery frequently. Recharge the controller when the low battery indicator appears. Do not attempt to replace the internal battery yourself.

5. TROUBLESHOOTING

|--|

Problem	Possible Cause	Solution
Controller does not power on.	Low battery.	Charge the controller fully.
Cannot pair via Bluetooth.	Incorrect pairing mode; Bluetooth interference; device not discoverable.	Ensure correct pairing mode (Android/iOS) is selected. Turn off and on Bluetooth on your device. Move closer to the device. Try resetting the controller (if a reset button is available, usually a small pinhole).
Buttons are unresponsive or laggy.	Low battery; software conflict; distance from device.	Recharge the controller. Restart the game/device. Ensure no other Bluetooth devices are causing interference.
Controller disconnects frequently.	Low battery; distance from device; interference.	Charge the controller. Stay within effective Bluetooth range. Reduce wireless interference.

6. SPECIFICATIONS

• Model: PG-9078

• Connectivity: Bluetooth Wireless

• Compatibility: Android, iOS, Tablet, TV, PC

Input Voltage: DC5VInput Current: 500mAWorking Current: 30mA

• Manufacture: Made in China



Figure 6.1: Controller Back Panel with Specifications.

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2024 ipega. All rights reserved.

