

[Manuals.plus](#) /

› [Bsimb](#) /

› BSIMB Smart Digital Picture Frame User Manual

Bsimb W09 Plus

BSIMB Smart Digital Picture Frame User Manual

Model: W09 Plus

Brand: Bsimb

1. INTRODUCTION AND OVERVIEW

The BSIMB Smart Digital Picture Frame provides a modern way to display and share your cherished photos and videos. Featuring an 11-inch 1080P IPS touch screen, it allows for instant sharing via Wi-Fi, email, and dedicated apps. Its intuitive design and smart functionalities make it an ideal addition to any home.



Image: The BSIMB Smart Digital Picture Frame showcasing a vibrant family photo, highlighting its display quality and modern design.

2. PRODUCT FEATURES

- **Wireless Photo Uploading:** Send photos and videos directly from your phone or invite others to share content securely via app or email.
- **Stunning FHD IPS Display:** An 11-inch 1980 x 1280 IPS screen with a 3:2 aspect ratio ensures clear and crisp image presentation.
- **Touch Screen Interface:** Easily navigate settings and manage content directly on the screen.
- **Internal Storage:** Equipped with 32 GB internal storage, capable of holding approximately 80,000 photos.
- **Motion Sensor:** Built-in motion sensor automatically shuts down the frame when the room is empty to conserve energy.
- **Multi-functionality:** Includes features such as music playback, weather display, alarm, and calendar.
- **Dual Speakers:** Integrated dual speakers for audio playback with videos or music.

Stunning 1080P High-Resolution Display

11 Inch

Aspect Ratio 3:2

Dual Speakers

1920 x 1280



Image: Visual representation of the frame's 1080P high-resolution display and dual speakers, emphasizing its visual and audio capabilities.

3. PACKAGE CONTENTS

Please verify that all items are present in the package:

- BSIMB Smart Digital Picture Frame (Model W09 Plus)
- Power Adapter
- User Manual (this document)
- Stand (for tabletop display)

4. SETUP GUIDE

4.1 Initial Setup


1. **Power Connection:** Connect the power adapter to the frame and plug it into a power outlet. The frame will automatically power on.
2. **Language Selection:** Follow the on-screen prompts to select your preferred language.
3. **Wi-Fi Connection:** Select your 2.4GHz Wi-Fi network from the list and enter the password.*Note: This frame is not compatible with 5GHz Wi-Fi or hidden networks.*

4.2 App Download and Pairing

To share photos and videos wirelessly, download the VPhoto app on your smartphone (available for iOS and Android).


1. **Download App:** Search for "VPhoto" in your device's app store and install it.
2. **Create Account:** Open the VPhoto app and create a new user account.
3. **Pair Frame:** On the frame, navigate to Settings to find its unique Frame ID or QR code. In the VPhoto app, select the option to add a new frame and scan the QR code or manually enter the Frame ID.
4. **Approve Connection:** The frame will prompt you to approve the connection from the app. Confirm the pairing.

Just Three Steps to Get Started

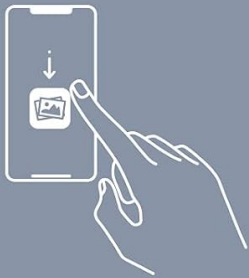

1

Download Vphoto app
and create an account

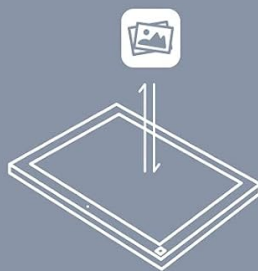

2

Easy setup to connect your
frame with app by scanning
QR code of a unique frame ID



3

Upload pictures &
videos via Wi-Fi,
Micro SD card and
PC

Image: A visual guide illustrating the three simple steps for initial setup and content uploading: app download, frame connection, and media transfer.

4.3 Uploading Photos and Videos

You can upload media to your frame using several methods:

- **Via VPhoto App:** Select photos/videos from your phone's gallery within the VPhoto app and send them directly to the frame.
- **Via Email:** The frame has a unique email address. You can send photos as attachments to this address. Ensure the subject line includes the frame ID for proper delivery.
- **Via Micro SD Card:** Insert a Micro SD card containing your media into the designated slot on the frame.
- **Via PC (USB):** Connect the frame to your computer using a microUSB/USB cable. The frame will appear as a removable drive, allowing you to drag and drop files into the DSIM folder.



BUY NOW



BUY NOW



BUY NOW



BUY NOW

Image: Various methods for uploading content to the frame, including Wi-Fi, email, Micro SD card, and PC connection.

5. OPERATING INSTRUCTIONS

5.1 Touch Screen Navigation

The frame features a responsive touch screen for easy navigation. Tap icons to select options, swipe to browse photos, and pinch to zoom (if supported by the current view).

5.2 Slideshow Settings

Customize your photo display experience:

- **Slideshow Duration:** Adjust the time each photo is displayed (e.g., 5 seconds to 5 minutes).
- **Transition Effect:** Choose from various transition styles between photos (e.g., fade, slide, random).
- **Play Order:** Set photos to play in sequential or random order.

5.3 Motion Sensor

The built-in motion sensor can be configured to automatically turn the screen on when motion is detected and off after a period of inactivity. This feature helps save energy.

- **Activation:** Enable or disable the motion sensor in the frame's settings.
- **Duration:** Set the inactivity period before the screen turns off (e.g., 30 seconds to 30 minutes).

5.4 Additional Functions

Beyond photo display, the frame offers integrated functionalities:

- **Music:** Play background music during slideshows or as a standalone feature.
- **Weather:** Display current weather conditions for your selected location.
- **Alarm:** Set alarms for reminders.
- **Calendar:** View the calendar and manage events.

Personalized Essential Functions

Easy to Use with Touch Screen



Text Captions



Slideshow



Weather



Music



Alarm



Calendar



Image: Icons illustrating the diverse functions of the digital frame, including text captions, slideshows, weather, music, alarm, and calendar.

5.5 Managing Photos and Videos

You can manage your stored media directly on the frame:

- **Delete:** Remove unwanted photos or videos.
- **Rotate:** Adjust the orientation of individual photos.
- **Organize:** Create albums or folders to categorize your media.

6. MAINTENANCE

6.1 Cleaning

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth

with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

6.2 Storage

When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect the power adapter before storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Incorrect Wi-Fi password; attempting to connect to 5GHz network; weak signal.	Double-check password. Ensure your router is broadcasting a 2.4GHz signal. Move the frame closer to the router.
Photos/videos not appearing.	Incorrect file format; app not paired correctly; storage full.	Verify media format (JPEG, PNG, MP4 are common). Re-pair the app if necessary. Check available storage on the frame.
Screen is unresponsive.	Temporary software glitch.	Restart the frame by unplugging and re-plugging the power adapter.
Videos do not play audio.	Volume is muted or too low.	Check the volume settings on the frame. Ensure the video file itself contains an audio track.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	12.6 x 10.2 x 3.3 inches
Item Weight	2.79 pounds
Model Number	W09 Plus
Resolution	1920x1280 (FHD)
Screen Size	11 Inches

Feature	Detail
Connectivity Technology	Wi-Fi (2.4GHz only)
Internal Storage	32 GB
Compatible Devices	Smartphone

9. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the BSIMB FHD WiFi digital picture frame, including its display capabilities and ease of use in various home settings.

10. WARRANTY AND SUPPORT

BSIMB offers a 1-year worry-free warranty for this product. For any technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact BSIMB customer service. Refer to the product packaging or the official BSIMB website for the most current contact information. Additionally, a 30-day money-back guarantee is provided from the date of purchase.