

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER dustbuster AdvancedClean+ Cordless Handheld Vacuum, Powerful 20V Home and Car Vacuum \(HHVK515J00FF\) 20V AdvancedClean](#)

BLACK+DECKER HHVK515J00FF

BLACK+DECKER dustbuster AdvancedClean+ Cordless Handheld Vacuum

Model: HHVK515J00FF | Brand: BLACK+DECKER

INTRODUCTION

The BLACK+DECKER dustbuster AdvancedClean+ Cordless Handheld Vacuum (Model HHVK515J00FF) is designed for optimal performance in tackling everyday messes. This portable, rechargeable, and lightweight vacuum offers powerful cleaning for both home and car environments. Its cyclonic action ensures strong suction by keeping the filter clean, making quick cleanups easy and efficient.

Key Features:

- **Optimal Performance:** 20V MAX* lithium-ion battery provides high suction power.
- **Cordless Convenience:** Portable, rechargeable, and lightweight for versatile use.
- **POWERBOOST Mode:** Offers increased power with the touch of a button.
- **Built-in Accessory:** Extendable crevice tool for hard-to-reach areas.
- **Cyclonic Action:** Keeps the filter clean and maintains strong suction.
- **Easy-to-Empty:** Translucent bowl and washable filter for simple maintenance.
- **Compact Design:** Easy to hold and store.

WHAT'S INCLUDED

Your BLACK+DECKER dustbuster AdvancedClean+ Cordless Handheld Vacuum package includes:

- HHVK515J00FF - Dustbuster Vacuum Unit
- Charging Adapter

SETUP

Initial Charge:

1. Unpack the vacuum and charging adapter from the box.
2. Connect the charging adapter to the charging port on the vacuum unit. The charging port is typically located near the handle.
3. Plug the charging adapter into a standard wall outlet.
4. Allow the vacuum to charge for approximately 4 hours for a full charge. The battery indicator lights will show charging progress and a solid light will indicate a full charge.

Ensure the vacuum is fully charged before its first use to maximize battery life and performance.



The BLACK+DECKER dustbuster charging on a countertop, indicating its cordless nature and ease of charging.

OPERATING INSTRUCTIONS

Powering On and Suction Modes:

- To turn on the vacuum, press the power button located on the handle. It will typically start in the standard suction mode.
- For increased suction power, press the POWERBOOST button (if available) or press the power button a

second time to activate a higher speed setting.

- To turn off the vacuum, press the power button again until the unit powers down.

Using the Extendable Crevice Tool:

- The integrated crevice tool can be extended for reaching tight spaces, corners, and high areas.
- Simply pull the nozzle forward to extend the tool. Push it back to retract when not needed.

2-speed modes with PowerBoost™ button



The BLACK+DECKER dustbuster with its key features labeled, highlighting the 2-speed modes and the extended crevice tool for versatile cleaning.



A man demonstrates the use of the extended crevice tool to clean a high shelf, showcasing its utility for hard-to-reach areas.

General Cleaning Tips:

- For optimal performance, ensure the dustbin is not overfilled and the filter is clean before each use.
- Move the vacuum slowly over surfaces to allow for thorough suction of debris.
- This vacuum is ideal for quick cleanups of dry debris on various surfaces including hard floors, carpets, upholstery, and inside vehicles.



HIGH CAPACITY
dustbin so you can clean longer

A woman uses the BLACK+DECKER dustbuster to efficiently clean crumbs from a wooden table, demonstrating its effectiveness on everyday messes.



The BLACK+DECKER dustbuster is shown cleaning pet food crumbs from a wooden floor, with a dog observing nearby, illustrating its use for pet-related messes.



A man uses the BLACK+DECKER dustbuster to clean the floor of a car, highlighting its portability and utility for vehicle cleaning.

MAINTENANCE

Emptying the Dustbin:

- The translucent dustbin allows you to easily see when it needs emptying.
- To empty, locate the release button or latch on the dustbin. Press it to open the dustbin flap.
- Hold the vacuum over a trash receptacle and shake out the collected debris.
- Close the dustbin flap securely until it clicks into place.



A woman demonstrates emptying the contents of the BLACK+DECKER dustbuster's translucent dustbin into a trash can, showing the easy-to-empty design.

Cleaning the Filter:

- The filter should be cleaned regularly to maintain optimal suction power.
- Open the dustbin and carefully remove the filter.
- Tap the filter gently over a trash can to dislodge loose dust and debris.
- For a more thorough cleaning, the filter is washable. Rinse it under running water until clean.
- Allow the filter to air dry completely before reinserting it into the vacuum. Do not use the vacuum with a wet filter.



A woman removes the filter from the BLACK+DECKER dustbuster for cleaning, illustrating the simple maintenance process.

TROUBLESHOOTING

If you experience any issues with your BLACK+DECKER dustbuster, please refer to the following general advice:

- **No Power:** Ensure the battery is fully charged. Check the charging adapter connection.
- **Reduced Suction:** Empty the dustbin and clean the filter. Check the nozzle for any blockages.
- **Unusual Noise:** Power off the vacuum and check for any foreign objects lodged in the nozzle or dustbin.

For more detailed troubleshooting or persistent issues, please consult the full user manual or contact customer support.

SPECIFICATIONS

Feature	Detail
---------	--------

Brand	BLACK+DECKER
Model Name	HHVK515J00FF
Special Feature	Bagless
Filter Type	Foam
Is Cordless?	Yes
Capacity	75 Milliliters
Wattage	35 watts
Runtime	1 hour and 43 minutes
Charging Time	4 Hours
Recommended Uses	Sofa, Hard Floor, Car, Upholstery, Carpet, Hardwood, Tile Floor
Form Factor	Handheld
Color	Black
Product Dimensions	15.88"L x 6.9"W x 8.05"H
Battery Description	Lithium-Ion
Noise Level	70 dB
Item Weight	2.4 pounds
Number of Speeds	2

WARRANTY & SUPPORT

This BLACK+DECKER dustbuster AdvancedClean+ Cordless Handheld Vacuum comes with a **2-year limited warranty**.

For detailed warranty information, safety guidelines, and comprehensive troubleshooting, please refer to the official User Manual (PDF) available for download:

[Download User Manual \(PDF\)](#)

For customer support, please visit the official BLACK+DECKER website or contact their customer service line.