

[Manuals.plus](#) /

- › [SM Entertainment](#) /
- › SM Entertainment EXO Official Lightstick Version 3 Instruction Manual

SM Entertainment EXO Official Lightstick ver 3

SM Entertainment EXO Official Lightstick Version 3 Instruction Manual

1. PRODUCT OVERVIEW

The EXO Official Lightstick Version 3 is a fanlight designed for use at EXO concerts and events. It features multiple lighting modes and can be synchronized via Bluetooth with a dedicated application for enhanced fan experience.



Image 1: EXO Official Lightstick Version 3.

Product Composition:

- Official Lightstick
- Hand Strap
- 1 Hologram Big Sticker
- Instruction Manual

PRODUCT COMPOSITION



Image 2: Contents included with the EXO Official Lightstick Version 3, showing the lightstick, hand strap, sticker, and manual.

Key Features:

- **ADDRESS LED:** Features individually controllable LEDs for diverse effects and animations.
- **Controllable Bluetooth Mode:** Enables control via a dedicated application, especially for concert seat registration and real-time light synchronization.
- **Battery Pack Compatibility:** Compatible with a USB rechargeable battery pack (sold separately).
- **Customizable Accessories:** The lightstick can be customized with dedicated accessories by removing the silicone behind the button (accessories sold separately, to be released later).

EXO 공식 응원봉 VER 3.0



Image 3: Detailed diagram of the lightstick's features.


2. SETUP

2.1 Battery Installation

The EXO Official Lightstick Version 3 requires 3 AAA alkaline batteries (not included). Follow these steps for proper installation:

1. Twist the bottom cap of the lightstick counter-clockwise to open the battery compartment.
2. Insert three AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Twist the bottom cap clockwise to securely close the battery compartment.

건전지 삽입 및 교체

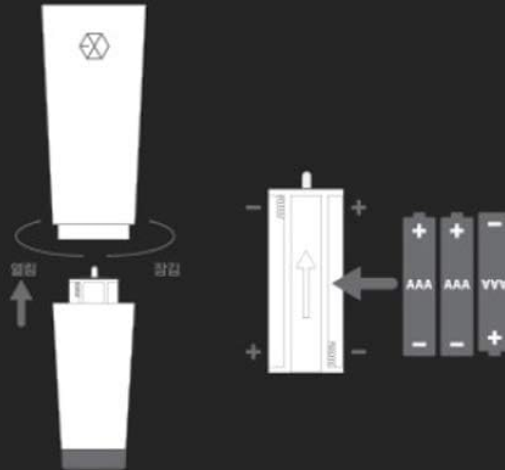

※ 건전지가 저전압일 경우 전원이 자동으로 꺼지오니 바로 새 건전지로 교체해주세요.

Image 4: Battery insertion and replacement guide.

Caution: If the batteries are low, the power will automatically turn off. Please replace with new batteries immediately.

2.2 Hand Strap Attachment

Attach the included hand strap to the designated loop at the bottom of the lightstick handle for secure holding during use.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off and Light Modes

Press the power button located on the handle to cycle through various light modes. Each short press changes the mode in the following sequence:

1. Power On
2. EXO Lighting (Static White Light)
3. EXO Quick Blink (Rapid Flashing)
4. EXO Animation (E.X.O. pattern animation)
5. EXO Gradation (Color fading effect)



LIGHT MODE

버튼을 짧게 누를 때마다 라이트가 변경되는 일반 모드입니다.

*라이트 변경 순서

전원 On → EXO Lighting → EXO Quick blick
EXO Animation(E.X.O) → EXO gradation → 전원 Off

Image 5: Light Mode demonstration.



Image 6: Detailed sequence of light modes.

3.2 Bluetooth Mode and App Control

The Bluetooth mode is primarily used for concert seat registration and advanced control via a dedicated application. To activate Bluetooth mode:

1. With the power on, press and hold the button for 5 seconds. The lightstick will enter Bluetooth mode, indicated by a blue light animation.
2. Use the official SM Entertainment application to connect to your lightstick and customize colors or synchronize with concert effects.
3. To exit Bluetooth mode, press and hold the button for 5 seconds again, or remove and reinsert the batteries.

BLUETOOTH MODE

블루투스 모드는 전용 어플리케이션을 이용하여
좌석 등록을 할 때만 사용하는 모드입니다.



전원이 켜진 상태에서 버튼을 5초간 길게 누르면
위 그림과 같이 파란 빛이 움직입니다.
블루투스 모드에서 버튼을 5초간 길게 누르거나 배터리를 분리 후
다시 장착하면 일반 모드로 돌아갑니다.

※ 좌석 연동을 위한 전용 어플리케이션은 공연 전 공개 예정입니다.

Image 7: Bluetooth Mode explanation.

Video 1: Demonstration of the EXO Lightstick changing colors when connected to the SM app, showcasing various customization options.

4. MAINTENANCE

4.1 Cleaning

To clean your lightstick, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the product.

4.2 Storage

Store the lightstick in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

5.1 Lightstick Not Turning On

- Ensure that three fresh AAA alkaline batteries are correctly installed with the proper polarity.
- Check if the battery compartment cap is securely closed.
- If the lightstick still does not turn on, try replacing the batteries with a new set.

5.2 Colors Not Changing / Bluetooth Connectivity Issues

- Ensure the lightstick is in Bluetooth mode (long press the power button for 5 seconds).
- Verify that the official SM Entertainment application is installed on your mobile device and that Bluetooth is enabled.
- Follow the pairing instructions within the application to connect your lightstick.
- If at a concert, ensure your lightstick is registered with the concert's central control system via the app.

6. SPECIFICATIONS

Feature	Detail
Product Name	EXO Official Light Stick ver 3
Brand	SM Entertainment
Material	Paper, Polycarbonate
Size (L x W x H)	101.1 x 276 x 57.5 mm
Power Source	3 x AAA Batteries
Manufacturing Year	2019.06
UPC	718913426526
ASIN	B07T1DYNRT
Item Weight	0.4 Pounds

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for the EXO Official Lightstick Version 3 should be obtained from your point of purchase or the official SM Entertainment website. Please retain your proof of purchase for any warranty claims.

7.2 Customer Support

For further assistance, technical support, or inquiries regarding your lightstick, please refer to the official SM Entertainment customer service channels or visit their official website for contact information.

