



Manuals.plus /

- › **DYON** /
- › DYON Live 22 Pro HD+ Edition User Manual

DYON D800139

DYON Live 22 Pro HD+ Edition User Manual

Model: D800139

1. INTRODUCTION

The DYON Live 22 Pro HD+ Edition combines a compact design, sophisticated technology, and efficiency. Intuitive operation and a clear menu are also a given for the DYON Live 22 Pro HD+ Edition. Brilliant colors and sharp images are the result of the most modern LED technology. The triple tuner integrated into the DYON Live 22 Pro HD+ Edition processes digital reception signals serially via antenna (DVB-T2), as well as in high definition via satellite (DVB-S2) and cable (DVB-C). The DYON Live 22 Pro HD+ Edition always offers the best possible image depending on the type of reception. For receiving pay TV programs, the DYON Live 22 Pro HD+ Edition has a CI+ interface and avoids additional costs for another receiver.



Figure 1.1: The DYON Live 22 Pro HD+ Edition television, showcasing its display with a sports broadcast and an advertisement for the included HD+ module, highlighting its features and channel package.

2. SETUP

2.1 Unpacking and Inspection

Carefully remove the TV from its packaging. Inspect the TV and all accessories for any signs of damage. Keep the packaging materials for future transport or if service is required.



Figure 2.1: Front view of the DYON Live 22 Pro HD+ Edition TV packaging box, displaying the product image and branding.



Figure 2.2: Rear view of the DYON Live 22 Pro HD+ Edition TV packaging box, showing various specifications and connection details in multiple languages.

2.2 Attaching the Stand

Place the TV screen-down on a soft, clean surface. Attach the included stand to the bottom of the TV using the provided screws. Ensure the stand is securely fastened.

2.3 Connecting Cables

Connect the necessary cables to your TV:

- **Power Cable:** Connect the power cable to the TV's power input and then to a wall outlet.
- **Antenna/Cable/Satellite:**
 - For DVB-T2 (Antenna): Connect your terrestrial antenna cable to the "ANT IN" port.
 - For DVB-S2 (Satellite): Connect your satellite dish cable to the "SAT IN" port.
 - For DVB-C (Cable): Connect your cable TV signal to the "ANT IN" port.
- **External Devices:** Use HDMI ports for devices like Blu-ray players, game consoles, or set-top boxes. Use the USB port for media playback.
- **CI+ Module:** If you have a CI+ module for pay TV, insert it into the CI+ slot.

2.4 Initial Power On and Channel Scan

After connecting all cables:

1. Press the power button on the TV or remote control to turn on the TV.
2. The TV will guide you through the initial setup process, including language selection and country.
3. Select your preferred reception type (Antenna, Satellite, or Cable) and initiate an automatic channel scan. This process may take several minutes.
4. Once the scan is complete, your TV is ready for use.

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

- **Power On/Off:** Use the **Power** button on the remote or TV.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons.
- **Channel Change:** Use the **CH+** and **CH-** buttons or numeric keypad.
- **Input Selection:** Press the **SOURCE** or **INPUT** button to switch between HDMI, USB, DVB-T2, DVB-S2, DVB-C.
- **Menu Navigation:** Use the **MENU** button to access settings. Use arrow keys (▲ ▼ ◀ ▶) to navigate and **OK** to confirm.

3.2 Advanced Features

- **Triple Tuner (DVB-T2 H.265/HEVC, DVB-S2, DVB-C):** The integrated triple tuner allows you to receive digital television signals via terrestrial antenna, satellite, or cable without the need for an external receiver. Ensure the correct input source is selected.
- **CI+ Interface:** Insert your CI+ module and corresponding smart card into the CI+ slot to decrypt and view encrypted pay TV channels. Follow the instructions provided with your CI+ module.
- **USB Media Playback:** Connect a USB storage device (e.g., USB flash drive) to the USB port. Use the media player function in the TV menu to browse and play compatible audio, video, and image files.
- **Full HD Resolution:** Enjoy crisp and clear images with Full HD (1920x1080) resolution.

4. MAINTENANCE

4.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents.

4.2 General Care

- Ensure proper ventilation around the TV to prevent overheating.
- Avoid exposing the TV to direct sunlight, extreme temperatures, or high humidity.
- Do not place heavy objects on top of the TV.
- Unplug the TV from the power outlet during lightning storms or when it will be unused for extended periods.

5. TROUBLESHOOTING

Before contacting support, please refer to the following common issues and solutions:

Problem	Possible Cause / Solution
No picture, but sound is present.	Check if the correct input source is selected (e.g., HDMI, DVB-T2). Ensure all cables are securely connected. Try another channel or input source.
No sound, but picture is present.	Check the volume level and ensure the TV is not muted. If using external audio devices, check their connections and settings. Try another channel or input source.
Remote control not working.	Check and replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor. Point the remote directly at the TV.
"No Signal" message.	Verify the antenna/cable/satellite connection. Ensure the correct input source is selected. Perform a channel scan again.

6. SPECIFICATIONS

Feature	Detail
Brand	DYON
Model Number	D800139
Screen Size	21.5 Inches (54.6 cm)
Display Technology	LED
Resolution	1080p (Full HD, 1920 x 1080)
Aspect Ratio	16:9
Brightness	180 cd/m ²
Contrast Ratio	3000:1
Response Time	5 ms
Special Features	Full HD
Connectivity Technology	USB
Connections	USB, CI+
Tuner Type	Triple Tuner (DVB-T2 H.265/HEVC, DVB-S2, DVB-C)
Mounting Type	Table Mount

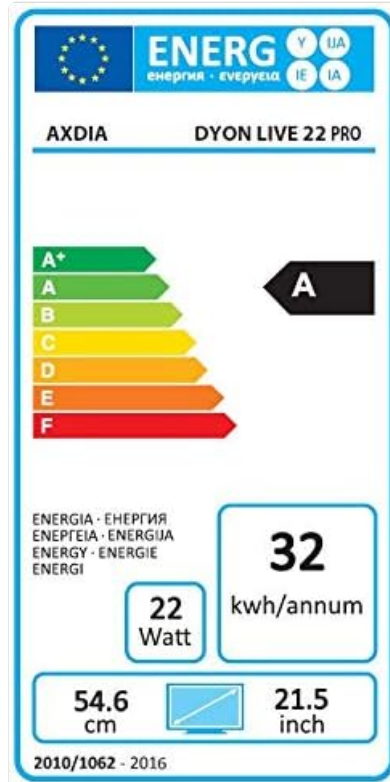


Figure 6.1: Energy efficiency label for the DYON Live 22 Pro, indicating an energy class of A and an annual consumption of 32 kWh.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details are typically provided with your purchase documentation or on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

Note: Information regarding spare parts availability and software updates is not available in the provided product data.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact DYON customer support. Refer to the contact information provided in your product packaging or on the official DYON website.

You can often find support resources, FAQs, and driver downloads on the manufacturer's website. It is recommended to check for the latest software updates to ensure optimal performance.