

EasyAcc FNHD

EasyAcc Portable Handheld Fan

Model: FNHD
Brand: EasyAcc

1. INTRODUCTION

Thank you for purchasing the EasyAcc Portable Handheld Fan, Model FNHD. This fan is designed to provide a refreshing breeze with its powerful yet quiet operation, long-lasting battery, and versatile foldable design. Please read this manual carefully before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW

2.1 Key Features

- **4000mAh High Capacity Battery:** Provides 5-23 hours of continuous operation depending on speed setting.
- **3 Adjustable Wind Speeds:** High, medium, and low settings for personalized comfort.
- **Low Noise Operation:** Brushless motor ensures quiet performance, as low as 20-30 dB at speed 1.
- **Foldable and Portable Design:** Functions as both a handheld and a desktop fan. Compact size for easy carrying.
- **3 LED Power Indicators:** Clearly displays remaining battery life.

2.2 Package Contents

- EasyAcc Portable Handheld Fan (Model FNHD)
- USB Charging Cable
- User Manual

Charging Indicator



Image: The EasyAcc Portable Handheld Fan in its standard white color.

Enjoy a Cool Breeze Everywhere



Image: A visual representation of the fan's compact size compared to a smartphone, and various usage scenarios including outdoor, bus, shopping, and hiking.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB charging cable to the fan's charging port and to a compatible USB power source (e.g., wall adapter, computer USB port, power bank). The LED indicators will flash during charging and remain solid when fully charged.

3.2 Folding and Unfolding

The fan features a foldable handle for versatile use:

- **Handheld Mode:** Keep the handle extended for portable use.
- **Desktop Mode:** Fold the handle back to create a stable base, allowing the fan to stand on a flat surface.

Mini USB Fan

iPhone X



Image: The fan positioned on a flat surface, demonstrating its use as a desk fan with the handle folded.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Speed Adjustment

Locate the power button on the handle of the fan.

1. **To Turn On:** Press the power button once. The fan will start at Speed 1 (low).
2. **To Adjust Speed:** Press the power button repeatedly to cycle through Speed 2 (medium), Speed 3 (high), and then off.
3. **To Turn Off:** After Speed 3, pressing the button again will turn the fan off.

4.2 LED Power Indicator

The fan is equipped with three LED lights that indicate the remaining battery power:

- **3 Lights On:** Approximately 100% battery remaining.
- **2 Lights On:** Approximately 60% battery remaining.
- **1 Light On:** Approximately 30% battery remaining. Recharge the fan soon.

EasyAcc
USB Battery Handheld Fan



3-speed lasts up to 23h

	SPEED 1	 23h
	SPEED 2	 8h
	SPEED 3	 5h



Built-in rechargeable fan

Image: Close-up view of the fan's handle showing the power button and the three LED battery indicators, with explanations for each light status.

5. CHARGING INSTRUCTIONS

To charge your EasyAcc Portable Handheld Fan:

1. Connect the small end of the USB charging cable to the charging port on the fan's handle.
2. Connect the larger end of the USB cable to a power source.
3. The LED indicators will flash while charging. Once fully charged, all three LED lights will remain steadily lit.

5.1 Compatible Charging Methods

The fan can be charged using various USB power sources:

- Car USB port
- Multi-USB wall adapter
- Laptop USB port
- Portable power bank

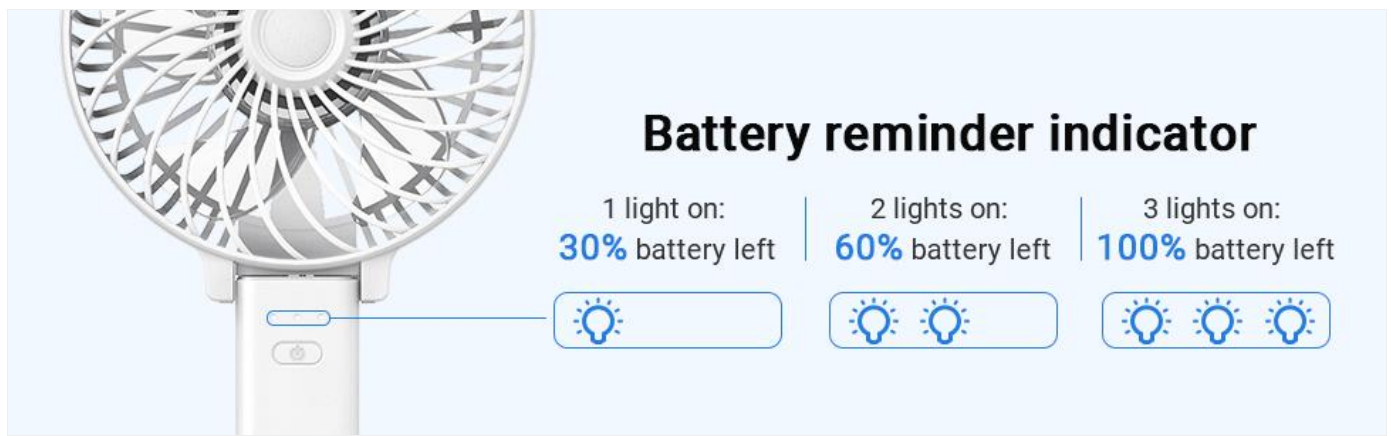


Image: Illustrations showing various methods to charge the fan, including car USB, multi-USB plug, laptop, and power bank.

6. MAINTENANCE

6.1 Cleaning the Fan

To maintain optimal performance and hygiene, regularly clean your fan. The front fan cover is removable for easy cleaning:

1. Ensure the fan is turned off and disconnected from any power source.
2. Gently twist or unclip the front fan cover to remove it.
3. Wipe the fan blades and the inside of the cover with a soft, damp cloth. For stubborn dust, a mild soap solution can be used, followed by a clean damp cloth.
4. Allow all parts to dry completely before reattaching the cover.

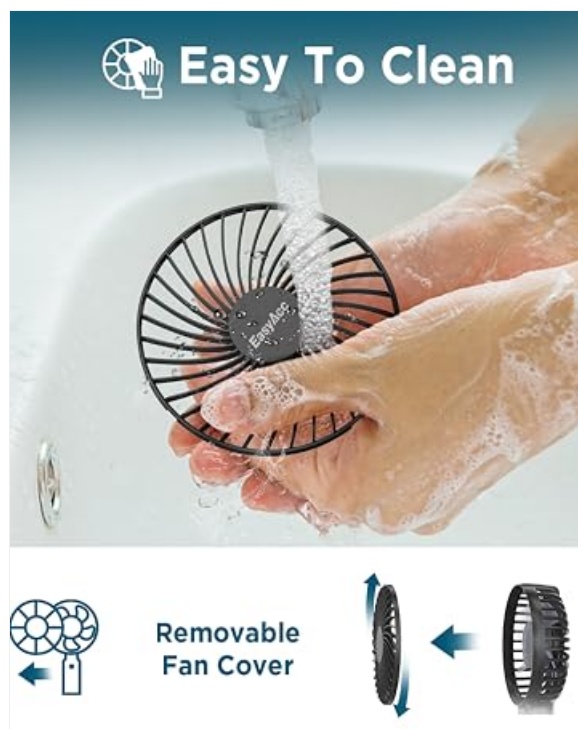


Image: A person cleaning the fan blades after removing the front cover, illustrating the easy-to-clean design.

6.2 Storage

When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the fan is fully charged before storing to prolong battery life.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Fan does not charge.	Charging cable is loose or damaged.	Check cable connection; try a different USB cable.
	Power source is faulty.	Try a different USB power adapter or port.
Weak airflow.	Fan blades are dirty.	Clean the fan blades as per Maintenance section.
	Battery is low.	Recharge the fan.

8. SPECIFICATIONS

Brand	EasyAcc
Model Number	FNHD
Color	White
Power Source	Battery Powered
Battery Capacity	4000mAh
Working Time	5-23 hours (depending on speed)
Number of Speeds	3
Noise Level	25 Decibels (at lowest speed)
Wattage	4 watts
Voltage	5 Volts
Product Dimensions (D x W x H)	1.8" x 2.6" x 5.5"
Item Weight	0.19 Kilograms
Material	Plastic

9. SAFETY INFORMATION

Please observe the following safety precautions:

- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water and moisture. Do not use in wet environments.
- Do not disassemble or attempt to repair the fan yourself. Contact customer support for assistance.
- Keep out of reach of children.
- Use only the provided USB cable or a certified equivalent for charging.
- Avoid exposing the fan to extreme temperatures or direct sunlight for prolonged periods.

10. WARRANTY AND SUPPORT

10.1 Lifetime Warranty

EasyAcc provides a lifetime warranty for this product, reflecting our commitment to quality and customer satisfaction. This warranty covers manufacturing defects and ensures reliable performance.

10.2 Customer Support

For any questions, concerns, or warranty claims, please contact EasyAcc customer support through the retailer's platform or visit the official EasyAcc website for contact information. Please have your product model number (FNHD) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07T28LLT2>

More documents and user manuals: <https://manuals.plus/>