

[Manuals.plus](#) /

› [Easyfone](#) /

› Easyfone T6 4G Unlocked Picture Buttons Mobile Phone User Manual

Easyfone T6 Black

Easyfone T6 4G Unlocked Picture Buttons Mobile Phone User Manual

Model: T6 Black

INTRODUCTION

The Easyfone T6 is designed for simplicity and ease of use, making it ideal for individuals who require a straightforward mobile communication device. Its key features include large picture buttons for direct dialing, clear sound, an SOS emergency button, and a convenient charging dock. This manual provides detailed instructions to help you set up, operate, maintain, and troubleshoot your Easyfone T6 phone.

SETUP

1. Package Contents

Before you begin, please ensure all items are present in the package:

- Easyfone T6 Mobile Phone
- User Manual
- USB Cable
- Charger
- 1050mAh Lithium Ion Battery
- Easy Charging Dock
- Picture Cutting Adapter for Buttons
- Neck Lanyard



Image: All components included in the Easyfone T6 package.

2. Battery and SIM Card Installation

To install the battery and SIM card:

1. Gently pry off the back cover of the phone.
2. Insert the 1050mAh Lithium Ion battery into its compartment, ensuring the gold contacts align.
3. Locate the Nano SIM card slot. Insert your activated Nano SIM card into the designated slot. Ensure it is correctly oriented.
4. Replace the back cover, pressing firmly until it clicks into place.



Image: View of the Easyfone T6's internal compartment for battery and SIM card installation.

3. Initial Charging

Before first use, fully charge the phone. Place the phone into the Easy Charging Dock or connect the USB cable directly to the phone and a power source using the provided charger. The battery indicator on the screen will show charging status. A full charge ensures optimal battery performance.



Image: The Easyfone T6 phone securely seated in its charging dock.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the red 'NO' button (power button) until the screen illuminates.
- **To Power Off:** Press and hold the red 'NO' button until the power off option appears, then confirm.

2. Making Calls with Picture Buttons

The Easyfone T6 features four large picture buttons (A, B, C, D) for quick dialing of frequently contacted numbers. You can insert small photos or names under the clear covers of these buttons.

1. **Programming Picture Buttons:** Refer to the detailed user manual included in your package for instructions on how to assign contacts to these buttons. This typically involves navigating the phone's menu.
2. **Making a Call:** Simply press the desired picture button (A, B, C, or D) corresponding to the contact you wish to call. The phone will automatically dial the programmed number.



Image: Close-up of the Easyfone T6's picture buttons, designed for easy contact identification.

3. Receiving Calls

When an incoming call is received, the phone will ring and display the caller ID (if available).

- **To Answer:** Press the green 'YES' button.
- **To End Call:** Press the red 'NO' button.

4. SOS Emergency Button

The SOS button is a critical safety feature. In an emergency, pressing and holding this button will initiate an automatic dialing sequence to pre-programmed emergency contacts. The phone will loop through these contacts until a call is answered.

- **Programming SOS Contacts:** Ensure emergency contacts are set up in the phone's settings. It is recommended to include emergency services (e.g., 911) if applicable and family members.
- **Activating SOS:** Press and hold the dedicated SOS button, typically located on the side or back of the phone, for a few seconds until the emergency sequence begins.



Image: The SOS button on the side of the Easyfone T6, designed for quick access in emergencies.

5. Volume Control and Sound Quality

The Easyfone T6 is designed to provide clear and loud sound for calls. It is also Hearing Aid Compatible (HAC) for users with hearing aids. Adjust call volume during a conversation using the up/down navigation buttons.

6. Flashlight Function

The phone includes a built-in flashlight. It can be activated or deactivated using a dedicated slider switch, typically located on the side of the device.

MAINTENANCE

1. Cleaning Your Phone

To keep your Easyfone T6 clean and functional:

- Use a soft, dry, lint-free cloth to wipe the screen and body of the phone.
- Avoid using harsh chemicals, cleaning solvents, or abrasive materials.
- Do not expose the phone to excessive moisture.

2. Battery Care

To prolong the life of your Lithium Ion battery:

- Avoid extreme temperatures.
- Do not leave the phone uncharged for extended periods.
- Use only the provided charger and charging dock.

3. Storage

If storing the phone for an extended period, ensure it is partially charged (around 50%) and stored in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on.	Low battery; Battery not installed correctly.	Charge the phone; Reinstall the battery.
Cannot make or receive calls.	No SIM card; SIM card not activated; No network signal.	Ensure SIM is installed and activated; Check network coverage.
Microphone not working.	Software glitch; Hardware issue.	Restart the phone; Perform a factory reset (consult manual); Contact support if issue persists.
Loud notification sound when fully charged.	Default setting.	This is a known characteristic; future software updates may offer an option to disable it.
Picture buttons not dialing.	Numbers not programmed; Incorrect programming.	Verify programmed numbers in settings; Reprogram if necessary.
Flashlight stuck on/off.	Slider switch position.	Ensure the flashlight slider switch on the side of the phone is in the correct position.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Easyfone
Model	Prime-A5 (also known as Prime-A6)
Operating System	Nucleus OS
Cellular Technology	4G
Display Size	1.8 Inches
Resolution	128 x 160
Memory Storage Capacity	1 GB
Flash Memory Installed Size	256 MB
Removable Memory	MicroSD
Battery Capacity	1050 Milliamp Hours (Lithium Ion)
Product Dimensions	13 x 5.8 x 1.4 cm; 78 g
Special Features	Basic Phone, Hearing aid compatible, Picture Dial Button, SOS Emergency Button, Charging Station
Human Interface Input	Keyboard
Compatible Carriers	Unlocked for All Carriers (e.g., Telus, Rogers, Bell, Koodo, Fido, Freedom, Virgin Mobile, Chatr, Public Mobile, Lucky Mobile)

WARRANTY AND SUPPORT

Warranty Information

For specific warranty details, please refer to the warranty card or documentation included with your purchase. Warranty terms may vary based on region and retailer.

Customer Support

If you encounter issues not covered in this manual or require further assistance, please contact Easyfone customer support. Contact information is typically provided in the product packaging or on the official Easyfone website. Be prepared to provide your product model and purchase details.