

[Manuals.plus](#) /

› [Easyfone](#) /

› Easyfone T6 4G Picture Button Cell Phone User Manual

Easyfone T6

Easyfone T6 4G Picture Button Cell Phone User Manual

Model: T6 | Brand: Easyfone

1. INTRODUCTION

The Easyfone T6 is designed for simplicity and ease of use, making it ideal for seniors and children. Its key features include large picture buttons for direct dialing, a clear sound speaker, an SOS emergency button, and a convenient charging dock. This manual provides detailed instructions to help you get the most out of your Easyfone T6.



Figure 1.1: Easyfone T6 on its charging dock, highlighting the large picture buttons.

2. WHAT'S IN THE BOX

Please check the contents of your Easyfone T6 package:

- Easyfone T6 Phone
- USB Cable
- Charging Dock
- User Manual
- SIM Card (SpeedTalk)
- Picture Cutting Adapter for Buttons
- Neck Lanyard



Figure 2.1: All items included in the Easyfone T6 product package.

3. PRODUCT OVERVIEW

3.1. Phone Layout



Figure 3.1: Front view of the Easyfone T6, showing the display, navigation buttons, and large picture buttons.

- **Display Screen:** Shows time, date, signal strength, battery level, and menu options.
- **YES/Green Button:** Answer calls, confirm selections.
- **NO/Red Button:** End calls, go back, cancel selections.
- **MENU/Navigation Buttons:** Access menu, navigate options.
- **Picture Buttons (A, B, C, D):** Customizable buttons for direct dialing contacts.

- **SOS Button (Rear):** For emergency calls and alerts.
- **Flashlight (Top):** Provides illumination.
- **Volume Control (Side):** Adjust call and ringtone volume.



4. SETUP

4.1. Inserting the SIM Card

The Easyfone T6 uses a Nano SIM card. A SpeedTalk SIM card is included in your package. To insert the SIM card:

1. Remove the back cover of the phone by firmly pushing down on the arrow indicator at the bottom of the back cover and sliding it off.
2. Locate the SIM card slot, usually beneath the battery.
3. Insert the Nano SIM card into the designated slot, ensuring the gold contacts face down and the notched corner aligns correctly.
4. Insert the battery.
5. Replace the back cover by aligning it and sliding it upwards until it clicks into place.

4.2. Charging the Phone

The Easyfone T6 can be charged using the included charging dock or directly via the USB-C port.

- **Using the Charging Dock:** Connect the USB cable to the charging dock and a power adapter. Place the phone into the dock, ensuring the charging contacts align. The phone will indicate charging.
- **Direct Charging:** Connect the USB cable directly to the USB-C port on the phone and a power adapter.



Figure 4.1: Easyfone T6 placed in its charging dock for convenient charging.

4.3. Adding Picture Contacts

The Easyfone T6 allows you to assign photos to the four large picture buttons (A, B, C, D) for quick dialing. You will need to print and cut photos using the provided adapter.

1. Prepare photos of your family or friends. Use the picture cutting adapter to cut them to the correct size.
2. Open the transparent cover on each picture button.
3. Insert the cut photo into the button slot and close the cover.
4. To assign a phone number to a picture button:
 - Press the **MENU** button.
 - Navigate to 'Contact' and press **YES**.
 - Select the desired picture button (A, B, C, or D) and press **YES**.
 - Input the phone number using the numeric keypad.
 - Press **SAVE** to confirm.



Figure 4.2: Customizing picture buttons with photos for easy contact identification.

Video 4.1: Easyfone T6: How to add a phone number to a picture button. This video demonstrates the process of assigning contact numbers to the customizable picture buttons.

5. OPERATING INSTRUCTIONS

5.1. Making Calls

- **Using Picture Buttons:** Long press any of the four picture buttons (A, B, C, D) to directly dial the assigned contact.
- **Using Dial Pad:** Press the **MENU** button, navigate to 'Tools', then 'Dial pad'. Use the navigation buttons to select numbers and press **YES** to dial.

Video 5.1: Easyfone T6: How to use the Dial Pad function for making phone calls. This video guides users through dialing numbers not assigned to picture buttons.

5.2. Receiving Calls

When the phone rings, press the **YES** (green) button to answer the call. Press the **NO** (red) button to reject or end a call.

5.3. SOS Emergency Function

The SOS button on the back of the phone is designed for emergencies. When activated, it will sound a loud alarm and automatically dial pre-set emergency contacts in a loop until a call is answered. It also sends a text message to all pre-set contacts.



Figure 5.1: The dedicated SOS button for emergency situations.

5.4. Flashlight Function

The Easyfone T6 includes a built-in flashlight at the top of the device. To activate or deactivate the flashlight, navigate to 'Tools' in the menu and select 'Torch'.

5.5. Volume Control

Adjust the call and ringtone volume using the dedicated volume buttons on the side of the phone. The phone features a powerful speaker for clear and loud sound, suitable for users with hearing impairments (HAC Compatible).



Figure 5.2: The Easyfone T6 is HAC compatible, providing clear sound for users with hearing aid devices.

6. MAINTENANCE

6.1. Battery Care

- Charge the battery regularly, even if the phone is not in frequent use, to maintain battery health.
- Avoid exposing the battery to extreme temperatures.
- Use only the original Easyfone charger and cable.

6.2. Cleaning

Wipe the phone with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

7. TROUBLESHOOTING

- **Phone not turning on:** Ensure the battery is properly inserted and charged.
- **No signal:** Check if the SIM card is correctly inserted. Ensure you are within network coverage. This phone works with T-

Mobile, SpeedTalk, and Tello Mobile. It is NOT compatible with AT&T, Cricket, or any CDMA Networks like Verizon, Sprint, and Boost Mobile.

- **Cannot make/receive calls:** Verify SIM card activation with your carrier. Check network signal strength.
- **SOS button not working:** Ensure emergency contacts are correctly programmed in the phone's settings.
- **Sound issues:** Adjust volume using side buttons. Ensure speaker is not obstructed.

8. SPECIFICATIONS

Feature	Specification
Product Dimensions	4.57 x 2.05 x 0.56 inches
Item Weight	2.12 ounces
Item Model Number	T6
Batteries	1 Lithium Ion batteries required.
Operating System	Nucleus OS
RAM	1 GB
Wireless Communication Technologies	Cellular (4G)
Connectivity Technologies	USB
Special Features	Powerful Speaker, Big Picture Buttons, SIM Card Included, Easiest-to-Use, Charging Station
Human Interface Input	Buttons
Battery Power Rating	1050 Milliamp Hours
Phone Talk Time	6 Hours
Screen Size	1.8 Inches

9. WARRANTY AND SUPPORT

For any questions regarding product compatibility, technical support, or warranty claims, please contact the seller, FamFun Direct, through the Amazon platform. Refer to your purchase details for specific warranty terms.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I remove the back cover of the Easyfone T6 phone if it is stuck?

To remove the back cover of the Easyfone T6, follow these steps based on the user manual: Locate the arrow indicator at the bottom of the back cover. Apply firm pressure downward on the arrow indicator. While...

[Read full answer](#)