

Fossil BQ2365

Fossil Fenmore Midsize Multifunction Watch BQ2365 User Manual

Model: BQ2365

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Fossil Fenmore Midsize Multifunction Watch, Model BQ2365. Please read this guide thoroughly to ensure proper use and care of your timepiece. The Fossil Fenmore Midsize Multifunction Watch, Model BQ2365, is a sophisticated timepiece featuring a black IP stainless steel band and case, complemented by a scratch-resistant mineral crystal. Its black dial houses a quartz multifunction movement, offering chronograph capabilities with sub-dials for measuring seconds, minutes, and hours.

SETUP

1. Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch case) to position 2 for setting the date, or position 3 for setting the time.
2. **Adjust the time/date:** Rotate the crown to set the desired time or date. For time, ensure you distinguish between AM and PM if your watch has a date function that changes at midnight.
3. **Push in the crown:** Once set, push the crown back into position 1 to start the watch and seal it against water.

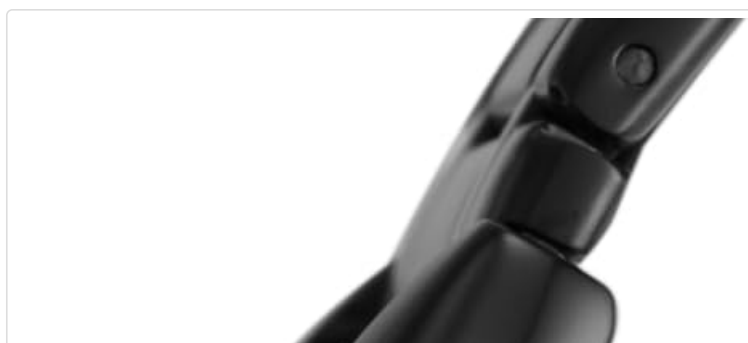




Image: Side view of the watch, illustrating the crown and pushers used for setting time and operating chronograph functions.

2. Adjusting the Watch Band

The stainless steel bracelet can be adjusted by adding or removing links to fit your wrist size. This procedure typically requires specialized tools and is best performed by a professional jeweler. However, if you have the correct tools, you can perform it yourself by carefully pushing out the pins that hold the links together.



Image: Diagram illustrating the recommended wrist size range (6-7 inches) for optimal fit of the watch.



Case Material
Stainless Steel



Strap Material
Stainless Steel

Image: Detailed diagram displaying the watch's dimensions, including a 44mm case size, 22mm strap/lug width, and 12mm case thickness.

OPERATING THE MULTIFUNCTION CHRONOGRAPH

Your Fenmore watch is equipped with a quartz multifunction movement, featuring chronograph capabilities. This allows for precise time measurement beyond standard timekeeping.

Chronograph Functions:

- **Start/Stop:** Press the top pusher (button) to start the chronograph. Press it again to stop the measurement.
- **Reset:** With the chronograph stopped, press the bottom pusher to reset all chronograph hands back to their zero positions.
- **Sub-dials:** The watch features two or three sub-dials that typically measure elapsed seconds, minutes, and sometimes hours, depending on the specific movement. Refer to the watch face for specific markings.







Image: Side view of the watch, highlighting the pushers located above and below the crown, which are used to control the chronograph start, stop, and reset functions.

MAINTENANCE AND CARE

Water Resistance

Your watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged to prevent water intrusion.

Cleaning

To maintain the appearance of your watch, regularly wipe the case and band with a soft, damp cloth. For stainless steel bands, a mild soap solution can be used, followed by thorough rinsing and drying. Avoid harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by one product-specific battery (included). When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Crystal Care

The watch features a scratch-resistant mineral crystal. While durable, it is not entirely impervious to scratches. Avoid contact with sharp or abrasive surfaces to preserve its clarity.

TROUBLESHOOTING

- **Watch Not Running:**
 - Check if the crown is fully pushed in to position 1.
 - The battery may be depleted. Refer to the "Battery Replacement" section.
- **Incorrect Time/Date:**
 - Ensure the crown is not accidentally pulled out.
 - Reset the time and date as described in the "Setting the Time and Date" section.
- **Chronograph Hands Not Resetting to Zero:**
 - Ensure the chronograph is stopped before attempting to reset.
 - If the issue persists, a professional adjustment may be required.

SPECIFICATIONS

DIAL SIZE guide



Image: Visual guide illustrating the 44mm dial diameter in comparison to common objects like a coin and a credit card for scale.

Feature	Detail
Brand	Fossil
Model Name	Fenmore Midsize
Model Number	BQ2365
Movement Type	Quartz Multifunction
Display Type	Analog-Digital
Case Material	Stainless Steel
Case Diameter	44 Millimeters
Case Thickness	12 Millimeters
Band Material	Stainless Steel
Band Width	22 Millimeters
Band Color	Black
Dial Color	Black
Crystal Type	Scratch Resistant Mineral
Water Resistance Depth	50 Meters (5 ATM)
Clasp Type	Foldover Clasp with 2 Pushers

Feature	Detail
Item Weight	61 Grams
Batteries	1 Product Specific battery (included)
Product Dimensions	1.73 x 0.87 x 0.39 inches

WARRANTY INFORMATION

Your Fossil Fenmore Midsize Multifunction Watch is covered by a Limited Warranty. This warranty typically covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For complete details regarding the terms, conditions, and duration of your warranty, please refer to the official warranty card included with your purchase or visit the official Fossil website. Keep your proof of purchase for warranty claims.

SUPPORT AND CONTACT

Should you require further assistance, have questions about your watch, or need to arrange for service, please contact Fossil customer support.

- **Online Support:** Visit the official Fossil website for FAQs, product registration, and service requests.
- **Customer Service:** Refer to your product packaging or the Fossil website for regional contact information, including phone numbers and email addresses.
- **Authorized Service Centers:** For repairs or battery replacement, it is recommended to use an authorized Fossil service center to ensure genuine parts and maintain your warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question