

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lights4fun](#) /

› [Lights4fun TruGlow Flameless LED Taper Candles \(CA19026\) Instruction Manual](#)

Lights4fun CA19026

Lights4fun TruGlow Flameless LED Taper Candles (CA19026) Instruction Manual

Set of 8 Ivory Real Wax 8.6" Flickering Flameless LED Battery Operated Taper Dinner Candles with Remote Control

INTRODUCTION

Thank you for choosing Lights4fun TruGlow Flameless LED Taper Candles. This set includes 8 ivory real wax taper candles designed to provide the ambiance of traditional candles without the open flame. Each candle features a flickering warm white LED bulb and is operated by batteries, controlled conveniently with an included remote. These candles are crafted from real wax, offering a realistic appearance and feel.



Image: A full set of 8 Lights4fun TruGlow Ivory Real Wax Flameless LED Taper Candles, showcasing their realistic design.

SAFETY INFORMATION

- **Indoor Use Only:** These candles are designed for indoor use. Do not expose them to water or outdoor elements.
- **Battery Safety:**
 - Always insert batteries correctly, observing polarity (+/-).
 - Do not mix old and new batteries, or different types of batteries.
 - Remove depleted batteries promptly to prevent leakage and damage.
 - If the candles will not be used for an extended period, remove the batteries.
 - Keep batteries out of reach of children and pets.
- **Wax Material:** While flameless, these candles are made of real wax. Avoid placing them in direct sunlight or near heat sources, as this may cause the wax to melt or deform.
- **Handling:** Handle with care to avoid damaging the wax surface or internal components.

SETUP INSTRUCTIONS

1. Battery Installation

1. Gently twist the base of each taper candle counter-clockwise to open the battery compartment.
2. Insert 2 x AAA batteries (not included) into each candle, ensuring correct polarity (+ and -).
3. Twist the base clockwise to securely close the battery compartment.



Image: A detailed view of the candle base, indicating where batteries are inserted.

2. Remote Control Preparation

The remote control typically comes with a protective plastic tab in the battery compartment. Pull this tab out before first use to activate the remote's battery.



Image: The remote control used to operate the flameless taper candles, highlighting its buttons.

OPERATING INSTRUCTIONS

Using the Remote Control

Point the remote control towards the candles you wish to operate. The remote has a range of approximately 10-15 feet.

- **ON Button:** Press the "ON" button to turn on all candles within range.
- **OFF Button:** Press the "OFF" button to turn off all candles within range.
- **6H TIMER Button:** Press the "6H TIMER" button to activate the built-in timer function. The candles will illuminate for 6 hours, then automatically turn off for 18 hours, and repeat this cycle daily. To deactivate the timer, press the "OFF" button.

Note: The flickering effect is an inherent feature of the LED bulb and cannot be adjusted.

MAINTENANCE

Cleaning

To clean the candles, gently wipe them with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the wax finish.

Battery Replacement

When the light output dims or the candles stop responding to the remote, it's time to replace the batteries. Follow the "Battery Installation" steps in the Setup section. Dispose of old batteries responsibly according to local regulations.

Storage

Store the candles in a cool, dry place away from direct sunlight and extreme temperatures to preserve the wax and battery life. Remove batteries if storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Candle does not turn on.	Batteries are inserted incorrectly. Batteries are depleted. Remote control battery is depleted or tab not removed. Candle is out of remote range.	Check battery polarity and reinsert. Replace with fresh AAA batteries. Remove plastic tab from remote or replace remote battery. Move closer to the candle and ensure direct line of sight.
Remote control is not working.	Protective tab not removed. Remote battery is depleted. Obstruction between remote and candle.	Remove the plastic tab from the remote's battery compartment. Replace the remote control battery (typically a CR2025 coin cell). Ensure a clear line of sight to the candle's sensor.
Candle light is dim.	Batteries are low.	Replace with fresh AAA batteries.
Timer function is not working as expected.	Timer was not set correctly or was interrupted.	Press the "OFF" button, then press the "6H TIMER" button again to reset the timer. Ensure the candles remain powered on for the full 6-hour cycle.

PRODUCT SPECIFICATIONS

- **Model Number:** CA19026
- **Quantity:** Set of 8 Taper Candles
- **Dimensions:** 0.8" Diameter x 8.6" Height (2.03 cm Diameter x 21.8 cm Height)
- **Material:** Real Wax, Plastic Base
- **Light Source:** LED
- **Light Color:** Warm White (Flickering)
- **Power Source:** Battery Operated (2 x AAA batteries per candle, not included)
- **Remote Control:** Included (ON/OFF, 6H Timer)
- **Battery Life:** Approximately 600 hours (with quality alkaline batteries)
- **Indoor/Outdoor Usage:** Indoor Use Only
- **Control Method:** Remote
- **Item Weight:** 1.28 pounds (total for set)

WARRANTY INFORMATION

Lights4fun products are manufactured to high-quality standards. For specific warranty details, please refer to the product packaging or contact Lights4fun customer support. Keep your purchase receipt as proof of purchase.

CUSTOMER SUPPORT

Should you encounter any issues or have questions regarding your Lights4fun TruGlow Flameless LED Taper Candles, please visit the Lights4fun website or contact their customer service department for assistance.

- **Brand Website:** www.lights4fun.co.uk (or relevant regional site)
- **Amazon Store:** [Lights4fun Amazon Store](#)