

[Manuals.plus](#) /

> [Ikea](#) /

> Ikea KLUNSA LED Spotlight and Clamp User Manual

Ikea KLUNSA

Ikea KLUNSA LED Spotlight and Clamp User Manual

Model: KLUNSA (STOTTA, 403.252.43)

1. PRODUCT OVERVIEW

The Ikea KLUNSA LED Spotlight and Clamp is a versatile, battery-operated lighting solution designed for small or multi-purpose spaces. Its portable design allows for flexible placement using either a clamp or permanent screw installation. The integrated LED light source offers energy efficiency and a long lifespan. The light activates with a touch and features an automatic shut-off after 30 minutes.

Key Features:

- Battery-operated for cordless convenience.
- Flexible mounting options: clamp or screw installation.
- Touch-activated operation with 30-minute automatic shut-off.
- Energy-efficient LED light source.
- Provides focused light for smaller areas.



Image 1.1: The KLUNSA LED Spotlight installed inside a closet, illuminating clothing.

This image shows the KLUNSA LED Spotlight providing illumination within a dark closet space, highlighting its utility for discreet and effective lighting in confined areas. The compact design allows it to be mounted unobtrusively.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the product. Keep this manual for future reference.

- **Battery Safety:**

- Use only the specified battery type (AAA, not included).
- Do not mix old and new batteries, or different types of batteries.
- Insert batteries with correct polarity (+/-).
- Remove depleted batteries promptly to prevent leakage.
- Do not expose batteries to excessive heat or fire.
- Keep batteries out of reach of children.

- **Product Placement:**

- Ensure the spotlight is securely mounted, whether by clamp or screws, to prevent it from falling.
- Do not place the spotlight in direct contact with water or high humidity, as it is not water resistant.
- Avoid placing the spotlight near heat sources or in direct sunlight.

- **LED Light:**

- Do not stare directly into the LED light source, as it may cause eye strain.
- The LED light source is not replaceable. Do not attempt to disassemble the lamp.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Ikea KLUNSA LED Spotlight unit
- Integrated clamp mechanism
- Mounting screws (for permanent installation option)
- User Manual (this document)

Note: Batteries (AAA) are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the spotlight unit.
2. Gently twist or slide the cover to open it.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it is securely closed.



Image 4.1: The battery compartment showing two AAA batteries correctly inserted.

This image provides a clear view of the open battery compartment, illustrating how two AAA batteries (specifically "LADDA 2450" batteries are shown) should be placed with their positive and negative terminals aligned correctly.

4.2 Mounting Options

The KLUNSA spotlight offers two installation methods:

4.2.1 Clamp Installation

For temporary or flexible placement, use the integrated clamp:

1. Identify a suitable surface (e.g., shelf edge, cabinet partition) where the clamp can securely grip.
2. Open the clamp by pressing the lever.
3. Position the spotlight and release the lever to secure the clamp onto the desired surface.
4. Ensure the spotlight is stable and does not wobble.



Image 4.2: The KLUNSA LED Spotlight attached to a shelf using its clamp mechanism.

This image demonstrates the KLUNSA spotlight clamped onto the edge of a white shelf, providing illumination to the items below. It highlights the ease of repositioning the light without permanent fixtures.

4.2.2 Screw Installation (Permanent)

For a more permanent fixture, use the provided screws:

1. Choose a desired mounting location.
2. Mark the positions for the screws using the spotlight's mounting bracket as a guide.
3. Drill pilot holes if necessary, appropriate for the screw size and material.
4. Secure the spotlight to the surface using the provided screws.
5. Ensure the spotlight is firmly attached and stable.



Image 4.3: Two KLUNSA LED Spotlights screw-mounted to the top interior of a dark cabinet.

This image illustrates two KLUNSA LED Spotlights permanently installed via screws on the underside of a cabinet shelf, providing downward illumination. This setup is ideal for consistent lighting in areas like wardrobes or display cabinets.

5. OPERATING INSTRUCTIONS

The KLUNSA LED Spotlight is designed for simple, touch-activated operation.

1. **To Turn On:** Gently touch the surface of the spotlight. The LED light will illuminate.
2. **Automatic Shut-off:** The spotlight is equipped with an automatic timer and will turn off by itself after approximately 30 minutes of continuous operation.
3. **To Turn Off Manually:** If you wish to turn off the light before the 30-minute timer expires, simply touch the surface of the spotlight again.



Image 5.1: A KLUNSA LED Spotlight illuminating toiletries on a glass shelf within a cabinet.

This image shows the KLUNSA LED Spotlight in operation, casting a bright, focused light on items placed on a glass shelf inside a cabinet, demonstrating its effectiveness in illuminating specific areas.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your KLUNSA LED Spotlight.

- **Cleaning:**

- Wipe the spotlight clean with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electronic components.

- **Battery Replacement:**

- When the light dims or stops functioning, it is time to replace the batteries.

- Follow the "Battery Installation" steps in Section 4.1 to replace the AAA batteries.
- Dispose of used batteries according to local regulations.

- **Storage:**

- If storing the spotlight for an extended period, remove the batteries to prevent leakage.
- Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your KLUNSA LED Spotlight, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none"> • Batteries are depleted. • Batteries are inserted incorrectly. • Battery compartment cover is not closed properly. 	<ul style="list-style-type: none"> • Replace with new AAA batteries. • Check battery polarity and reinsert correctly. • Ensure the battery cover is securely closed.
Light is dim.	Batteries are low.	Replace with new AAA batteries.
Light turns off too quickly.	Automatic shut-off feature is active.	This is normal operation. The light is designed to turn off after 30 minutes. Touch again to reactivate.

8. SPECIFICATIONS

Feature	Detail
Brand	Ikea
Model Name	KLUNSA (STOTTA)
Model Number	403.252.43
ASIN	B07T5KTSZR
GTIN/UPC	300846119714
Color	White
Material	Brass (Enclosure), Acrylic (Shade)
Light Source	LED
Power Source	Battery Powered (2x AAA, not included)
Luminous Flux	30 lumens
Control Method	Touch
Automatic Shut-off	Approx. 30 minutes
Mounting Type	Clamp and Screw Mount

Feature	Detail
Dimensions (Diameter x Height)	7 cm (3") x 3 cm (1")
Item Weight	0.1 Kilograms
Indoor/Outdoor Usage	Indoor
Country of Origin	China

9. WARRANTY AND SUPPORT

Ikea products are designed with quality and durability in mind. For information regarding warranty coverage, returns, or technical support, please refer to your purchase receipt or visit the official Ikea website for your region.

You can also contact Ikea customer service directly for assistance with product-related inquiries.

Ikea Official Website: www.ikea.com