

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Walfront](#) /

› [Walfront Vintage Wooden Jewelry Box with Password Lock Instruction Manual](#)

Walfront Walfrontgfmscxt4e7-01

Walfront Vintage Wooden Jewelry Box with Password Lock Instruction Manual

Model: Walfrontgfmscxt4e7-01

1. PRODUCT OVERVIEW

The Walfront Vintage Wooden Jewelry Box is a classically designed storage solution for your valuable trinkets and jewelry. Crafted from plywood with leather printing, it features a European classical style with intricate carving patterns. This box is ideal for storing and displaying items such as bracelets, earrings, pendants, brooches, and hair clips. It includes a password lock for enhanced security.



Figure 1: Walfront Vintage Wooden Jewelry Box, closed with its combination lock.

2. SETUP: SETTING THE COMBINATION LOCK

Your Walfront Wooden Jewelry Box comes with a 3-digit combination lock. The default combination is typically **0-0-0**. Follow these steps to set your personalized combination:

1. Ensure the lock is set to the default combination (0-0-0) and open the lock by pressing the release button.
2. While the lock is open, locate a small reset hole on the side of the lock mechanism.
3. Using a pointed object, such as the tip of a pen, press and hold the button inside this small hole.
4. While continuing to hold the reset button, rotate the number dials to your desired new 3-digit combination.
5. Release the reset button. Your new combination is now set.
6. Close the lock and scramble the dials to secure the box. Test your new combination to ensure it works correctly.



Figure 2: Detailed view of the 3-digit combination lock, showing the dials and the latch mechanism.

3. OPERATING INSTRUCTIONS

3.1 Opening the Box

1. Ensure the combination lock is attached to the latch on the front of the box.
2. Rotate the dials on the combination lock to your set 3-digit code.
3. Press the release button on the side of the lock to disengage the shackle.
4. Remove the lock from the latch.
5. Lift the lid of the box to open it.



Figure 3: The jewelry box shown open, displaying the red interior lining and the hinge mechanism.

3.2 Closing and Securing the Box

1. Close the lid of the box, ensuring it aligns properly with the base.
2. Place the shackle of the combination lock through the latch on the front of the box.
3. Press the shackle firmly into the lock body until it clicks, securing the box.
4. Scramble the number dials on the lock to conceal your combination and prevent unauthorized access.

4. MAINTENANCE

4.1 Cleaning the Box

- For the wooden exterior, wipe gently with a soft, dry cloth to remove dust. Avoid abrasive cleaners or excessive moisture.
- For the leather printing, use a slightly damp cloth if necessary, then immediately dry with a soft cloth.
- Do not use harsh chemicals or solvents, as these can damage the finish and materials.

4.2 Lock Care

- Keep the combination lock clean and free of dust or debris.
- If the dials become stiff, a small amount of graphite powder (from a pencil tip) can be applied to the moving parts, but avoid liquid lubricants.

4.3 General Care

- Store the jewelry box in a dry environment, away from direct sunlight or extreme temperature changes, to prevent warping or damage to the wood and finish.
- Avoid placing heavy objects on top of the box.

5. TROUBLESHOOTING

5.1 Lock Not Opening

- **Incorrect Combination:** Double-check that you are entering the correct 3-digit combination. Ensure each number is precisely aligned in the center of the window.
- **Dials Stiff:** If the dials are difficult to turn, try gently wiggling them while applying your combination. Refer to the "Lock Care" section for maintenance.
- **Forgotten Combination:** If you have forgotten your combination, there is no master key or universal reset code. The lock must be opened by trying combinations or, as a last resort, replaced.

5.2 Box Lid Not Closing Properly

- **Obstruction:** Ensure no items inside the box are preventing the lid from closing completely.
- **Hinge Alignment:** Check if the hinges on the back of the box are aligned and not damaged.

6. SPECIFICATIONS

Brand	Walfront
Model Number	Walfrontgfmiscxt4e7-01
Material	Plywood + Leather Printing
Color	Brown
Product Dimensions (L x W x H)	5.75" x 3.15" x 3.15" (14.6 cm x 8 cm x 8 cm)
Item Weight	0.18 Kilograms (6.3 ounces)
Special Feature	Durable, Jewelry Organizer, Password Lock
Number of Compartments	1
UPC	765613707653



Figure 4: Dimensional diagram of the Walfront Vintage Wooden Jewelry Box.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for this product are not provided in the available information. Please refer to your purchase documentation or contact the retailer for warranty terms and conditions.

7.2 Customer Support

For any questions, concerns, or assistance with your Walfront Vintage Wooden Jewelry Box, please contact Walfront customer service through the retailer's platform where the product was purchased. You may also visit the official Walfront store page for more information: [Walfront Store](#).

8. MEDIA RESOURCES

No official product videos from the seller are available for embedding at this time.



