

## Easytry123 RCS-AX1/3

# Instruction Manual: Easytry123 Replacement Remote Control

Model: RCS-AX1/3

Compatible with Sanyo AC Air Conditioner Models: KMS0972, KMS1272, KMS1872, KMS2472, XMS0972, XMS1272, XMS1872, 18KS72-KS1872, 18KLS72-KS1872, 12KS71-KS1271

## 1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and basic maintenance of your Easytry123 replacement remote control for Sanyo AC Air Conditioners. Please read this manual thoroughly before using the remote control to ensure proper functionality and to extend the product's lifespan.

This remote control is designed as a direct replacement for the original Sanyo remote models and may not support all advanced functions present in some original units. Please verify compatibility with your specific Sanyo AC model as listed in the header.

## 2. IMPORTANT SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries promptly.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.
- Keep batteries out of reach of children.
- Do not expose the remote control to direct sunlight, high temperatures, or high humidity.
- Avoid dropping the remote control or subjecting it to strong impacts.

## 3. PRODUCT OVERVIEW

The Easytry123 replacement remote control is designed for ease of use and reliable operation with compatible Sanyo AC Air Conditioners. Below are images illustrating the remote's design and key features.



Figure 3.1: Front view of the remote control, displaying the LCD screen and button layout.

This image shows the front of the remote control, highlighting its ergonomic design and the arrangement of buttons for various functions such as power, mode selection, temperature adjustment, and fan speed.



Figure 3.2: Back view of the remote control, indicating the model number RCS-AX1/3.

This image displays the rear side of the remote control, where the battery compartment is located. A label with "QC. PASS" and "MODE: RCS-AX1/3 FOR: SANYO" is clearly visible, confirming the remote's model and compatibility.



Figure 3.3: Battery compartment with cover removed.

This image illustrates the open battery compartment on the back of the remote, revealing the slots for two AAA batteries. This view is essential for understanding how to properly insert or replace batteries.

## 4. SETUP

### 4.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and lift it off. (Refer to Figure 3.3)
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use. No programming is typically required for this replacement unit; it should work directly with compatible Sanyo AC models.

## 5. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control to operate your Sanyo AC unit effectively. Point the

remote control directly at the air conditioner's receiver when operating.

**Table 5.1: Remote Control Button Functions**

Button	Function
<b>ON/OFF</b>	Turns the air conditioner unit on or off.
<b>MODE</b>	Cycles through operating modes: Auto, Cool, Dry, Fan, Heat (if supported by your AC unit).
<b>TEMP ▲ / ▼</b>	Adjusts the desired temperature setting up or down.
<b>FAN SPEED</b>	Adjusts the fan speed (e.g., Auto, Low, Medium, High).
<b>1HR.</b>	Activates a 1-hour timer function. Consult your AC unit's manual for specific timer operations.
<b>ECONOMY</b>	Activates or deactivates the economy/energy-saving mode.
<b>FLAP</b>	Controls the vertical swing of the air conditioner's louver/flap.
<b>ON TIMER / OFF TIMER</b>	Sets the time for the air conditioner to turn on or off automatically.
<b>CANCEL</b>	Cancels active timer settings.
<b>ACL</b>	Typically a reset button, often recessed. Use a thin object (like a paperclip) to press. Resets remote settings.
<b>SENSOR</b>	Activates or deactivates a sensor function (e.g., "I Feel" mode, where the remote acts as a thermostat).
<b>QUIET</b>	Activates a quiet operation mode, reducing fan noise.
<b>LED</b>	Controls the display light on the air conditioner unit.
<b>CLEAN</b>	Activates a self-clean function for the indoor unit (if supported by your AC).
<b>SET TEMP</b>	Displays or confirms the set temperature.

*Note: Not all functions listed may be available on your specific Sanyo AC model. Refer to your air conditioner's original manual for detailed information on specific features.*

## 6. MAINTENANCE

### 6.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these may damage the remote.

### 6.2 Battery Replacement

Replace batteries when the remote control's range decreases or if the display becomes dim. Follow the battery installation steps in Section 4.1.

## 7. TROUBLESHOOTING

Table 7.1: Common Issues and Solutions

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries. Obstruction between remote and AC unit. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the AC unit.
Certain functions do not work.	The replacement remote may not support all functions of your original AC unit's remote. The AC unit itself may not have the feature.	Verify if the function is supported by your specific Sanyo AC model. This replacement remote is designed for basic operation.
Display is dim or blank.	Low battery power.	Replace batteries.

If troubleshooting steps do not resolve the issue, please refer to the support section or contact the seller.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Model Number (Remote)	RCS-AX1/3
Compatible Devices	Sanyo AC Air Conditioners (KMS0972, KMS1272, KMS1872, KMS2472, XMS0972, XMS1272, XMS1872, 18KS72-KS1872, 18KLS72-KS1872, 12KS71-KS1271)
Connectivity Technology	Infrared (IR)
Batteries Required	2 x AAA (not included)
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (one air conditioner unit)

## 9. WARRANTY INFORMATION

No specific warranty information is provided with this product. Please refer to the retailer's return policy or contact the seller directly for details regarding product warranty or returns.

## 10. SUPPORT

For further assistance or inquiries regarding your Easytry123 replacement remote control, please contact the seller directly through the platform where the purchase was made. Ensure you have your order details readily available.

© 2024 Easytry123. All rights reserved. This manual is for informational purposes only.