

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VIZIO](#) /

› [VIZIO V405-G9 40 Inch Class V-Series 4K HDR Smart TV User Manual](#)

VIZIO V405-G9

VIZIO V405-G9 40 Inch Class V-Series 4K HDR Smart TV User Manual

Model: V405-G9

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your VIZIO V405-G9 40 Inch Class V-Series 4K HDR Smart TV. Please read these instructions carefully to ensure proper use and to maximize your viewing experience. This television combines 4K resolution with High Dynamic Range (HDR) and smart TV capabilities for access to various streaming services.

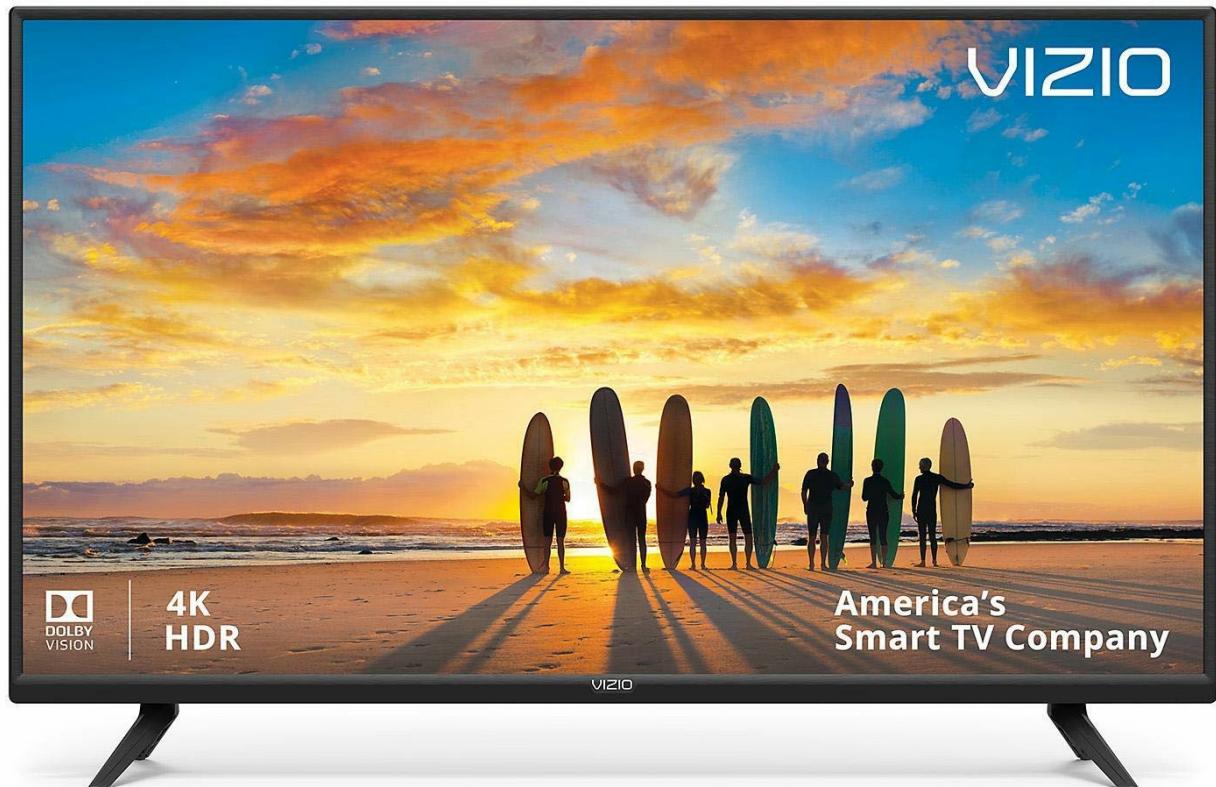


Image: VIZIO V405-G9 40 Inch 4K HDR Smart TV on a media console.

WHAT'S IN THE Box

Verify that all items are included in your package:

- One VIZIO 40 Inch 4K HDR Smart TV
- Remote Control
- 2 x AAA Batteries (Duracell)
- TV Stand components

SETUP

Attaching the Stand

Carefully place the TV screen-down on a soft, clean surface to prevent damage. Align the stand legs with the designated slots on the bottom of the TV and secure them using the provided screws. Ensure the stand is firmly attached before placing the TV upright.

Your browser does not support the video tag.

Video: Demonstration of how to attach the TV legs.

Connecting Power and Inputs

Connect the power cord to the TV and then to a wall outlet. For external devices such as Blu-ray players, game consoles, or cable boxes, use the HDMI ports located on the back of the TV. The VIZIO V405-G9 features 3 UHD-Ready HDMI Ports.



Image: Rear input ports of the VIZIO V405-G9 TV.

Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and scanning for channels if you are using an antenna.

OPERATING YOUR TV

Smart TV Features

The VIZIO V405-G9 provides instant access to popular apps directly on the TV. Use the included remote control to navigate the smart TV interface and discover new shows, movies in 4K Ultra HD, and HDR content.



Image: VIZIO Smart TV interface with streaming apps.

Chromecast Built-in

This TV includes Chromecast built-in. Download Chromecast-enabled applications to your smartphone or tablet, then tap the Cast button within the app to stream content directly to your VIZIO TV. This allows access to a wide range of free, subscription, or paid content from thousands of apps.

Using the Remote Control

The remote control allows you to navigate menus, select inputs, adjust volume, change channels, and access smart TV features. Insert the two AAA batteries into the remote control, ensuring correct polarity.



Enabling Full 4K UHD Color

To ensure your VIZIO V405-G9 displays content in full 4K UHD (60Hz) and supports HDR10 video, you must enable the 'Full UHD Color' setting for the specific HDMI input you are using. This setting is often disabled by default.

1. Press the **MENU** button on your VIZIO remote.
2. Navigate to **Input Settings**.
3. Select the specific **HDMI input** (e.g., HDMI-1, HDMI-2) to which your 4K device is connected.
4. Locate and select **Full UHD Color**.
5. Change the setting from **Off** to **On**.
6. The TV will restart to apply the changes.

After the TV restarts, your connected device should now output in 4K UHD with HDR support. This is a critical step for optimal picture quality from 4K sources.

Your browser does not support the video tag.

Video: Guide on how to enable Full UHD Color for 4K HDR support on VIZIO V-Series TVs.

SPECIFICATIONS

Feature	Detail
Brand	VIZIO
Model Number	V405-G9
Screen Size	40 Inches
Display Technology	LED
Resolution	4K (3840x2160)
Refresh Rate	120 Hz
Special Feature	Flat Screen, Smart TV, HDR
Connectivity Technology	Wi-Fi & Ethernet port
Product Dimensions (with stand)	35.51"W x 22.70"H x 8.36"D
Product Dimensions (without stand)	35.51"W x 20.51"H x 2.55"D
Weight (with stand)	15.21 lbs
Weight (without stand)	14.99 lbs
Aspect Ratio	16:9
Wattage	98 watts



Image: VIZIO V405-G9 TV Dimensions.

TROUBLESHOOTING

No 4K UHD or HDR Picture

If you are not receiving a 4K UHD or HDR signal from a compatible device, ensure that the 'Full UHD Color' setting is enabled for the specific HDMI input being used. Refer to the 'Enabling Full 4K UHD Color' section above for detailed instructions. Also, verify that your HDMI cable is rated for HDMI 2.0 or higher to support 4K content.

No Power

Check that the power cord is securely connected to both the TV and a working electrical outlet. Try plugging another device into the same outlet to confirm it has power. If the TV still does not power on, try a different outlet.

Remote Control Not Working

Ensure the batteries in the remote control are correctly inserted and are not depleted. Replace the batteries if necessary. Make sure there are no obstructions between the remote control and the TV's remote sensor.

MAINTENANCE

To maintain the performance and appearance of your VIZIO TV:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquid directly onto the screen.
- **Cleaning the Frame:** Use a soft, dry cloth to wipe the TV frame and stand.
- **Ventilation:** Ensure the TV's ventilation openings are not blocked to prevent overheating.
- **Power Off When Not in Use:** Turn off the TV when not in use to conserve energy and extend its lifespan.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official VIZIO support website. For technical assistance or customer service, contact VIZIO customer support through their official channels.