

[Manuals.plus](#) /

> [Inova](#) /

> Inova Wireless Joystick CON-204Z User Manual

Inova CON-204Z

Inova Wireless Joystick User Manual

Model: CON-204Z

1. INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your Inova Wireless Joystick, model CON-204Z. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. FEATURES

The Inova Wireless Joystick is designed for an enhanced gaming experience, offering convenience and durability. Key features include:

- Wireless connectivity for freedom of movement.
- Built-in rechargeable Lithium-ion battery (600mAh capacity).
- Ergonomic design for comfortable grip during extended play.
- Soft, responsive buttons for precise control.
- Durable and resistant material construction.
- Compatible with PlayStation 3 (PS3) systems.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all items are present:

- 1 x Inova Wireless Joystick (Model CON-204Z)
- *Note: A USB Type A-Mini-B cable is required for connection and charging but is not included with this product. Please use the cable provided with your PS3 system.*



Figure 1: Front view of the Inova Wireless Joystick CON-204Z, showcasing the controller within its transparent retail packaging. The packaging highlights "NOVA GERAÇÃO DE CONTROLE SEM FIO PXIII" and the model number "CON-204Z".

4. SETUP AND INITIAL USE

4.1. Charging the Controller

Before initial use, it is recommended to fully charge the controller's built-in battery.

- Connect the controller to your PlayStation 3 system using a USB Type A-Mini-B cable (not included).
- Ensure the charging environment temperature is between **10°C and 30°C (50°F and 86°F)** for optimal charging efficiency. Charging outside this range may reduce effectiveness.
- The controller's indicator lights will show charging status. Refer to your PS3 system's manual for specific charging indications.

4.2. Connecting to PlayStation 3

Once charged, disconnect the USB cable. The controller should automatically connect wirelessly to your PS3 system. If

not, follow the pairing instructions provided with your PS3 console.

5. OPERATING INSTRUCTIONS

5.1. Battery Lifespan and Performance

The integrated Lithium-ion battery has a limited lifespan. Its duration will gradually decrease with repeated use and as the product ages. Battery performance can also vary based on storage methods, usage conditions, and environmental factors.



Figure 2: Rear view of the Inova Wireless Joystick CON-204Z packaging, displaying key product information, battery specifications, and usage recommendations in Portuguese. This includes details on battery disposal and maintenance.

6. MAINTENANCE

6.1. General Care

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble the controller, as this will void any potential warranty and may cause damage.

6.2. Battery Maintenance for Extended Storage

If the wireless controller will not be used for a prolonged period, it is recommended to fully charge it at least once a year. This practice helps to maintain the battery's functionality and extend its overall lifespan.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Inova Wireless Joystick. If you experience problems not listed here, please refer to the support information.

Problem	Possible Cause	Solution
Controller does not turn on or respond.	Low or depleted battery.	Connect the controller to your PS3 system with a USB cable and charge it fully.
Controller does not connect wirelessly.	Not paired with the PS3 system, or interference.	Ensure the controller is charged. Connect it via USB to the PS3 to re-establish connection, then disconnect. Ensure no other wireless devices are causing interference.
Buttons or joysticks are unresponsive.	Internal malfunction or dirt/debris.	Ensure the controller is clean. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	CON-204Z
Connectivity Technology	Wireless
Controller Type	Joystick
Compatible Devices	PlayStation 3 (PS3)
Power Source	Battery Powered
Battery Type	Rechargeable Lithium-ion
Battery Voltage	DC 3.7V
Battery Capacity	600mAh
Product Weight	240 g (0.53 lbs)
Package Dimensions	18 x 17 x 6 cm (7.1 x 6.7 x 2.4 inches)
Operating Temperature	5°C to 35°C (41°F to 95°F)
Manufactured In	China

9. PRODUCT DISPOSAL

This product contains a rechargeable Lithium-ion battery. For details on the proper disposal methods for the controller and its battery, please consult the instructions provided with your PlayStation 3 system or local regulations regarding electronic waste and battery recycling.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. You may also find additional information via the following link:

[Official Support Information \(WeChat Link\)](#)

Note: This link may lead to a WeChat page for support or additional product information.

Inova Wireless Joystick User Manual - Model CON-204Z
© 2024 Inova. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07T818KC5>

More documents and user manuals: <https://manuals.plus/>