

Beyution AKB75375608

Beyution AKB75375608 Remote Control User Manual

For LG LED LCD TVs

[Introduction](#)

[Package Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

This manual provides instructions for the Beyution AKB75375608 replacement remote control. It is designed to function as a direct replacement for various LG LED LCD TV models, requiring no programming. Simply insert batteries, and it is ready for use.

1.1. Compatible Models

This remote control is compatible with a wide range of LG LED LCD TV models, including but not limited to:

- **LK Series:** 32LK61, 32LK62, 43LK59, 43LK61, 49LK59, 49LK61
- **UK Series:** 43UK63, 43UK64, 43UK65, 43UK67, 43UK69, 49UK63, 49UK64, 49UK75, 50UK64, 50UK65, 50UK67, 50UK69, 55UK64, 55UK65, 55UK67, 55UK69, 55UK75, 65UK64, 65UK65, 65UK67, 65UK69, 65UK75, 70UK67, 70UK69, 75UK65, 75UK67, 86UK65, 86UK67
- **SK Series:** 49SK80, 55SK80, 65SK80, 75SK81
- Specific models such as 32LK6100PLB, 43UK6500PLA, 49UK7500PTA, 55UK6500MLA, 65UK6710PLB, 75SK8100PTA, and many more.

If your specific TV model is not listed, please verify compatibility with the seller before purchase.

2. PACKAGE CONTENTS

The package includes the following item:

- 1 x Beyution AKB75375608 Replacement Remote Control

3. SETUP

3.1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Important: Use new alkaline batteries for optimal performance. Rechargeable batteries may not provide sufficient power, leading to inconsistent operation. If the remote does not work, replace the batteries with brand new alkaline ones.

4. OPERATING INSTRUCTIONS

This remote control utilizes infrared (IR) technology. For proper function, ensure there is a clear line of sight between the remote's emitter and your TV's IR receiver. Point the remote directly at the television.





Image: Front view of the Beyution AKB75375608 remote control, showing the layout of all buttons.

4.1. Button Functions

Button	Function
Power (Red)	Turns the TV on or off.
Number Buttons (0-9)	Direct channel selection.
Volume Up/Down (▲/▼)	Adjusts the TV volume.
Channel Up/Down (P ▲/▼)	Changes TV channels.
Mute	Mutes or unmutes the TV audio.

Button	Function
Netflix / Amazon	Direct access to Netflix or Amazon Prime Video applications.
Navigation Arrows (◀ ▲ ▶ ▼)	Navigates through menus and options.
OK	Confirms selections in menus.
Back	Returns to the previous screen or menu.
Exit	Exits the current menu or application.
Quick Access	Accesses quick settings or frequently used functions.
Info	Displays information about the current program or input.
Guide	Opens the electronic program guide (EPG).
List	Displays a list of channels or inputs.
Live Zoom	Activates or deactivates the live zoom feature.
Subtitle	Toggles subtitles on or off.
T.OPT	Accesses Teletext options.
Text	Opens Teletext.
AD/*	Audio Description / Special Function.
REC/*	Record / Special Function.
Playback Controls (◀◀, ▶, , ▶▶)	Rewind, Play, Pause, Fast Forward for media playback.
Color Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications.

5. MAINTENANCE

- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.
- **Protection:** Avoid dropping the remote control or exposing it to excessive moisture, direct sunlight, or extreme temperatures.
- **Battery Care:** If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent potential leakage, which can damage the device.

6. TROUBLESHOOTING

6.1. Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted with correct polarity (+ and -).
- **Replace Batteries:** If the remote is unresponsive or functions intermittently, replace the old batteries with two brand new AAA alkaline batteries. Rechargeable batteries may not provide sufficient voltage.
- **Clear Obstructions:** Make sure there are no objects blocking the line of sight between the remote control and the TV's infrared sensor.

- **Aim Correctly:** Point the remote directly at the TV's IR receiver.

6.2. Limited Functionality

- **Compatibility:** Verify that your TV model is listed as compatible with the AKB75375608 remote control.
- **Advanced Features:** This is a standard infrared replacement remote. It does not support advanced features found on some original LG Magic Remotes, such as voice control, pointer functionality, or motion sensing.

7. SPECIFICATIONS

Feature	Detail
Model Number	AKB75375608
Brand	Beyution
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	2 ounces (approx.)
Compatible Devices	LG LED LCD Televisions

8. WARRANTY AND SUPPORT

For specific warranty information, return policies, or technical assistance, please refer to the details provided by your retailer or contact the manufacturer, Beyution inc. directly. Contact information can typically be found on the product packaging or the seller's online storefront.