

[Manuals.plus](#) /

> [AIRSEE](#) /

> AIRSEE Home Lite USB Mobile Nail Drill Machine User Manual

AIRSEE A123

AIRSEE Home Lite USB Mobile Nail Drill Machine User Manual

Model: A123

INTRODUCTION

The AIRSEE Home Lite USB Mobile Nail Drill Machine is designed for beginners and nail enthusiasts for at-home manicure and pedicure needs. This portable device offers efficient nail trimming, sanding, and polishing with ease of use and a compact design. It features adjustable speed, bi-directional rotation, and low noise operation for a comfortable user experience.

WHAT'S INCLUDED

The AIRSEE Home Lite USB Mobile Nail Drill Machine package includes the following components:

- 1 x AIRSEE Nail Drill Pen (Purple USB Mobile)
- 6 x Metal Drill Bits (various shapes for different functions)
- 26 x Sanding Bands (for various grit levels)
- 1 x USB Charging Cable with Rotation Switch
- 1 x User Manual



Image: The complete package of the AIRSEE Home Lite USB Mobile Nail Drill Machine, including the purple drill pen, various metal drill bits, and sanding bands.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all listed items in the "What's Included" section are present.
2. **Connecting Power:** Connect the USB charging cable to the nail drill pen. Plug the USB end into a compatible power source such as a mobile power supply, laptop, or a USB wall adapter (not included).
3. **Inserting a Drill Bit:** Select the desired metal drill bit. Gently push the chosen bit into the opening at the tip of the nail drill pen until it is securely seated. Ensure it is firmly in place to prevent wobbling during operation.

High Speed, Adjustable and Professional

Heat Dissipation Speed Control

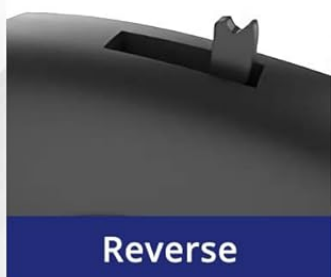
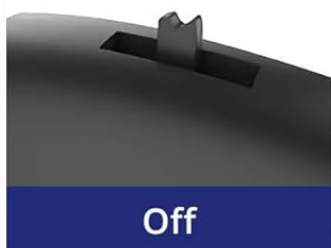


Image: The compact and portable design of the nail drill, showing the USB cable and various bits, ready for on-the-go use.

OPERATING INSTRUCTIONS

1. **Power On/Off and Rotation Direction:** Locate the rotation switch on the USB cable. Flip the switch to turn the nail drill ON. You can select either forward (F) or reverse (R) rotation depending on your preference and hand dominance. The middle position is OFF.
2. **Adjusting Speed:** Use the scroll wheel located next to the rotation switch to adjust the speed of the drill. Scroll up to increase the RPM (up to 20,000 RPM) and scroll down to decrease it. Start with a lower speed and gradually increase as needed for comfort and control.

3. Usage:

- For gel/polygel nails removal, shaping acrylic nails, manicure & pedicure, or removing clip powder nails, select the appropriate drill bit.
- For removing callus/cuticle, sanding thick nails, removing dead skin, or polishing natural nails, choose the suitable bit and adjust speed accordingly.
- Always apply gentle pressure and keep the drill moving to avoid heat buildup or damage to the nail.

4. **Changing Bits:** To change a drill bit, ensure the device is turned OFF and unplugged. Gently pull out the current bit and insert the new one, ensuring it is securely seated.



Image: Close-up of the nail drill's control cable, illustrating the forward/off/reverse switch and the adjustable speed scroll wheel.

COMPACT & PORTABLE

Perfect for On-the-Go



Image: A visual guide demonstrating the multifunctional uses of the included drill bits for various nail care tasks, from gel removal to cuticle care.

MAINTENANCE

- **Cleaning:** After each use, gently wipe the drill pen and bits with a soft, dry cloth to remove any dust or debris. For thorough cleaning of bits, use a small brush and rubbing alcohol. Ensure bits are completely dry before storage.
- **Storage:** Store the nail drill and its accessories in a cool, dry place away from direct sunlight and moisture. Keep the

bits organized in their provided cases to prevent damage or loss.

- **Sanding Bands:** Sanding bands are disposable and should be replaced after each use or when they show signs of wear to maintain hygiene and effectiveness.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drill not turning on.	Not properly plugged in; switch is off; power source issue.	Ensure USB cable is securely connected to both the drill and the power source. Check the rotation switch is in 'F' or 'R' position. Try a different USB port or power adapter.
Drill bit wobbles or falls out.	Bit not inserted correctly; bit is damaged.	Ensure the drill bit is pushed firmly and completely into the chuck. Replace the bit if it appears damaged or worn.
Device heats up quickly.	Prolonged use at high speed; excessive pressure applied.	Reduce operating time. Allow the device to cool down between uses. Apply lighter pressure during operation. Ensure proper ventilation around the device.
Low vibration and noise.	This is a normal operating characteristic.	No action required. The device is designed for low noise and vibration for user comfort.

SPECIFICATIONS

- **Brand:** AIRSEE
- **Model Name:** DR-203
- **Item Model Number:** A123
- **Material:** Metal
- **Product Dimensions:** 0.6"L x 0.6"W x 5"H
- **Item Weight:** 0.3 Grams
- **Max RPM:** Up to 20,000 RPM
- **Rotation:** Two-way (Forward/Reverse)
- **Power Source:** USB (requires external power supply)

SAFETY INFORMATION

It is important to follow these safety guidelines to prevent injury or damage to the device:

- Tie your hair back before use to avoid getting it caught in the drill.
- Beware of splashing debris or dust injuring your eyes when using. Consider wearing protective eyewear.
- Make sure to keep away from water before energizing the product to prevent electric shock.
- Store in a cool, dry place when not in use.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.

WARRANTY & SUPPORT

The AIRSEE Home Lite USB Mobile Nail Drill Machine typically comes with a manufacturer's warranty. Please refer to the warranty information provided in the product packaging or contact AIRSEE customer support for details regarding warranty coverage, service, and technical assistance.

For any questions or issues not covered in this manual, please visit the official AIRSEE website or contact their customer service team.