



Manuals.plus /

› cimetech /

› Cimetech Wireless Computer Mouse Instruction Manual

cimetech TM002-wirelessmouse-us

Cimetech Wireless Computer Mouse Instruction Manual

Model: TM002-wirelessmouse-us

1. INTRODUCTION & OVERVIEW

The Cimetech Wireless Computer Mouse is designed for comfort and efficiency, featuring a slim, ergonomic design and whisper-quiet operation. Its 2.4G wireless connection ensures reliable performance for various computing tasks.

Key Features:

- **Comfortable Hand-Feeling & Whisper-Quiet:** Ergonomic shape with skin-friendly surface and 90% noise reduction for discreet clicking.
- **Ultra-Slim and Portable:** Compact design (approx. 2.5x1.2x4.5 inches) for easy transport.
- **Longer Lifespan:** Tested for 5,000,000 keystrokes, with an automatic sleep mode after 15 minutes of inactivity to conserve power.
- **Plug and Play:** Simple setup with a Nano receiver, no drivers required.
- **3 Adjustable DPI:** Switch between 800, 1200, and 1600 DPI for precise cursor control.
- **Wide Compatibility:** Compatible with Windows 7/8/10/XP, Vista 7/8, Linux, and various devices including desktops, laptops, PC, ChromeBook, Galaxy Book, Vivobook, IdeaPad, Nitro, MateBook, HP Stream, ElliteBook, Dell Inspiron, and Windows Surface.



Figure 1: Cimetech Wireless Mouse with Nano Receiver

2. WHAT'S IN THE BOX

Your Cimetech Wireless Computer Mouse package includes:

- 1 x Cimetech Wireless Mouse
- 1 x USB Nano Receiver (stored inside the mouse)
- 1 x Instruction Manual

Note: 1 AA battery is required but NOT included.

3. SETUP GUIDE

Follow these steps to set up your Cimetech Wireless Mouse:

1. **Open the Battery Compartment:** Locate the battery cover on the underside of the mouse and slide it open.
2. **Retrieve the USB Nano Receiver:** The small USB receiver is stored securely inside the battery compartment. Gently pull it out.
3. **Insert Battery:** Insert one AA battery into the battery slot, ensuring correct polarity (+/-).
4. **Close Battery Compartment:** Replace the battery cover securely.
5. **Plug in Receiver:** Insert the USB Nano Receiver into an available USB port on your computer (laptop, desktop, etc.).
6. **Power On:** Locate the ON/OFF switch on the bottom of the mouse and slide it to the "ON" position. The mouse is now ready for use.

Adjustable DPI 800/1200/1600



NOISELESS CLICK

Quieter and easier to click, let you focus on your work without disturbing others.



Figure 2: Step-by-step guide for mouse setup

Setup Demonstration Video


Your browser does not support the video tag.

Video 1: A seller-provided video demonstrating the setup process of the Cimetech Wireless Mouse, including unboxing, battery installation, and USB receiver connection.

4. OPERATING INSTRUCTIONS

The Cimetech Wireless Mouse offers intuitive controls for seamless navigation.

- **Left and Right Click:** Standard mouse buttons for selection and context menus. The silent click technology ensures minimal noise.
- **Scroll Wheel:** Use the sturdy rubberized scroll wheel to navigate documents and web pages vertically.
- **DPI Adjustment:** Press the DPI button (located near the scroll wheel) to cycle through 800, 1200, and 1600 DPI settings. This allows you to adjust cursor sensitivity to your preference for different tasks.

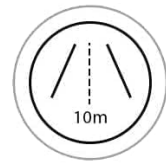

2.4G 10M
WIRELESS CONNECTION



Figure 3: Noiseless click and adjustable DPI features

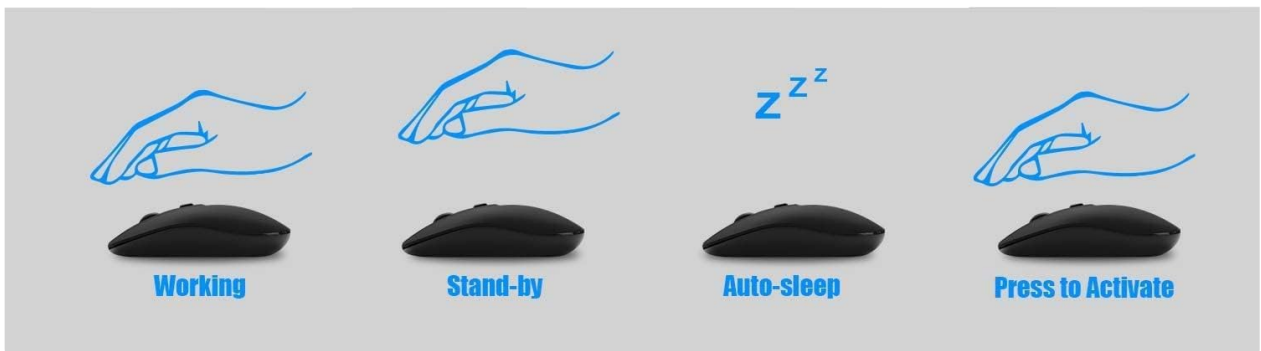


Figure 4: Power saving modes of the mouse

5. MAINTENANCE

To ensure the longevity and optimal performance of your Cimotech Wireless Mouse:

- **Power Saving:** The mouse will enter sleep mode after 15 minutes of no-operation to save battery life. Press any button to wake it up. For extended periods of non-use, slide the ON/OFF switch to the "OFF" position.
- **Battery Replacement:** Replace the AA battery when the mouse performance degrades or it stops responding.
- **Cleaning:** Use a soft, dry cloth to clean the mouse surface. Avoid abrasive cleaners or excessive moisture.
- **Durability:** The mouse is designed for durability, having passed 5,000,000 keystroke tests. Handle with care to prevent damage from drops or impacts.

6. TROUBLESHOOTING

If you encounter issues with your Cimetech Wireless Mouse, try the following:

- **Mouse Not Responding:**

- Ensure the mouse is switched "ON".
- Check the battery. Replace it if it's low or depleted.
- Ensure the USB Nano Receiver is securely plugged into a working USB port on your computer.
- Try plugging the USB Nano Receiver into a different USB port.
- If the mouse is in sleep mode, click any button to wake it up.

- **Cursor Movement is Erratic or Jumpy:**

- Ensure the mouse is on a clean, flat, and non-reflective surface.
- Try adjusting the DPI setting using the DPI button.
- Clean the optical sensor on the bottom of the mouse.

- **Connection Issues:**

- Ensure there are no large metallic objects between the mouse and the receiver that could interfere with the 2.4GHz signal.
- Move the mouse closer to the USB receiver. The effective transmission distance is up to 50ft/15M.

7. SPECIFICATIONS

Feature	Specification
Product Dimensions	2.56 x 1.77 x 0.01 inches
Item Weight	2.47 ounces
Model Number	TM002-wirelessmouse-us
Connectivity Technology	2.4GHz Wireless (USB Nano Receiver)
Movement Detection Technology	Optical
Adjustable DPI	800, 1200, 1600
Power Source	1 x AA Battery (not included)
Manufacturer	cntorich
Country of Origin	China

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase

or visit the official Cimeteck website. Keep your purchase receipt for any warranty claims.