

## SOLAC AS3103

# SOLAC Enara 600W AS3103 Bagless Vacuum Cleaner User Manual

Model: AS3103

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use, maintenance, and troubleshooting of your SOLAC Enara 600W AS3103 Bagless Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference.

The SOLAC Enara 600W AS3103 is a high-performance bagless vacuum cleaner designed for effective cleaning of various surfaces, featuring a powerful 600W motor and an AAA energy efficiency rating.

## 2. IMPORTANT SAFETY INSTRUCTIONS

**WARNING: To reduce the risk of fire, electric shock, or injury, read and follow all instructions carefully before use.**

- Always unplug the vacuum cleaner from the electrical outlet before cleaning or performing any maintenance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your SOLAC Enara vacuum cleaner:

1. Main Unit
2. Flexible Hose
3. Telescopic Tube
4. Floor Brush
5. Dust Container
6. Power Button
7. Cord Rewind Button
8. Crevice Tool (Accessory)
9. Upholstery Brush (Accessory)



Figure 1: Side view of the SOLAC Enara 600W AS3103 Bagless Vacuum Cleaner with hose, telescopic tube, and floor brush assembled.



Figure 2: Front view of the SOLAC Enara 600W AS3103 Bagless Vacuum Cleaner, highlighting the dust container and main control buttons.

## 4. SETUP AND ASSEMBLY

---

1. **Attach the Flexible Hose:** Insert the hose connector firmly into the suction inlet on the main unit until it clicks into place. To detach, press the release button and pull.
2. **Connect the Telescopic Tube:** Slide the telescopic tube onto the handle end of the flexible hose. Adjust the length of the telescopic tube by pressing the adjustment button and extending or retracting it to a comfortable height.
3. **Attach the Floor Brush:** Connect the floor brush to the end of the telescopic tube. Ensure it is securely fitted. For different surfaces, you may switch to other accessories like the crevice tool or upholstery brush.
4. **Power Connection:** Extend the power cord from the vacuum cleaner and plug it into a suitable electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

1. **Power On/Off:** Press the Power Button (usually marked with **I/O**) located on the main unit to start the vacuum cleaner. Press it again to turn off.
2. **Adjusting Suction:** The vacuum cleaner may feature an airflow control on the hose handle. Slide the control to open or close the air vent to adjust suction power for different cleaning tasks.
3. **Cleaning Surfaces:**
  - For hard floors and carpets, use the main floor brush. Some floor brushes have a switch to extend or retract bristles for different surfaces.
  - For narrow gaps, corners, and edges, attach the crevice tool.
  - For upholstery, curtains, or delicate surfaces, use the upholstery brush.
4. **Cord Rewind:** After use, unplug the vacuum cleaner from the outlet. Press the Cord Rewind Button (usually marked with a power cord symbol) to automatically retract the power cord into the unit. Guide the cord to prevent whipping.

## 6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 6.1 Emptying the Dust Container

1. Ensure the vacuum cleaner is unplugged.
2. Locate the dust container release button/latch, usually on the top or front of the main unit.
3. Press the button and carefully remove the dust container.
4. Position the dust container over a waste bin. Open the bottom lid of the container (if applicable) or detach the top section to empty the collected dust and debris.
5. Close the container securely and reattach it to the main unit until it clicks into place.

### 6.2 Cleaning Filters

Your vacuum cleaner is equipped with multiple filters that require regular cleaning to maintain suction power and air quality.

- **Pre-Motor Filter:** This filter is typically located inside or around the dust container. Remove it and tap off loose dirt. If washable, rinse under cold running water until the water runs clear. Allow to air dry completely for at least 24 hours before reinserting. Do not use a dryer or heat.
- **HEPA/Exhaust Filter:** This filter is usually located at the rear or side of the vacuum cleaner. Check your specific model for instructions on removal and cleaning. Some HEPA filters are washable, while others are designed for replacement only. Follow manufacturer guidelines.

*Note: Never operate the vacuum cleaner without all filters properly installed and completely dry.*

### 6.3 General Cleaning and Storage

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the floor brush and accessories for tangled hair or debris and remove them.
- Store the vacuum cleaner in a cool, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

| Problem                             | Possible Cause  | Solution  |
|-------------------------------------|---|---|
| Vacuum cleaner does not turn on.    | Not plugged in; no power at outlet; power button not pressed.     | Check plug connection; test outlet with another appliance; press power button firmly.   |
| Loss of suction power.              | Dust container full; filters clogged; hose/attachments blocked.   | Empty dust container; clean/replace filters; check hose and attachments for blockages and remove.                                       |
| Unusual noise or motor overheating. | Blockage in hose/brush; filters severely clogged; motor overload. | Turn off and unplug. Check for and remove blockages. Clean filters. Allow motor to cool down for at least 30 minutes before restarting. |

| Problem               | Possible Cause                          | Solution   |
|-----------------------|---|--|
| Cord does not rewind. | Cord is tangled or mechanism is jammed. | Gently pull out a small section of the cord and press the rewind button again. Guide the cord manually if necessary. |

If the problem persists after trying these solutions, please contact SOLAC customer support or an authorized service center.

## 8. TECHNICAL SPECIFICATIONS


- **Model:** AS3103
- **Brand:** SOLAC
- **Type:** Bagless Cylinder Vacuum Cleaner
- **Power:** 600 W
- **Energy Class:** AAA
- **Dimensions (L x W x H):** Approximately 50 x 50 x 28 cm
- **Weight:** Approximately 3.09 kg
- **ASIN:** B07TB2Q1FD






## 9. WARRANTY AND SUPPORT

Your SOLAC Enara 600W AS3103 Bagless Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or warranty claims, please contact SOLAC customer service through their official website or the contact information provided in your warranty documentation. Always have your model number (AS3103) and proof of purchase ready when contacting support.

### Related Documents - AS3103

|   |   |
|---|---|
| <div><br/>CP7304</div> <div><p>CONSEJOS Y ADVERTENCIAS DE SEGURIDAD<br/>SAFETY ADVICE AND WARNINGS<br/>CONSEILS ET AVERTISSEMENTS DE SECURITE<br/>RATSCHLÄGE UND SICHERHEITSHINWEISE<br/>CONSIGLII E AVVERTIMENTI DI SICUREZZA<br/>VELOŠNOSTI VARNOSTNI PRAVILNIKI<br/>BEZPEČNOSTNÉ UPOZORNENIA A DOPORUČENIA<br/>POKADY I OSTROZBAWA DOTYCZĄCE BEZPIECZEŃSTWA<br/>BEZPEČNOSTNÉ POKYNY A VÝSTRAHY<br/>BEZOPASNIŠTVO I INŠI POKRETI<br/>СОВЕТЫ И ПРЕДУПРЕЖДЕНИЯ<br/>RECOMMENDATIONS AND SAFETY INSTRUCTIONS<br/>تعليمات وتحذيرات الأمان</p></div> | <p><a href="#">Manual de Instrucciones Solac CP7304: Guía de Uso y Seguridad</a></p> <p>Guía completa para el uso seguro y eficiente del cortapelos Solac CP7304. Incluye advertencias de seguridad, instrucciones de funcionamiento, especificaciones técnicas y consejos de ecología.</p> |
|---|---|

|  |   |
|--|---|
|  <p>More Brave</p> <p>solac</p>   | <p><a href="#">Solac More Brave Vacuum Cleaner User Manual</a></p> <p>Comprehensive user manual for the Solac More Brave vacuum cleaner, detailing parts, operation, safety, maintenance, filter changes, and troubleshooting.</p>  |
|  <p>FAST 2200 IONIC</p> <p>solac</p>                                      | <p><a href="#">Solac FAST 2200 IONIC Hair Dryer: User Manual and Features</a></p> <p>Discover the Solac FAST 2200 IONIC hair dryer. This guide provides essential information on its operation, features like ionic technology and cool shot, safety precautions, and maintenance for optimal hair styling.</p>                                 |
|  <p>Turbobot Power 29.6V<br/>Turbobot Digital Flex 29.6V</p> <p>solac</p> | <p><a href="#">Solac Turbobat Digital Flex 29.6V User Manual</a></p> <p>Comprehensive user manual for the Solac Turbobat Digital Flex 29.6V cordless vacuum cleaner, detailing setup, usage, maintenance, and troubleshooting.</p>  |
|  <p>CE4480<br/>CE4482<br/>CE4483</p> <p>solac</p>                       | <p><a href="#">Solac CE4480/CE4482/CE4483 Espresso Machine User Manual</a></p> <p>Comprehensive guide to operating and maintaining your Solac espresso machine, covering setup, brewing, steaming, cleaning, and troubleshooting for models CE4480, CE4482, and CE4483.</p>   |
|  <p>BUON PIATTI 3 IN 1</p> <p>solac</p>                                 | <p><a href="#">Solac Buon Piatti 3 in 1 Sandwich Maker User Manual</a></p> <p>Discover the Solac Buon Piatti 3 in 1, a versatile kitchen appliance for making sandwiches, grilling, and waffles. This user manual provides essential operating instructions, safety guidelines, and maintenance tips for optimal performance and longevity.</p> |