

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ozeri](#) /

› [Ozeri Travel Series USB Rechargeable Electric Wine Bottle Opener \(Model OW12A\) Instruction Manual](#)

Ozeri OW12A

Ozeri Travel Series USB Rechargeable Electric Wine Bottle Opener

Model: OW12A

Brand: Ozeri

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Ozeri Travel Series USB Rechargeable Electric Wine Bottle Opener. This device is designed to effortlessly remove natural and synthetic corks from wine bottles. Please read all instructions carefully before first use and retain this manual for future reference.





Image: The Ozeri Travel Series USB Rechargeable Electric Wine Bottle Opener.

SAFETY INFORMATION

- Keep the device out of reach of children.
- Do not immerse the opener in water or other liquids.
- Avoid touching the corkscrew mechanism directly.
- Use only the provided USB charging cable and adapter.
- Do not attempt to open bottles with damaged or broken necks.
- Store the opener in a dry place when not in use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Ozeri Travel Series Electric Wine Bottle Opener
- Micro USB Charging Cable
- Wall Adapter
- Foil Cutter
- Instruction Manual (this document)



Image: All components included with the Ozeri Electric Wine Bottle Opener.

PRODUCT OVERVIEW

The Ozeri Travel Series Electric Wine Bottle Opener features a sleek stainless steel design with a transparent lower section to observe the cork removal process. It is equipped with a simple push-button operation for ease of use.

- **Upper Button:** Activates the corkscrew to remove the cork.
- **Lower Button:** Activates the corkscrew to eject the cork.
- **Transparent Shell:** Allows visibility of the cork removal.
- **Charging Port:** Located at the back or bottom for USB cable connection.





Ozeri



Image: Detailed view of the Ozeri Electric Wine Bottle Opener's corkscrew.

CHARGING THE DEVICE

Before first use, fully charge the wine opener. A full charge can open up to 80 bottles.

1. Connect the Micro USB cable to the charging port on the wine opener.
2. Connect the other end of the USB cable to the provided wall adapter.
3. Plug the wall adapter into a standard electrical outlet.
4. The indicator light will illuminate during charging. Once fully charged, the light may change color or turn off, depending on the model.

OPERATING INSTRUCTIONS

Follow these steps to open a wine bottle:

1. **Remove Foil Seal:** Use the included foil cutter to remove the foil seal from the top of the wine bottle. Place the cutter on top of the bottle, squeeze firmly, and twist to cut the foil.



Image: Using the foil cutter.

2. **Position the Opener:** Place the electric wine opener vertically on top of the wine bottle, ensuring the corkscrew is centered over the cork. Hold the bottle firmly with one hand and the opener with the other.





Image: Positioning the opener on the bottle.

3. **Remove the Cork:** Press and hold the **lower button**. The corkscrew will rotate, penetrate the cork, and automatically pull it out of the bottle. Release the button once the cork is fully removed.

4. **Eject the Cork:** Once the cork is removed from the bottle, lift the opener away. To eject the cork from the opener, press and hold the **upper button**. The corkscrew will rotate in the opposite direction, releasing the cork.





Image: Cork removed from the bottle and attached to the opener.

Demonstration Video

Your browser does not support the video tag.

Video: Official product video demonstrating the Ozeri Travel Series USB Rechargeable Electric Wine Opener in use, showing cork removal and ejection.

MAINTENANCE AND CARE

- Clean the exterior of the opener with a soft, damp cloth. Do not use abrasive cleaners.
- Ensure the corkscrew is free of any cork fragments after each use.
- Do not lubricate the corkscrew or any other parts.
- Store the opener in its original packaging or a safe, dry place to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Opener does not turn on.	Battery is depleted.	Charge the device fully.
Cork is not removed.	Opener not centered or held firmly.	Ensure the opener is centered and held straight on the bottle.
Cork breaks during removal.	Old or fragile cork; opener not straight.	Ensure the opener is perfectly vertical. For fragile corks, proceed slowly.
Cork cannot be ejected.	Cork fragments obstructing mechanism.	Inspect and carefully remove any visible cork fragments.

SPECIFICATIONS

- **Model Number:** OW12A
- **Material:** Stainless Steel
- **Color:** Stainless Steel
- **Item Weight:** 0.6 Pounds
- **Product Dimensions:** 1.8"L x 1.8"W

- **Power Source:** USB Rechargeable Lithium Battery
- **UPC:** 815817013071

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Ozeri website. Keep your purchase receipt as proof of purchase.