

## Soundmaster UR2045SI

# Soundmaster Highline UR2045SI DAB+ FM-RDS Under-Cabinet Kitchen Radio User Manual

Model: UR2045SI | Brand: Soundmaster

## 1. INTRODUCTION

---

Thank you for choosing the Soundmaster Highline UR2045SI Under-Cabinet Kitchen Radio. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before use and keep it for future reference.

The UR2045SI is a versatile under-cabinet radio designed for kitchen environments, featuring DAB+ and FM-RDS radio, Bluetooth streaming, hands-free calling, an integrated LED work light, and multiple timer functions.

### Key Features:

- DAB+ and FM-RDS stereo radio with 20 preset stations.
- Bluetooth for audio streaming and hands-free calling.
- Integrated LED work light on the underside.
- Equalizer with various sound presets (Flat, Rock, Classic, Jazz, Pop, Bass, My EQ).
- Dual alarm with weekend function.
- Automatic sleep timer and SDA (Appointment Reminder) timer.
- Kitchen timer, adjustable up to 24 hours in 1-minute increments.
- Display with Auto Dim function and brightness adjustment.
- Powerful sound output with 2 x 5W RMS.
- Under-cabinet installation with drilling template, screws, and mounting bracket.

## 2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the device or injury to yourself:

- Read all instructions before operating the device.
- Do not expose the device to dripping or splashing water. Keep it away from liquids.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Ensure the mounting surface is sturdy enough to support the weight of the radio.

### 3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact your retailer immediately.

- Soundmaster Highline UR2045SI Kitchen Radio
- AC Power Adapter
- Drilling Template
- Mounting Screws
- Mounting Bracket
- User Manual (this document)

### 4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Soundmaster UR2045SI radio.



Figure 4.1: Front view of the Soundmaster UR2045SI under-cabinet radio, displaying its controls and digital screen.



Figure 4.2: Underside view of the Soundmaster UR2045SI, highlighting the integrated LED work light.



Figure 4.3: Close-up of the radio's display, showing station information in DAB mode.

### Control Panel Layout:

- **On/Mode Button:** Powers the unit on/off and switches between operating modes (DAB, FM, Bluetooth).
- **Volume - / Volume +:** Adjusts the audio volume.
- **Preset - / Preset +:** Navigates through preset radio stations.
- **Light Button:** Controls the LED work light.
- **Menu Button:** Accesses the system menu for settings.
- **MEM (Memory) Button:** Saves or recalls radio presets.
- **Info Button:** Displays additional information (e.g., DAB station details, RDS text).
- **AMS (Automatic Scan) Button:** Initiates automatic station scanning.
- **Enter Button:** Confirms selections in the menu.
- **Timer/Sleep Button:** Activates sleep timer or other timer functions.
- **Microphone (MIC):** For hands-free calling.

- **Display:** Shows current mode, time, station information, etc.

## 5. SETUP

---

### 5.1. Under-Cabinet Installation

The UR2045SI is designed for under-cabinet mounting. Follow these steps for secure installation:

1. **Choose Location:** Select a suitable flat surface under a kitchen cabinet, ensuring enough space for operation and ventilation. Avoid areas directly above heat sources or sinks.
2. **Use Drilling Template:** Place the provided drilling template against the underside of the cabinet where you intend to mount the radio. Mark the drilling points accurately.
3. **Drill Holes:** Carefully drill pilot holes at the marked positions.
4. **Attach Mounting Bracket:** Secure the mounting bracket to the cabinet using the provided screws.
5. **Mount the Radio:** Align the radio with the mounting bracket and slide it into place until it clicks securely. Ensure it is firmly attached.
6. **Alternative Mounting (Powerstrips):** Depending on the cabinet material, the UR2045SI (weighing just over 1kg) can also be mounted using strong adhesive strips (e.g., Powerstrips, not included) without drilling. Ensure the adhesive strips are rated for the radio's weight and the surface material.

### 5.2. Power Connection

Connect the supplied AC power adapter to the DC IN port on the radio and then plug it into a standard wall outlet. The radio will power on automatically or enter standby mode.

### 5.3. Initial Setup (Time, Date, Language)

Upon first power-on, you may be prompted to set the language, time, and date. Follow the on-screen instructions and use the navigation buttons (e.g., Preset +/-) and Enter button to make selections.

- **Automatic Time Synchronization:** In DAB+ mode, the radio will automatically synchronize the time and date with the broadcast signal.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Power On/Off and Mode Selection

- Press the **On/Mode** button to turn the radio on or off.
- While the radio is on, press the **On/Mode** button repeatedly to cycle through available modes: DAB+, FM-RDS, Bluetooth.

### 6.2. DAB+ Radio Operation

1. Switch to DAB+ mode using the **On/Mode** button.
2. The radio will automatically scan for available DAB+ stations upon first use. To initiate a manual scan, press the **AMS** button.
3. Use the **Preset - / Preset +** buttons to navigate through the list of available stations.
4. Press **Enter** to select a station.
5. To save a station as a preset: Tune to the desired station, press and hold the **MEM** button, use **Preset - / Preset +** to select a preset number (1-20), then press **Enter** to confirm.

6. To recall a preset: Briefly press the **MEM** button, use **Preset - / Preset +** to select the preset number, then press **Enter**.
7. Press the **Info** button to view additional information such as program type, signal strength, and scrolling text.

### 6.3. FM-RDS Radio Operation

1. Switch to FM-RDS mode using the **On/Mode** button.
2. To automatically scan for stations, press the **AMS** button. The radio will scan and save strong stations.
3. To manually tune, press and hold **Preset - / Preset +** to scan for the next available station, or briefly press to fine-tune the frequency.
4. Saving and recalling presets works similarly to DAB+ mode (refer to section 6.2).
5. The **Info** button displays RDS information (station name, program type, etc.) when available.

### 6.4. Bluetooth Connectivity

1. Switch to Bluetooth mode using the **On/Mode** button. The display will show "PAIRING" or "BLUETOOTH".
2. On your mobile device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "UR2045SI" from the list of devices. Once paired, the radio will confirm the connection.
4. You can now stream audio from your device to the radio. Use your mobile device to control playback (play/pause, skip tracks) and the radio's volume controls.
5. **Hands-Free Function:** When a call comes in while connected via Bluetooth, you can answer it using the radio's controls (e.g., **Enter** button) and speak through the integrated microphone.

### 6.5. LED Work Light

- Press the **Light** button to turn the LED work light on or off.
- Some models may offer multiple brightness levels; press the **Light** button repeatedly to cycle through them.

### 6.6. Equalizer Settings

Adjust the sound profile to your preference:

1. Press the **Menu** button.
2. Navigate to "Equalizer" or "EQ" using **Preset - / Preset +** and press **Enter**.
3. Select from presets like Flat, Rock, Classic, Jazz, Pop, Bass, or My EQ (for custom settings) using **Preset - / Preset +** and press **Enter**.

### 6.7. Alarm Functions

The radio features a dual alarm with a weekend function.

1. Press the **Menu** button and navigate to "Alarm Settings".
2. Select Alarm 1 or Alarm 2.
3. Set the alarm time, source (Buzzer, DAB, FM), volume, and frequency (Daily, Weekdays, Weekends, Once).
4. Confirm settings with **Enter**.

### 6.8. Sleep Timer

The sleep timer allows the radio to turn off automatically after a set period.

- Press the **Timer/Sleep** button repeatedly to cycle through available sleep times (e.g., 15, 30, 45, 60 minutes, Off).

## 6.9. SDA Timer (Appointment Reminder)

This function allows you to set a reminder for an appointment.

1. Press the **Menu** button and navigate to "SDA Timer".
2. Set the desired reminder time and duration.
3. Confirm with **Enter**.

## 6.10. Kitchen Timer

Use the kitchen timer for cooking or other timed tasks.

1. Press the **Menu** button and navigate to "Kitchen Timer".
2. Set the desired time up to 24 hours in 1-minute increments using **Preset - / Preset +**.
3. Press **Enter** to start the timer. An audible alert will sound when the time expires.

## 6.11. Display Settings

Adjust the display brightness and activate the Auto Dim function.

1. Press the **Menu** button and navigate to "Display Settings".
2. Select "Brightness" to adjust the display intensity.
3. Select "Auto Dim" to enable or disable automatic dimming of the display in low light conditions.

# 7. MAINTENANCE

---

## 7.1. Cleaning

- Always unplug the radio from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For stubborn marks, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive pads.
- Do not allow water or liquids to enter the device.

## 7.2. Care and Storage

- Avoid exposing the radio to extreme temperatures, direct sunlight, or high humidity.
- If the radio will not be used for an extended period, unplug it from the power outlet.

# 8. TROUBLESHOOTING

---

If you encounter issues with your radio, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the radio and a working power outlet.
No sound	Volume too low or muted; incorrect input mode.	Increase volume. Check if the correct mode (DAB, FM, Bluetooth) is selected.
Poor radio reception (DAB/FM)	Weak signal; interference.	Perform an automatic scan (AMS). Try repositioning the radio slightly. Check for local DAB+ coverage (e.g., <a href="http://rtr.at/senderkataster">rtr.at/senderkataster</a> for Austria).
Bluetooth pairing failed	Bluetooth not enabled on device; radio not in pairing mode; device too far.	Ensure Bluetooth is enabled on your mobile device and the radio is in Bluetooth pairing mode. Move devices closer.
Display not visible or too dim	Brightness setting too low; Auto Dim active.	Adjust display brightness in the menu. Disable Auto Dim if preferred.

If the problem persists after trying these solutions, please contact customer support.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	UR2045SI
Brand	Soundmaster
Connectivity Technology	Bluetooth
Tuner Technology	DAB+
Supported Radio Bands	DAB+, FM-RDS
Special Features	Integrated Clock, Alarm and Kitchen Timer, Bluetooth Streaming, LED Work Light, Equalizer
Power Source	Corded Electric (AC Adapter included)
Output Power	2 x 5W RMS (10 Watts Max)
Audio Output Mode	Stereo
Display Type	LED
Product Dimensions (L x W x H)	26 x 16 x 5 cm (approx. 10.2 x 6.3 x 2 inches)
Item Weight	690 Grams (approx. 1.5 lbs)
Compatible Devices	Smartphone, Tablet
Color	Silver

## 10. WARRANTY INFORMATION

---

The Soundmaster Highline UR2045SI comes with a **1-year warranty** on spare parts availability from the date of purchase. Please retain your proof of purchase for any warranty claims.

This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

For detailed warranty terms and conditions, please refer to the documentation provided with your purchase or contact Soundmaster customer support.

## 11. SUPPORT

---

If you require further assistance, have questions not covered in this manual, or need to report a fault, please contact Soundmaster customer support.

- **Manufacturer Website:** [www.soundmaster.de](http://www.soundmaster.de) (Please check for local support contact details)
- **Retailer Support:** Contact the retailer from whom you purchased the product for initial support and warranty claims.

When contacting support, please have your product model number (UR2045SI) and proof of purchase readily available.