Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Oster /
- > Oster Blender with FoodSaver Vacuum Sealing System Instruction Manual

Oster BLSTAB-CB0-000

Oster Blender with FoodSaver Vacuum Sealing System Instruction Manual

Model: BLSTAB-CB0-000

Brand: Oster

PRODUCT OVERVIEW

The Oster Blender with FoodSaver™ Vacuum Sealing System is designed to create nutritious and longer-lasting smoothies and blended drinks. This system utilizes vacuum blending technology to remove oxygen from the jar before blending, which helps preserve vitamins and nutrients and keeps contents fresh for up to 24 hours. This process also results in a smoother, more colorful blend with less foam and separation.



Image: Front view of the Oster Blender with FoodSaver Vacuum Sealing System, showcasing its sleek design and control panel.

KEY FEATURES

- **Health Preservation:** Vacuum blending preserves more vitamins and nutrients compared to traditional blending.
- Extended Freshness: Removes oxygen before blending, keeping smoothies and blended drinks fresh for up to

24 hours.

- FoodSaver Vacuum Sealing System: Creates a smoother, more colorful blend free of bubbles and foam, with less separation.
- 5 Pre-Programmed Settings: Includes Smoothie and Food Chop for simplified blending.
- Powerful 1000-Watt Motor: Efficiently crushes ice and blends frozen fruits and vegetables.
- 24-oz. Vacuum Compatible Storage Cup: Allows vacuum sealing and storage of drinks for up to 24 hours or on-the-go use.
- Durability: Life-tested for up to 6,500 smoothies.

COMPONENTS

- · Blender Base with Control Panel
- Blender Jar with Lid
- FoodSaver Vacuum Sealing Arm
- 24 oz Vacuum Compatible Blend-N-Go Cup



Image: Side view of the Oster Blender, highlighting the integrated FoodSaver vacuum sealing arm.



Image: The 24-ounce vacuum-compatible Blend-N-Go cup, designed for convenient storage and portability.

SETUP

1. Unpacking: Carefully remove all components from the packaging. Retain packaging for future storage or

transport.

- 2. **Cleaning:** Before first use, wash the blender jar, lid, and Blend-N-Go cup in warm, soapy water. Rinse thoroughly and dry. Wipe the blender base with a damp cloth. Do not immerse the base in water.
- 3. **Assembly:** Place the blender base on a stable, flat surface. Ensure the power cord is unplugged. Securely place the blender jar onto the base.
- 4. **Power Connection:** Plug the power cord into a standard 120-volt electrical outlet.

OPERATING INSTRUCTIONS

General Blending

- 1. **Add Ingredients:** Place desired ingredients into the blender jar. Ensure ingredients do not exceed the maximum fill line.
- 2. Secure Lid: Place the lid firmly on the blender jar.
- 3. **Select Speed:** Choose the desired blending speed (Low, Med, High) or a pre-programmed setting (Smoothie, Food Chop) using the control panel.
- 4. Start Blending: Press the Start/Stop button to begin blending.
- 5. **Stop Blending:** Press the Start/Stop button again to stop blending, or allow the pre-programmed cycle to complete.

Vacuum Blending

- 1. **Prepare Ingredients:** Add ingredients to the blender jar.
- 2. **Attach Vacuum Arm:** Ensure the FoodSaver vacuum sealing arm is properly aligned and engaged with the blender jar lid.
- 3. **Select Vacuum Mode:** Choose "Vacuum Storage" to only vacuum seal, or "Vac+Blend Auto" for automatic vacuuming followed by blending.
- 4. **Start Cycle:** Press the Start/Stop button. The system will remove air from the jar before blending (if "Vac+Blend Auto" is selected).
- 5. Remove Jar: Once the cycle is complete, disengage the vacuum arm and carefully remove the blender jar.

Using the Blend-N-Go Cup

- 1. **Fill Cup:** Add ingredients to the 24-oz. Blend-N-Go cup.
- 2. Attach to Blender: Securely attach the Blend-N-Go cup to the blender base.
- 3. Vacuum Seal (Optional): Use the vacuum sealing arm to remove air from the cup for extended freshness.
- 4. Store or Transport: Once sealed, the cup can be stored in the refrigerator or taken on the go.



Image: The Oster Blender on a kitchen counter, filled with fresh ingredients, ready for blending.



Image: The Oster Blender with a freshly blended smoothie, ready to be poured into a glass.

MAINTENANCE AND CLEANING

- 1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
- 2. **Blender Jar and Lid:** Wash the blender jar and lid immediately after each use. They are dishwasher safe (top rack recommended) or can be hand-washed with warm, soapy water.
- 3. Blender Base: Wipe the blender base with a damp cloth. Do not immerse the base in water or any other liquid.
- 4. **Vacuum Sealing Arm:** Wipe the vacuum sealing arm with a damp cloth. Ensure no food particles are lodged in the vacuum port.
- 5. **Storage:** Store the blender in a dry, safe place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outage; jar not properly seated.	Check power connection; ensure jar is securely locked onto the base.
Vacuum seal not holding.	Lid not properly sealed; vacuum arm not engaged; seal dirty.	Ensure lid is firmly closed; check vacuum arm connection; clean lid seal and vacuum port.
Ingredients not blending smoothly.	Too little liquid; too many ingredients; ingredients too large.	Add more liquid; reduce ingredient quantity; cut ingredients into smaller pieces.

SPECIFICATIONS

• Brand: Oster

• Model Number: BLSTAB-CB0-000

• Color: Brushed Nickel

• Special Feature: Manual controls, Vacuum Blending

• Capacity: 1.5 Pounds (Blender Jar), 24 oz (Blend-N-Go Cup)

• Product Dimensions: 15"D x 9.3"W x 19.3"H

• Power Source: Corded Electric

• Number of Speeds: 3 (Low, Med, High)

• Voltage: 120 Volts

• Item Weight: 11.18 pounds

• UPC: 053891126564

WARRANTY AND SUPPORT

The Oster Blender with FoodSaver Vacuum Sealing System comes with a 5-year satisfaction guarantee. For detailed warranty information, product registration, or technical support, please visit the official Oster website or contact customer service.

For additional support, you may refer to the official user manual PDF: User Manual (PDF)

© 2024 Oster. All rights reserved.



Oster BLSTDG Series Blender User Manual and Recipes

Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.



Oster BL660 Owner's Guide: Refurbished Product Information and Support

Comprehensive owner's guide for the Oster BL660 blender, detailing accessory variations, important notes on refurbished units, and product support contact information.



Oster Easy-To-Use Blender with 5 Speeds User Manual

User manual for the Oster Easy-To-Use Blender with 5 Speeds, providing safety instructions, operating guides, cleaning tips, recipes, and warranty information.



Oster Pro Series Blender with High Performance Motor User Manual

User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPG-STO), detailing safety precautions, product features, operation instructions, care and maintenance, and warranty information.



Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar User Manual

User manual for the Oster Easy-to-Clean Blender with Dishwasher-Safe Glass Jar (BLSTBCG Series), covering safety, operation, cleaning, and recipes. Visit www.oster.com for more information.



Oster Pro Series Blender with High Performance Motor User Manual

User manual for the Oster Pro Series Blender with High Performance Motor (Model BLSTEPH), providing detailed instructions on safety, operation, assembly, cleaning, maintenance, and warranty information.