

[Manuals.plus](#) /

› [TARMAK](#) /

› Tarmak B700 Pro Basketball Basket User Manual

TARMAK 8529820

Tarmak B700 Pro Basketball Basket User Manual

Model: 8529820

1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Tarmak B700 Pro Basketball Basket. Designed for both adults and children, this basket offers adjustable playing heights from 2.40 meters to the official 3.05 meters, making it suitable for various skill levels and outdoor use.



Figure 1: Full view of the Tarmak B700 Pro Basketball Basket.

Key Features:

- **Adjustable Height:** Manually adjustable to 7 heights, ranging from 2.40m to 3.05m.
- **Mobility:** Equipped with two front wheels for easy relocation.
- **Stability:** Features a 143-liter weighted base, fillable with water or sand.
- **Durability:** Designed for dunking with a flexing hoop mechanism.
- **Bounce Quality:** 3mm polycarbonate backboard provides excellent rebound.

2. SAFETY INFORMATION

Read and understand all instructions before assembly and use. Failure to follow these safety guidelines may result in injury or damage to the product.

- Ensure the base is fully weighted with water or sand (143 liters capacity) before use to prevent tipping.
- Regularly inspect all bolts, nuts, and connections for tightness. Tighten as necessary.

- Do not hang on the rim or backboard, except for intended dunking actions within the product's design limits. Excessive force can cause damage or injury.
- Supervise children during play.
- Do not attempt to adjust the height while someone is hanging on the rim or standing directly underneath the backboard.
- Position the basketball basket on a level, stable surface.
- Keep hands and fingers clear of moving parts during height adjustment.

3. PACKAGE CONTENTS AND ASSEMBLY

The Tarmak B700 Pro Basketball Basket is delivered in a single package. Assembly typically requires two people and takes approximately 90 minutes.



Figure 2: Product packaging box with dimensions (147 cm x 83 cm x 29 cm).

Assembly Steps:

1. Unpack all components and verify against the parts list provided in the separate assembly guide (not included in this document).
2. Assemble the pole sections according to the manufacturer's instructions.
3. Attach the backboard and hoop assembly to the pole.
4. Secure the pole to the base.
5. Fill the base with 143 liters of water or sand to ensure maximum stability.
6. Perform a final check to ensure all connections are secure and the basket is stable.



Figure 3: Weighted base, designed for filling with water or sand for stability.

4. OPERATING INSTRUCTIONS

Height Adjustment:

The Tarmak B700 Pro Basketball Basket allows for quick, manual height adjustment to 7 different positions, ranging from 2.40 meters to 3.05 meters (official height). To adjust the height:

1. Ensure no one is near or under the basket.
2. Locate the height adjustment mechanism on the pole.
3. Follow the specific instructions provided in the assembly guide for safely disengaging and re-engaging the locking pins or levers to set the desired height.
4. Confirm the mechanism is securely locked in place before use.



Figure 4: Manual height adjustment mechanism.

Moving the Basket:

The basket is designed for good mobility thanks to its two front wheels. To move the basket:

1. Ensure the base is securely weighted.
2. Carefully tilt the basket forward until the front wheels make contact with the ground.
3. Roll the basket to the desired location.
4. Gently lower the basket back onto its full base for stability.



Figure 5: Front wheels for easy mobility.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your basketball basket.

- **Check Fasteners:** Periodically inspect all bolts, nuts, and screws. Tighten any loose fasteners to maintain structural integrity.
- **Base Water/Sand Level:** Ensure the base remains adequately filled, especially after prolonged use or exposure to weather. Refill as needed.
- **Cleaning:** Clean the backboard and pole with a mild soap and water solution. Avoid abrasive cleaners that could damage the surfaces.
- **Net Inspection:** Check the net for wear and tear. Replace if damaged to ensure proper play.
- **Winter Storage:** If storing outdoors in freezing temperatures, consider emptying the water from the base to prevent ice expansion damage.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your basketball basket.

- **Basket feels unstable:** Ensure the base is completely filled with water or sand. Check that all bolts and connections are tightened. Verify the basket is on a level surface.
- **Difficulty adjusting height:** Ensure the adjustment mechanism is clean and free of debris. Apply a silicone-based lubricant if movement is stiff. Do not force the mechanism.
- **Backboard appears scratched or dull:** Clean with a soft cloth and mild soap. Avoid harsh chemicals. Minor scratches on polycarbonate are normal with use.
- **Hoop does not flex properly:** Inspect the spring mechanism for any obstructions or damage. Ensure all components are correctly assembled as per the original instructions.

7. SPECIFICATIONS



Figure 6: Dimensional overview of the Tarmak B700 Pro Basketball Basket.

Feature	Detail
Brand	TARMAK
Model Number	8529820
Material	Alloy Steel, Metal, Polycarbonate (PC), Polyethylene (PE)
Color	Black
Item Weight	81.36 Kilograms
Indoor/Outdoor Usage	Indoor, Outdoor
Special Feature	Adjustable Height
Mounting Type	Floor Mount
Target Audience	Unisex Adult
Minimum Height	2.4 Metres
Maximum Height Recommendation	3.05 Metres
Assembly Required	Yes
Base Capacity	143 Liters (water or sand)
Backboard Material	3mm Polycarbonate

8. WARRANTY AND SUPPORT

Warranty:

This Tarmak B700 Pro Basketball Basket comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use and service conditions. Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, spare parts, or warranty inquiries, please contact the manufacturer or your retailer. Have your model number (8529820) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question