

[manuals.plus](#) /› [hansgrohe](#) /› [Hansgrohe ShowerSelect Flush-Mounted Thermostat 15763340 User Manual](#)**hansgrohe 15763340**

Hansgrohe ShowerSelect Flush-Mounted Thermostat 15763340 User Manual

Model: 15763340 | Brand: [hansgrohe](#)

1. PRODUCT OVERVIEW

The Hansgrohe ShowerSelect Flush-Mounted Thermostat 15763340 is designed for controlling two shower functions, offering precise temperature regulation and ease of use. Its flush-mounted design integrates seamlessly into modern bathroom aesthetics, providing more space within the shower area. This thermostat features a durable brushed black chrome finish and incorporates Hansgrohe's Select and SafetyStop technologies for enhanced comfort and safety.


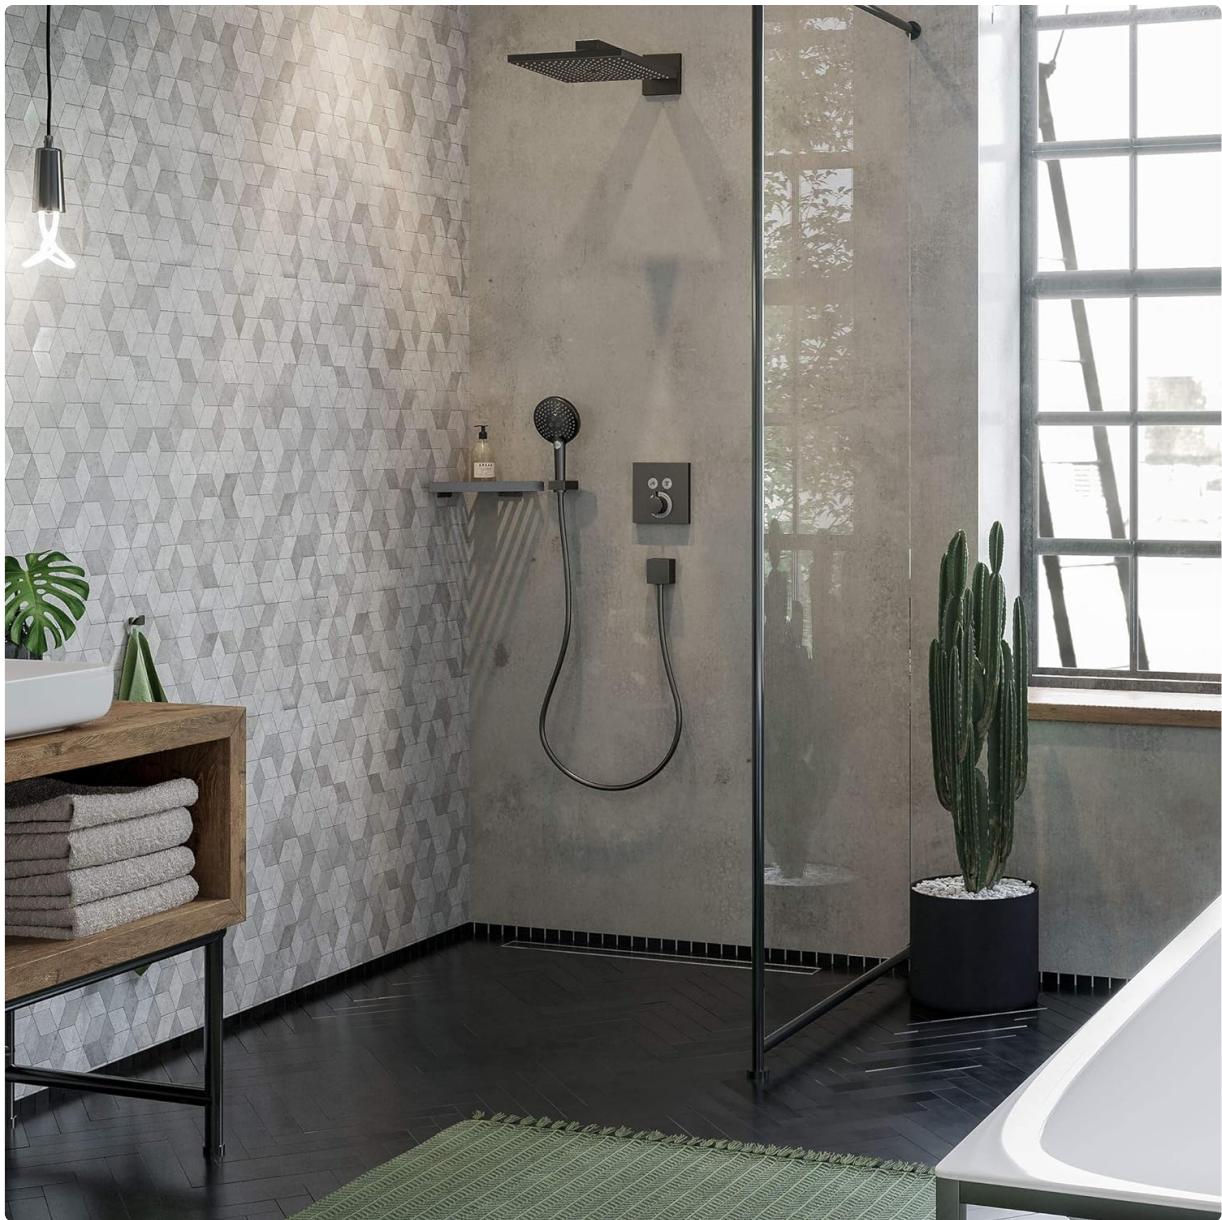


Image 1.1: Hansgrohe ShowerSelect Thermostat in a contemporary shower setting.



chrome

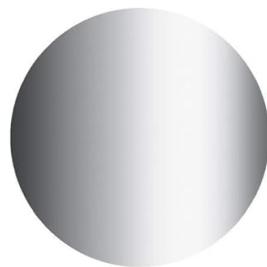


**brushed
bronze**




**brushed black
chrome**



matte black

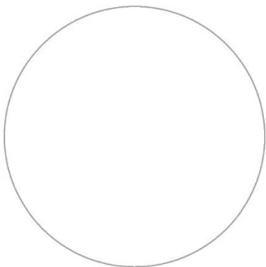

matte white

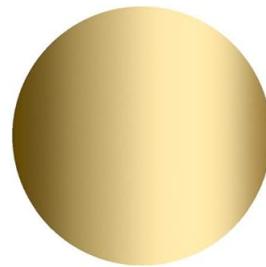

**polished gold
optic**

Available colours

Image 1.2: Various finish options for Hansgrohe ShowerSelect thermostats, including Brushed Black Chrome.

2. SETUP AND INSTALLATION

This thermostat is designed for flush-mounted wall installation. Proper installation requires the Hansgrohe iBox universal basic body (model #01800180), which is sold separately. The product package includes the functional block, instruction manual, mounting material, and the thermostat itself.

2.1 Required Components (Sold Separately)

- Hansgrohe iBox universal basic body (#01800180)

2.2 Installation Steps

1. Ensure the iBox universal basic body is correctly installed and secured within the wall according to its specific instructions.
2. Connect the functional block to the iBox universal, ensuring all water connections are sealed properly.
3. Mount the thermostat trim plate and handle assembly using the provided mounting material.
4. Verify all connections for leaks before final wall closure.

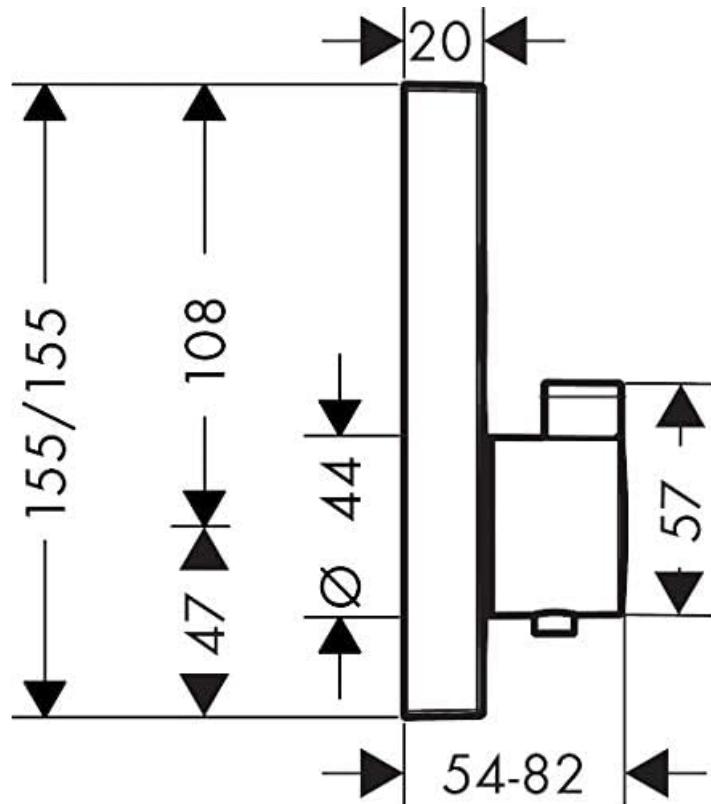


Image 2.1: Dimensional drawing of the Hansgrohe ShowerSelect Thermostat for installation planning. All measurements are in millimeters.

3. OPERATING INSTRUCTIONS

The ShowerSelect thermostat provides intuitive control over your shower experience with its ergonomic design and advanced features.

3.1 Water Flow Control (Select Function)

To activate or deactivate water flow for a specific shower function (e.g., head shower or hand shower), simply press the corresponding "Select" button. This allows for quick and easy switching between different water outlets or using them simultaneously.

Your browser does not support the video tag.

Video 3.1: Demonstration of the Hansgrohe Select function for easy water control.

3.2 Temperature Adjustment

The ergonomic twist handle allows you to adjust the water temperature precisely. Rotate the handle to increase or decrease the temperature. The thermostat maintains the desired temperature, protecting against sudden changes in water temperature.

3.3 SafetyStop Feature

For safety, the thermostat includes a SafetyStop button. Hot water above 40°C will only be released when this button is pressed, preventing accidental scalding. This feature is particularly useful in households with children.

Your browser does not support the video tag.

Video 3.2: Overview of Hansgrohe XXL Performance, demonstrating a wide and enveloping spray for an enhanced shower experience, often controlled by such thermostats.

4. MAINTENANCE

To ensure the longevity and appearance of your Hansgrohe ShowerSelect Thermostat, follow these maintenance guidelines:

- **Cleaning:** Clean the brushed black chrome finish regularly with a soft cloth and a mild, non-abrasive cleaning agent. Avoid using cleaners containing alcohol, acids, or abrasive particles, as these can damage the surface.
- **Descaling:** If limescale builds up around the buttons or handle, use a descaling agent specifically designed for bathroom fixtures, following the manufacturer's instructions. Rinse thoroughly with water after cleaning.
- **Inspection:** Periodically check for any signs of wear or damage. If any issues are observed, contact a qualified plumber or Hansgrohe customer service.

5. TROUBLESHOOTING

This section provides general guidance for common issues. For complex problems, professional assistance is recommended.

- **No Water Flow:** Check the main water supply. Ensure the "Select" button for the desired function is fully pressed.
- **Inconsistent Temperature:** Verify that the temperature handle is set correctly. If the issue persists, there might be a problem with the water heater or the thermostat's internal cartridge, requiring professional inspection.
- **Leaks:** Immediately turn off the water supply. Leaks often indicate loose connections or damaged seals. Contact a qualified plumber for repair.

6. SPECIFICATIONS

Brand	hansgrohe
Model Number	15763340
Color	Brushed Black Chrome
Material	Brass
Finish Type	Brushed
Number of Functions	2
Mounting Type	Wall Mount
Installation Type	Single Hole, Flush-Mounted
Special Features	SafetyStop, Select
Item Weight	1.34 Kilograms (2.95 pounds)
Product Dimensions	2.13 x 6.1 x 6.1 inches
Recommended Uses	Bathroom

7. WARRANTY INFORMATION

Hansgrohe offers a **5-year voluntary warranty protection** on this product, reflecting its commitment to high-quality manufacturing standards. For detailed terms and conditions of the warranty, please refer to the official

Hansgrohe warranty documentation or contact customer service.

8. CUSTOMER SUPPORT

Should you require further assistance, have questions regarding installation, operation, or maintenance, or need to claim warranty service, please contact Hansgrohe customer support. Visit the official Hansgrohe website for contact details and additional resources.

You can also visit the [Hansgrohe Store on Amazon](#) for more product information.