

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Walker Edison W584DHDHBDW

User Manual for Walker Edison Classic Glass Door Universal TV Stand

Model: W584DHDHBDW

PRODUCT OVERVIEW

The Walker Edison Classic Glass Door Universal TV Stand is designed to provide a stately and functional presence in your living space. This versatile storage console can serve as a kitchen credenza for cookbooks or party dishes, or as a TV stand. It features a timeless fretwork pattern on its four glass doors, along with practical elements such as cord management options, soft-close hinges, and adjustable shelves. This stand is designed to accommodate TVs up to 64 inches when measured diagonally.

Key Features:

- Constructed from durable wood materials.
- Assembled Dimensions: 33" H x 58" L x 16" W.
- Integrated cable management features for organized cord routing.
- Two adjustable shelves for customizable storage.
- Adjustable soft-close door hinges for smooth operation.
- Accommodates televisions up to 65 inches (measured diagonally).
- Ships ready-to-assemble with comprehensive step-by-step instructions.

SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use.

- **Caution:** Be cautious when handling soft-close hinges to avoid pinching.
- **Warning:** Assemble the product carefully to prevent tip-over risks. Ensure all fasteners are securely tightened.
- **Caution:** Handle glass doors with care to avoid breakage.

SETUP AND ASSEMBLY

This TV stand ships ready-to-assemble. Follow the included step-by-step instructions carefully for proper assembly. It is recommended to have at least two people for assembly due to the weight and size of the components.

1. Unpack all components and verify against the parts list in the separate instruction manual.
2. Identify all hardware and sort them for easy access.

3. Assemble the main frame according to the diagrams.
4. Install the adjustable shelves into desired positions.
5. Attach the glass doors, ensuring soft-close hinges are correctly aligned and adjusted.
6. Utilize the cable management features to route power and media cords neatly.
7. Place the TV stand in its final desired location, ensuring it is on a stable, level surface.

For detailed assembly steps, please refer to the [User Manual \(PDF\)](#).

OPERATING INSTRUCTIONS

The Walker Edison TV Stand is designed for straightforward use. Once assembled, it provides stable support for your television and ample storage for media devices and other items.

- **Placing your TV:** Carefully lift and place your television onto the top surface of the stand. Ensure the TV's base is fully supported and does not overhang the edges. This stand accommodates TVs up to 65 inches (measured diagonally).
- **Adjusting Shelves:** The interior shelves are adjustable. To change their height, remove the shelf, reposition the shelf pins to the desired holes, and then reinsert the shelf.
- **Using Glass Doors:** The four glass doors provide enclosed storage. They are equipped with soft-close hinges for quiet and gentle closing.
- **Cable Management:** Utilize the pre-drilled holes and cutouts on the back panel to route cables from your TV and media devices, keeping them organized and out of sight.

MAINTENANCE

Proper care will ensure the longevity and appearance of your TV stand.

- **Cleaning:** Wipe the surfaces with a dry cloth. For stubborn marks, use a slightly damp cloth and mild soap, then dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Glass Care:** Clean glass doors with a standard glass cleaner and a soft, lint-free cloth.
- **Hinge Adjustment:** If doors become misaligned, the soft-close hinges can be adjusted using a screwdriver. Refer to the full PDF manual for detailed instructions on hinge adjustment.
- **General Care:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Keep the stand away from direct sunlight and excessive moisture to prevent warping or fading.

TROUBLESHOOTING

If you encounter any issues with your TV stand, consider the following common solutions:

- **Wobbly Stand:** Ensure all cam locks and screws are fully tightened. Check that the stand is on a level surface; use shims if necessary.
- **Misaligned Doors:** Adjust the soft-close hinges. Small adjustments can often correct door alignment.
- **Damaged Parts:** If any parts are damaged during shipping or assembly, contact customer support for replacement parts.

For further assistance, please contact Walker Edison customer support.

SPECIFICATIONS

Brand	Walker Edison
Model Number	W584DHDHBDW
Assembled Dimensions (L x W x H)	58 x 16 x 33 inches
Item Weight	1 pounds <i>(Note: This seems to be a placeholder or incorrect weight, actual product is heavy)</i>
Material	Engineered Wood, Glass
Number of Shelves	4
Accommodates TV Size	Up to 65 inches (diagonally)
Color	Dark Walnut

WARRANTY & SUPPORT

Warranty: This product comes with a 30-day limited manufacturer warranty.

Customer Support: For questions, missing parts, or support, please contact Walker Edison directly. Replacement parts are available within 30 days of delivery.

Phone: 1-801-433-3008

Email: service@walkeredison.com


VISUAL GUIDE



Front view of the assembled TV stand, showcasing its dark walnut finish and glass-paned doors.



Another front view of the TV stand, highlighting the symmetrical design of the glass doors and open shelving.

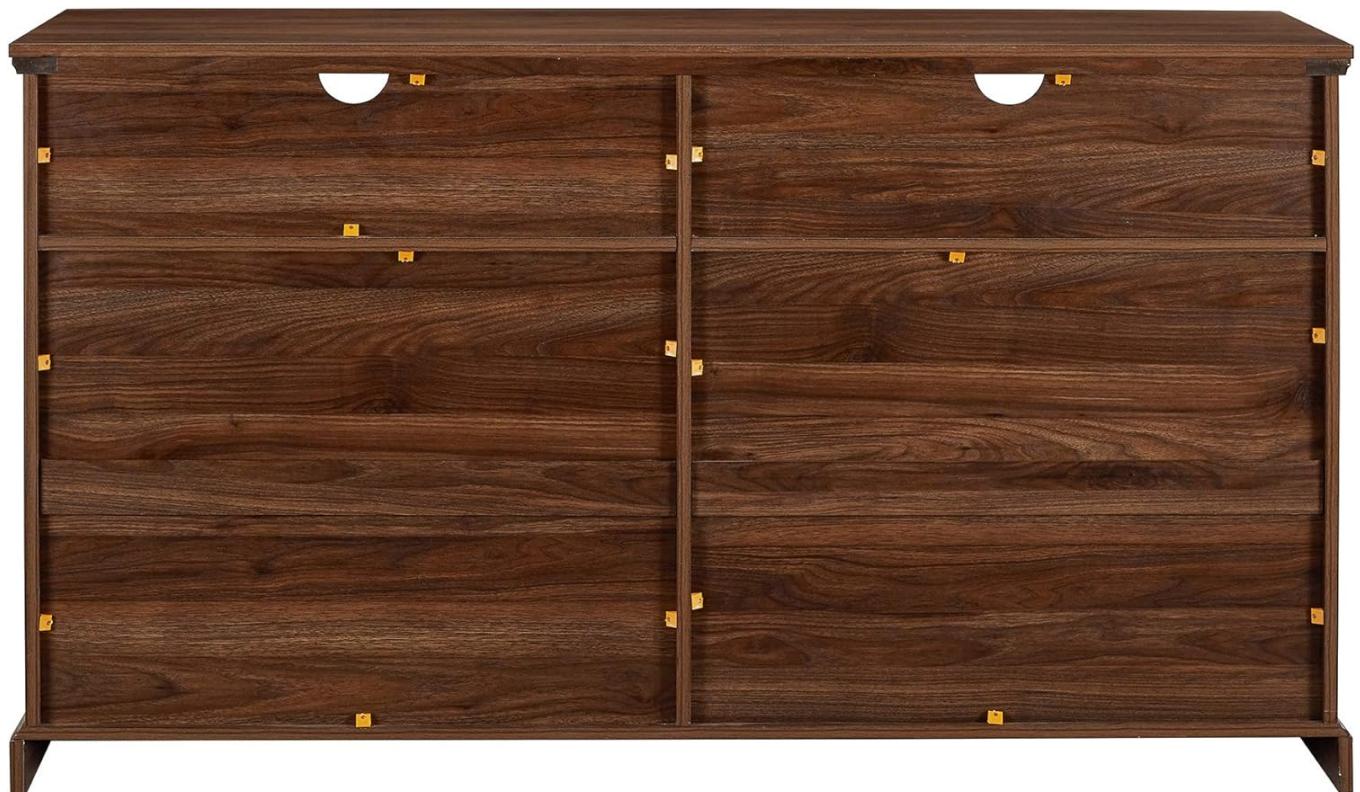

Rear view of the TV stand, showing the back panels and cutouts for cable management.



The TV stand integrated into a living room, demonstrating its use with a wall-mounted television and decorative items.



A closer view of the left side of the TV stand, showing the glass door and open shelf space, with a television above.



Detail shot of the top open shelf, illustrating its capacity for books or media components.



Close-up of the base molding of the TV stand, showing the craftsmanship and dark walnut finish.



Detailed view of the soft-close hinge mechanism on one of the glass doors.



Close-up of the black bar handles on the glass doors, complementing the dark walnut finish.

QUESTIONS? We can help you.




1-801-433-3008

or email **service@walkeredison.com**

Replacement parts now available.

Please contact Walker Edison within 30 days of delivery.

Contact information for Walker Edison customer support, including phone number and email for assistance.

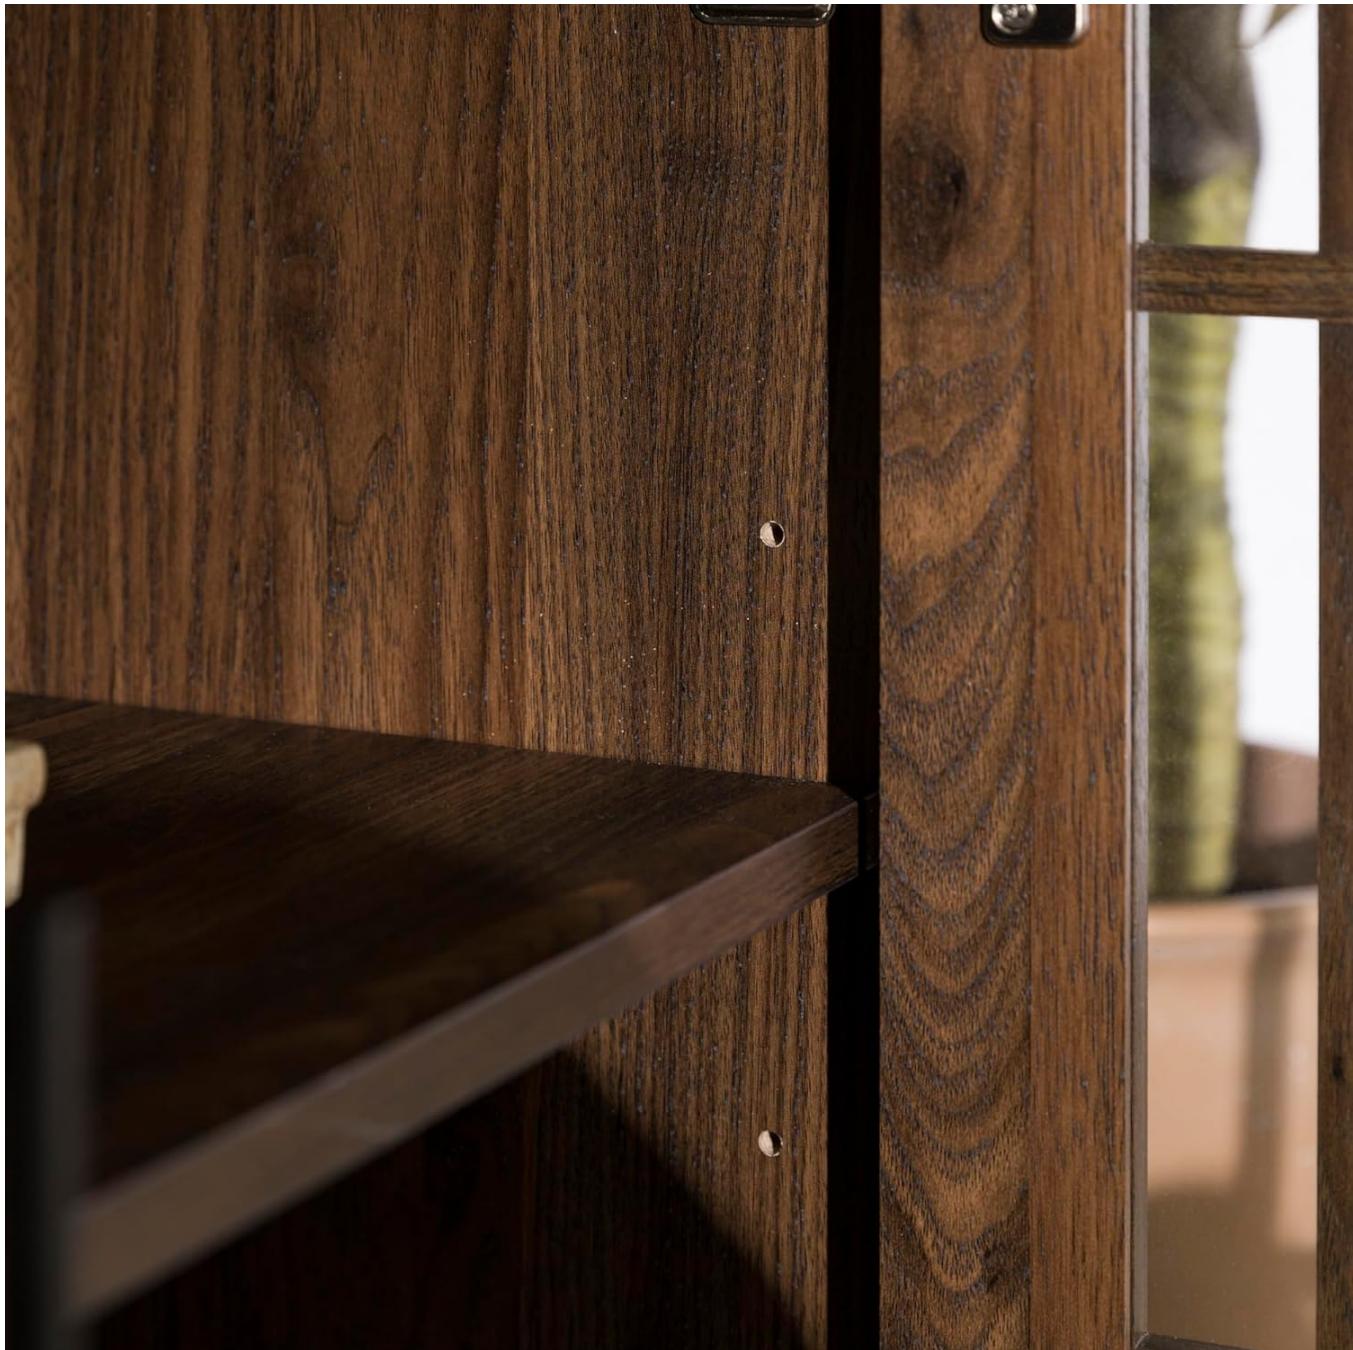

Interior view of the cabinet, showing the pre-drilled holes for adjusting shelf height.



One of the glass doors open, providing a view of the interior storage space and adjustable shelf.



Diagram illustrating the overall dimensions of the TV stand: 33 inches high, 58 inches wide, and 16 inches deep.

Product Videos

No official seller videos are available for this product at this time.

© 2024 Walker Edison. All rights reserved.