

[Manuals.plus](#) /

› [SKMEI](#) /

› SKMEI Sports Digital 50M Waterproof Watch Model 1258 User Manual

SKMEI 1258

SKMEI Sports Digital 50M Waterproof Watch Model 1258 User Manual

INTRODUCTION

Thank you for choosing the SKMEI Sports Digital Watch Model 1258. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Designed for durability and functionality, this watch features a clear digital display, 50-meter water resistance, and various modes to support your active lifestyle.

Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.

WATCH OVERVIEW

The SKMEI 1258 watch features a robust design with clearly labeled buttons for easy navigation through its functions.



Image: Front view of the SKMEI 1258 watch, highlighting the 'LIGHT', 'MODE', 'START/STOP', and 'RESET' buttons, along with display segments for Week, Date, Time, PM indicator, and Alarm.

- **LIGHT Button:** Activates the backlight for visibility in low-light conditions.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **START/STOP Button:** Used to start/stop functions like the stopwatch, or to adjust settings.
- **RESET Button:** Used to reset functions or confirm settings.

SETUP

Initial Time and Date Setting

The SKMEI 1258 watch is designed for easy setup. Follow these steps to set the time and date:

1. From the normal time display, press the **MODE** button three times to enter Time Setting Mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of the

Week.

3. While a setting is flashing, use the **START/STOP** button to adjust the value.
4. Once all settings are adjusted, press the **MODE** button to exit Time Setting Mode and return to the normal time display.

12/24 Hour Format Selection

To switch between 12-hour and 24-hour (military) time format:

- From the normal time display, press the **START/STOP** button once. This will toggle between 12-hour (with 'PM' indicator for afternoon hours) and 24-hour formats.

OPERATING INSTRUCTIONS

Mode Functions

Press the **MODE** button to cycle through the following functions:

- **Normal Time Display:** Shows hour, minute, second, day of the week, month, and date.
- **Stopwatch Mode:**
 1. Press **MODE** once to enter Stopwatch Mode.
 2. Press **START/STOP** to begin timing. Press again to pause.
 3. Press **RESET** while paused to clear the stopwatch to zero.
- **Alarm Setting Mode:**
 1. Press **MODE** twice to enter Alarm Setting Mode. The hour digits will flash.
 2. Press **START/STOP** to adjust the hour.
 3. Press **RESET** to switch to minute setting. The minute digits will flash.
 4. Press **START/STOP** to adjust the minute.
 5. Press **MODE** to exit Alarm Setting Mode.
- **Alarm ON/OFF:** From normal time display, press and hold **START/STOP** and **RESET** simultaneously to toggle the alarm on or off. An alarm icon will appear/disappear on the display.

Using the Backlight

To illuminate the display in dark conditions, press the **LIGHT** button. The backlight will stay on for a few seconds.



Image: The SKMEI 1258 watch display illuminated with a bright blue backlight, showing the time and date clearly.

Water Resistance Guidelines

This watch is rated for 5 ATM (50 meters) water resistance. This means it is suitable for:

- Swimming
- Showering
- Washing hands

Important Precautions:

- **DO NOT** press any buttons while the watch is submerged in water.
- Avoid exposing the watch to extremely hot water, such as in hot tubs or saunas, as this can compromise the water seals.



Image: Side profile of the SKMEI 1258 watch, displaying the 'WATER RESIST' text on the casing, indicating its water resistance feature.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and band regularly with a soft, damp cloth.
- For stubborn dirt, use a mild soap solution and rinse thoroughly with clean water, then dry completely.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and seals.

Battery Replacement

The watch battery typically lasts 18-24 months. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a professional watch technician to ensure the water resistance seal is properly maintained.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid storing it near magnetic fields, which can affect the watch's accuracy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time needs to be reset.	Follow the "Initial Time and Date Setting" instructions.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing all buttons to see if any respond. If not, replace battery. Ensure not pressing buttons underwater.
Water inside the watch.	Buttons pressed underwater, or seals compromised by extreme heat.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Feature	Detail
Brand	SKMEI
Model Number	1258 (Manufacturer Reference: SWQ-1258)
Display Type	Digital
Movement	Digital
Water Resistance Depth	50 Meters (5 ATM)
Case Shape	Round
Case Diameter	57 Millimeters
Case Thickness	17 Millimeters
Band Material	Polyurethane
Band Width	23 Millimeters
Band Color	Black
Dial Color	Black
Item Weight	63 Grams
Battery	1 product-specific battery (included)
Department	Unisex Adult
First Available on Amazon.co.jp	July 15, 2019

WARRANTY INFORMATION

This SKMEI watch is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for any warranty claims.

The warranty typically does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear, including battery depletion.

SUPPORT

For further assistance, technical support, or inquiries regarding your SKMEI Sports Digital Watch Model 1258, please contact the retailer where you purchased the product or refer to the official SKMEI website for customer service contact details.

When contacting support, please have your watch model number (1258) and proof of purchase readily available.

© 2026 SKMEI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question