

BW SDB0

Instruction Manual

BLITZWOLF® BW-SDB0 MINI SMART BLUETOOTH SOUNDBAR

Brand: GENERIC | Model: BW SDB0

1. Introduction

Thank you for purchasing the Blitzwolf® BW-SDB0 Mini Smart Bluetooth Soundbar. This compact and elegant soundbar is designed to enhance your audio experience for desktop and laptop PCs, offering both wired and wireless connectivity options. It features 2*5W loudspeakers and is conveniently USB powered. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

2. Package Contents

Please check the package contents upon unboxing:

- 1 x Blitzwolf® BW-SDB0 Soundbar
- 1 x USB Power Cable
- 1 x 3.5mm Audio Cable (AUX)
- 1 x User Manual

3. Product Overview

Familiarize yourself with the soundbar's components and controls.



Figure 3.1: Front angle view of the Blitzwolf BW-SDB0 soundbar, showcasing its compact design and mesh grille.



Figure 3.2: Front view of the soundbar, highlighting the central control buttons and the digital display behind the grille.



Figure 3.3: Close-up view of the control panel, showing the 'M' (Mode), '+' (Volume Up/Next Track), Play/Pause, and '-' (Volume Down/Previous Track) buttons.



Figure 3.4: Rear view of the soundbar, displaying the 'ON/OFF' switch, 'DC 5V' power input, 'AUX' input, 'USB' port, and 'TF' card slot.

Control Buttons:

- **M (Mode Button):** Press to switch between Bluetooth, AUX, USB, and TF card modes.
- **+ (Volume Up / Next Track):** Short press to increase volume. Long press to skip to the next track.
- **Play/Pause Button:** Press to play or pause audio. In Bluetooth mode, long press to disconnect.
- **- (Volume Down / Previous Track):** Short press to decrease volume. Long press to go to the previous track.

Rear Ports:

- **ON/OFF Switch:** Powers the soundbar on or off.
- **DC 5V:** USB power input port.
- **AUX:** 3.5mm audio input for wired connection.
- **USB:** USB port for playing audio from a USB flash drive.
- **TF:** TF (MicroSD) card slot for playing audio from a TF card.

4. Setup

1. **Power Connection:** Connect the supplied USB power cable to the 'DC 5V' port on the soundbar and plug the other end into a USB power source (e.g., computer USB port, USB wall adapter).
2. **Power On:** Flip the 'ON/OFF' switch on the rear of the soundbar to the 'ON' position. The soundbar will power on and indicate the current mode on its display.
3. **Initial Charge:** For optimal battery life, it is recommended to fully charge the soundbar before first use. The soundbar has a 1200mAh battery.

5. Operating Instructions

5.1. Bluetooth Mode

1. Power on the soundbar. It will automatically enter Bluetooth pairing mode if no other source is connected, or you can press the 'M' button to switch to Bluetooth mode (indicated by 'BLUE' on the display).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "BW-SDB0" from the list of devices. Once connected, you will hear a confirmation tone.
4. You can now play audio from your device through the soundbar. Use the soundbar's '+/-' buttons for volume control and track navigation, or control directly from your device.

5.2. AUX (Wired) Mode

1. Connect one end of the 3.5mm audio cable to the 'AUX' port on the soundbar.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output port of your device (e.g., computer, TV).
3. Press the 'M' button on the soundbar until 'AUX' is displayed.
4. Audio from your connected device will now play through the soundbar. Volume can be adjusted using the soundbar's '+/-' buttons or your device's volume controls.

5.3. USB/TF Card Playback

1. Insert a USB flash drive into the 'USB' port or a TF (MicroSD) card into the 'TF' slot on the soundbar. Ensure the audio files are in a compatible format (e.g., MP3).
2. The soundbar will automatically switch to USB or TF card mode and begin playing audio. If not, press the 'M' button to cycle through modes until the correct mode is selected.
3. Use the '+/-' buttons for volume control and long press for track navigation. The Play/Pause button controls playback.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the soundbar in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Water:** This product is not waterproof. Keep it away from water, moisture, and liquids to prevent damage.
- **Handle with Care:** Avoid dropping or subjecting the soundbar to strong impacts.

7. Troubleshooting

Problem	Possible Cause	Solution
No sound	Soundbar is off or low battery. Incorrect mode selected. Volume too low. Device not connected properly.	Ensure soundbar is ON and charged. Press 'M' button to select correct input mode (Bluetooth, AUX, USB, TF). Increase volume on soundbar and connected device. Reconnect Bluetooth, AUX cable, or reinsert USB/TF card.
Cannot pair via Bluetooth	Soundbar not in pairing mode. Device Bluetooth is off. Too many devices connected.	Ensure soundbar is in Bluetooth mode ('BLUE' displayed). Enable Bluetooth on your device. Forget "BW-SDB0" from your device's Bluetooth list and try pairing again. Move closer to the soundbar.
Distorted sound	Volume too high. Weak signal (Bluetooth). Damaged audio cable (AUX).	Lower the volume on both the soundbar and the connected device. Move your Bluetooth device closer to the soundbar. Try a different 3.5mm audio cable.

8. Specifications

Feature	Detail
Model Name	BW SDB0
Speaker Type	Bookshelf
Special Features	Bluetooth, Wireless
Recommended Uses	For Computers
Compatible Devices	Desktop, Laptop
Surround Sound Channel Configuration	2.1
Battery Capacity	1200 mAh
Speaker Maximum Output Power	10 Watts (2*5W)
Connectivity Technology	Bluetooth, Wired (AUX), USB, TF Card
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Power Input	DC 5V-1A (USB Powered)

9. Warranty and Support

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or manufacturer's customer service department.

Keep your purchase receipt as proof of purchase for any warranty-related inquiries.

© 2023 GENERIC. All rights reserved. Specifications are subject to change without notice.