

[manuals.plus](#) /

› [ANKO](#) /

› [Anko Wireless Doorbell Instruction Manual](#)

**ANKO ANKOWD01**

# Anko Wireless Doorbell Instruction Manual

Model: **ANKOWD01** | Brand: **ANKO**

## INTRODUCTION

Thank you for choosing the Anko Wireless Doorbell. This instruction manual provides detailed guidance on how to set up, operate, and maintain your new doorbell system. Designed for convenience and reliability, this plug-and-play kit offers a wide operating range, multiple chime options, and adjustable volume levels to suit your needs.




The Anko Wireless Doorbell kit, featuring a sleek white receiver and a compact push button transmitter.

## PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x Push Button (Transmitter)
- 1 x Plugin Chime (Receiver)
- 2 x Screws
- 1 x Double-Sided Adhesive Tape
- 1 x 12V 23A battery for Transmitter (pre-installed or included separately)

# Product Size

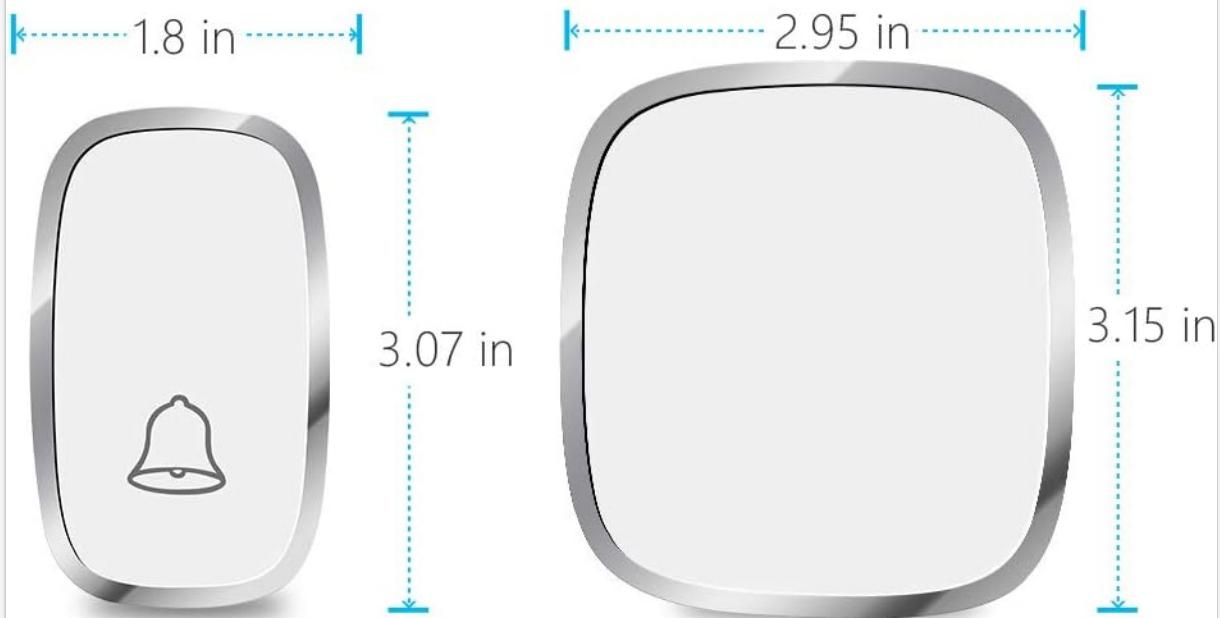

Package included



All components included in the Anko Wireless Doorbell package, ready for installation.

## SETUP

The Anko Wireless Doorbell is designed for easy, plug-and-play installation. No complex wiring is required.

### 1. Install the Transmitter (Push Button)

The transmitter is powered by a 12V 23A battery (included). It can be mounted using either the provided adhesive tape or screws.

- Adhesive Tape Installation:** Clean the desired mounting surface thoroughly. Peel off one side of the double-sided adhesive tape and apply it to the back of the transmitter. Peel off the other side and firmly press the transmitter onto the wall or door frame.
- Screw Installation:** Open the back cover of the transmitter. Use the provided screws to secure the back plate to the wall or door frame. Snap the transmitter unit back onto the secured plate.

Ensure the transmitter is placed in a location where it is easily accessible to visitors and within the operating range of the receiver.

### 2. Install the Receiver (Plug-in Chime)

Simply plug the receiver into any standard AC 110V ~ 220V 50Hz / 60Hz wall outlet. Choose a central location in your home where the chime can be easily heard.

## 2 Way Installation



### Install by adhesive patch

Mount the button with Double-side tape (package included)

---

### Install by screws

Mount the button with screws and anchors (package included)




Visual guide for the two installation methods: adhesive for quick setup, or screws for a more permanent fixture.

# 1000 Feet/300M



Signal ranges up to 1000ft/300m  
in open space

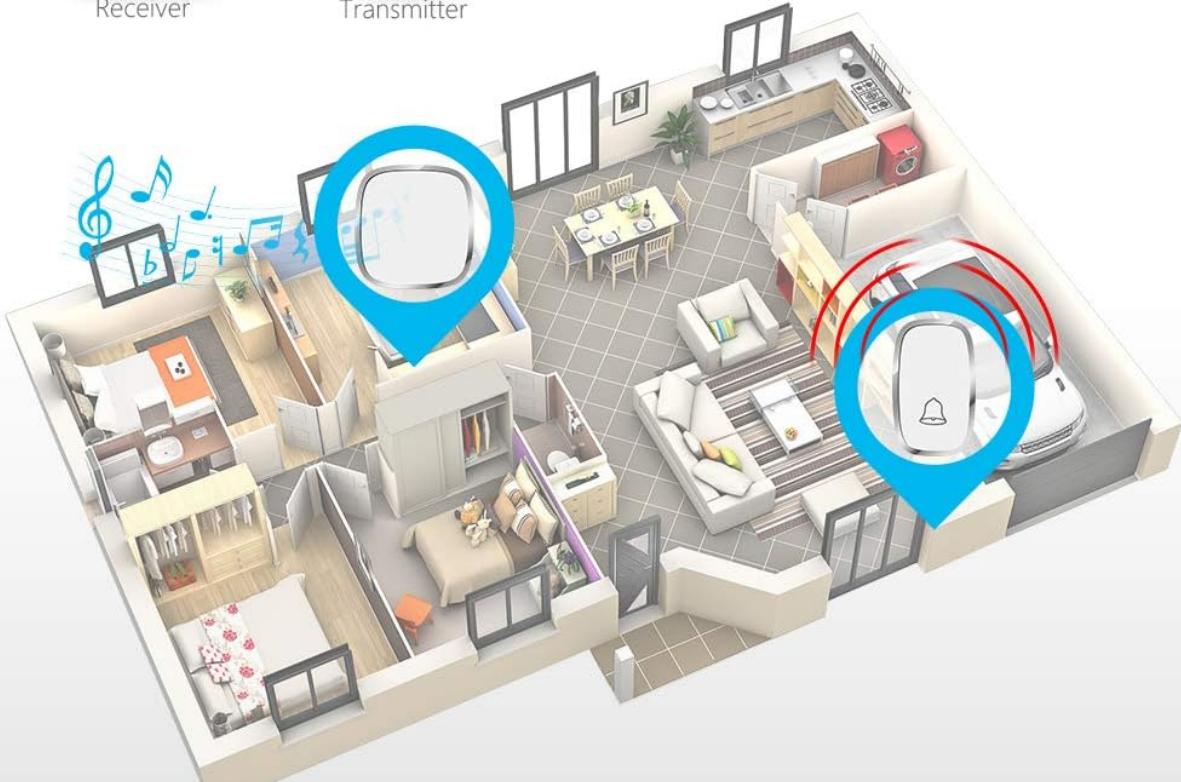

The doorbell offers an impressive 1000 feet (300 meters) operating range in open space, ensuring reliable signal transmission throughout your property.

## OPERATING INSTRUCTIONS

### Changing Chime Melodies

The receiver offers 36 different chime melodies. To change the melody, press the 'Music Options' button on the side of the receiver. Each press will cycle through the available tunes. Stop pressing when you find your preferred melody.

### Adjusting Volume

The doorbell features 4 adjustable volume levels, ranging from 25dB to 85dB. To adjust the volume, press the 'Volume Level' button on the side of the receiver. Each press will cycle through the volume settings.

### LED Flash Indicator

The receiver is equipped with a blue LED flash indicator. This feature provides a visual alert when the doorbell is pressed, which is particularly useful for individuals with hearing impairments or in noisy environments.



The receiver unit showcasing its 36 music options and 4 adjustable volume levels, from a quiet 25dB to a loud 85dB.

**Blue LED flash on the receiver  
for hearing impaired**



The blue LED flash on the receiver provides a visual cue, making it ideal for the hearing impaired or in loud settings.

## MAINTENANCE

### Cleaning

Wipe the doorbell units with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

### Transmitter Battery Replacement

The transmitter is powered by a 12V 23A battery. If the transmitter stops working or the signal weakens, it may be time to replace the battery. To replace, open the back cover of the transmitter, remove the old battery, and insert a new 12V 23A battery, ensuring correct polarity.

### Water Resistance (IP44)

The transmitter (push button) is rated IP44 dustproof and waterproof, meaning it is protected against solid objects larger than 1mm and splashing water from any direction. While it can withstand rain, avoid submerging it in water.



The IP44 rating ensures the transmitter is dustproof and waterproof, suitable for outdoor use in various weather conditions.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not chime.	Transmitter battery is dead or low. Receiver is unplugged or not powered. Units are out of range.	Replace the 12V 23A battery in the transmitter. Ensure the receiver is securely plugged into a working outlet. Move the receiver closer to the transmitter.
Short operating range.	Interference from metal structures or other electronic devices. Thick walls or obstacles.	Relocate the receiver or transmitter to minimize interference. Avoid placing units near large metal objects.
Chime sounds intermittently or unexpectedly.	Interference from other wireless devices. Low battery in transmitter.	Change the chime melody to see if it resolves the issue. Replace the transmitter battery.

## SPECIFICATIONS



Feature	Detail
Model Number	ANKOWD01
Wireless Range	1000 feet (300 meters) maximum in open air
Chime Options	36 melodies
Volume Levels	4 levels (25dB to 85dB)
Receiver Power	AC 110V ~ 220V 50Hz / 60Hz
Transmitter Power	1 x 12V 23A battery
Waterproof Rating (Transmitter)	IP44 (Dustproof & Waterproof)
Control Method	Touch
Product Dimensions (Transmitter)	1.8 x 3.07 inches (approx.)
Product Dimensions (Receiver)	2.95 x 3.15 x 2.25 inches (approx.)
Item Weight	5.6 ounces
UPC	638183953648

## WARRANTY AND SUPPORT

Anko products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided on your product packaging or visit the official ANKO website. Please retain your proof of purchase for any warranty claims.

### Related Documents - ANKOWD01

	<p><a href="#"><u>Anko Mini Microphone (JLR-79364) - User Manual and Specifications</u></a></p> <p>User guide for the Anko Mini Microphone (Model JLR-79364), including product specifications, features, connection details, and important safety instructions. Compatible with devices featuring a 3.5mm jack.</p>
	<p><a href="#"><u>Anko Waterproof Floating Speaker 28YX01 Operating Instructions</u></a></p> <p>Operating instructions for the Anko Waterproof Floating Speaker (Model 28YX01), detailing its features, functions, specifications, charging, and important safety warnings.</p>

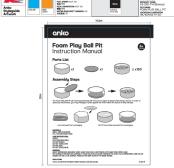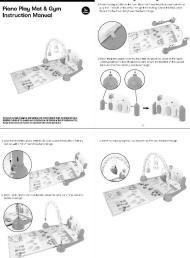	<p><a href="#"><b>Anko Foam Play Ball Pit Instruction Manual - Product Guide</b></a></p> <p>Official instruction manual for the Anko Foam Play Ball Pit (Product Code: 43-292-714). Includes parts list, assembly instructions, material details, care guidelines, and important safety warnings for safe play.</p>
	<p><a href="#"><b>Anko Piano Play Mat &amp; Gym Instruction Manual</b></a></p> <p>Anko Piano Play Mat &amp; Gym instruction manual detailing lay and play, tummy time, and tunnel time configurations. Includes battery installation, care, maintenance, and safety warnings.</p>
	<p><a href="#"><b>Anko Portable Pro Bluetooth Speaker with 360° Sound - Operating Instructions</b></a></p> <p>User manual for the Anko Portable Pro Bluetooth Speaker with 360° Sound (Model CR360SPK). Features include operating instructions, safety warnings, function overview, and technical specifications.</p>
	<p><a href="#"><b>Anko Build &amp; Decorate Your Own Cubby House - Assembly Instructions</b></a></p> <p>Step-by-step assembly guide for the Anko cardboard Cubby House, including dimensions, parts identification, and assembly steps. Suitable for children aged 3 and up. Features safety warnings and manufacturing details.</p>