

[Manuals.plus](#) /

› [Pursonic](#) /

› Pursonic Sonic Technology Electric Toothbrush User Manual

Pursonic TBUSB180

Pursonic Sonic Technology Electric Toothbrush User Manual

Model: TBUSB180

INTRODUCTION

The Pursonic Sonic Technology Electric Toothbrush is designed to provide an effective and thorough oral cleaning experience for both children and adults. Utilizing advanced sonic wave technology, it delivers 40,000 sonic strokes per minute, efficiently removing plaque and stains while being gentle on gums. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new electric toothbrush.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Pursonic Sonic Technology Electric Toothbrush Handle
- 3 x Replacement Brush Heads
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Image: The Pursonic Sonic Technology Electric Toothbrush package contents, including the toothbrush handle, three brush heads, and a USB charging cable.

SETUP

1. **Unpack the Toothbrush:** Carefully remove all components from the packaging.
2. **Charge the Toothbrush:** Before first use, fully charge the toothbrush. Connect the USB charging cable to the charging port on the bottom of the toothbrush handle and plug the other end into a compatible USB power adapter (not included). A full charge takes approximately 4 hours and provides up to 30 days of battery life.
3. **Attach a Brush Head:** Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place.



Image: A person demonstrating the proper use of the Pursonic electric toothbrush during brushing.

OPERATING INSTRUCTIONS

Follow these steps for optimal brushing:

1. **Wet Brush Head and Apply Toothpaste:** Dampen the bristles of the brush head and apply a small amount of toothpaste.
2. **Position the Toothbrush:** Place the brush head against your teeth at a slight angle towards the gumline.
3. **Select a Mode:** Press the power button to turn on the toothbrush. Press the power button repeatedly to cycle through the 5 available cleaning modes:
 - **WHITE:** Strongest mode for stubborn plaque and stain removal.
 - **CLEAN:** Medium intensity for daily normal teeth cleaning.
 - **SENSITIVE:** Gentle motion for sensitive gums and teeth.
 - **MASSAGE:** Pulsating action for gum stimulation and improved circulation.
 - **POLISH:** For teeth polishing and brightening.
4. **Brush Your Teeth:** Gently move the brush head across all surfaces of your teeth. The toothbrush

features a 2-minute smart timer, which is the dentist-recommended brushing time. It also includes a 30-second interval alert system that pauses briefly to remind you to move to a different quadrant of your mouth (upper right, upper left, lower right, lower left).

5. **Power Off:** The toothbrush will automatically turn off after 2 minutes. You can also press and hold the power button to turn it off manually at any time.
6. **Rinse:** After brushing, rinse your mouth thoroughly and rinse the brush head under running water.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and hygiene of your toothbrush:

- **After Each Use:** Rinse the brush head and the upper part of the handle thoroughly under running water to remove any toothpaste residue.
- **Detaching Brush Head:** Periodically remove the brush head and rinse the connection area on both the brush head and the handle.
- **Wipe Handle:** Wipe the handle with a damp cloth. Do not immerse the entire handle in water for extended periods, although it is waterproof for normal use.
- **Storage:** Store the toothbrush upright in a dry place.
- **Brush Head Replacement:** For optimal performance and hygiene, replace the brush head every 3 months, or sooner if the bristles become frayed. Replacement heads are available from Pursonic.

TROUBLESHOOTING

If you encounter issues with your Pursonic Electric Toothbrush, please refer to the following common solutions:

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Low battery or not charged.	Ensure the toothbrush is fully charged. Connect to a USB power source for at least 4 hours.
Weak vibration or reduced performance.	Low battery or worn brush head.	Recharge the toothbrush. Replace the brush head if bristles are splayed or worn.
Toothbrush stops during use.	2-minute timer has completed.	This is normal operation. The toothbrush automatically turns off after the recommended brushing time.
Brush head does not fit securely.	Incorrectly attached or not a genuine Pursonic brush head.	Ensure the brush head is aligned correctly and pushed down firmly. Use only genuine Pursonic replacement brush heads.

If the problem persists after trying these solutions, please contact Pursonic customer support.

SPECIFICATIONS

Feature	Detail
Model Number	TBUSB180
Technology	Sonic Wave Technology

Feature	Detail
Strokes Per Minute	40,000 VPM (Vibrations Per Minute)
Cleaning Modes	5 (WHITE, CLEAN, SENSITIVE, MASSAGE, POLISH)
Timer	2-Minute Smart Timer with 30-Second Interval Alerts
Battery Life	Up to 30 days on a single charge
Charging Time	Approximately 4 hours
Power Source	Rechargeable Battery (USB)
Waterproof Rating	Waterproof (suitable for rinsing)
Included Brush Heads	3
Dimensions	8 x 5.3 x 2.3 inches (Package)
Weight	5.61 ounces (Package)

WARRANTY AND SUPPORT

The Pursonic Sonic Technology Electric Toothbrush comes with a **1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Pursonic customer service. Please have your model number (TBUSB180) and proof of purchase ready when contacting support.

Note: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is an oral hygiene device.