

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pacojet](#) /

› [Pacojet 2 PLUS Instruction Manual](#)

Pacojet Pacojet 2 PLUS (Model 16003)

Pacojet 2 PLUS Instruction Manual

Model: 16003

1. INTRODUCTION

Thank you for choosing the Pacojet 2 PLUS. This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before using the Pacojet 2 PLUS to ensure proper function and to prevent damage or injury. The Pacojet 2 PLUS is designed for professional use in processing frozen foods into fine purees, mousses, and sorbets, known as pacotizing. It features advanced functionalities such as a programmable automatic repeat function and an innovative blade locking system.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the appliance is placed on a stable, level surface.
- Do not operate the appliance with wet hands or while standing on a wet surface.
- Always unplug the appliance before cleaning or performing maintenance.
- Keep hands and utensils away from moving parts during operation.
- Only use original Pacojet accessories and spare parts.
- Do not immerse the main unit in water or other liquids.
- Children should be supervised to ensure they do not play with the appliance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT COMPONENTS

The Pacojet 2 PLUS comes with the following main components:

- Pacojet 2 PLUS Main Unit
- Pacotizing Beaker (Container)

- Beaker Lid
- Gold-PLUS Pacotizing Blade
- Spoon (for preparation)



Figure 1: The Pacojet 2 PLUS main unit, showcasing its sleek design and the beaker in position. This image illustrates the primary components of the device.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the Pacojet 2 PLUS on a stable, dry, and level surface. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the power cord to a grounded 220 Volt electrical outlet.
4. **Initial Cleaning:** Before first use, clean all removable parts (beaker, lid, blade) according to the "Cleaning and Maintenance" section.
5. **Blade Installation:** Securely attach the Gold-PLUS pacotizing blade to the blade holder. The innovative blade locking system ensures it is firmly anchored.

5. OPERATING INSTRUCTIONS

The Pacojet 2 PLUS offers intuitive touchscreen navigation and multiple processing modes.

5.1. Preparing the Beaker

1. Fill the Pacotizing Beaker with your desired ingredients. Ensure ingredients are frozen solid to -18°C (-0.4°F) or colder for optimal pacotizing results.
2. Do not overfill the beaker beyond the maximum fill line. The rescue function can process overfilled beakers, but it is best to avoid this.

3. Place the beaker lid securely on the beaker.

5.2. Pacotizing Process

1. Place the prepared beaker with the blade attached into the Pacojet 2 PLUS unit.
2. Select the desired processing mode via the intuitive touchscreen:
 - **Pacotizing:** For creating fine purees, mousses, and sorbets from frozen ingredients.
 - **Cutting/Chopping:** For processing fresh, non-frozen ingredients.
 - **Mixing:** For blending ingredients without reducing them to a fine consistency.
 - **Cleaning:** For automated cleaning cycles.
3. Adjust settings such as processing food with or without over-pressure, and the number of portions.
4. Utilize the **Programmable Automatic Repeat Function** for up to 9 repetitions without releasing overpressure, saving time for specific recipes.
5. Start the processing cycle. The unit will automatically stop when complete.
6. Remove the beaker and carefully detach the blade.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance ensure the longevity and hygienic operation of your Pacojet 2 PLUS.

6.1. Daily Cleaning

- **Unplug:** Always unplug the appliance from the power outlet before cleaning.
- **Removable Parts:** The beaker, lid, and blade are dishwasher safe. Alternatively, wash them by hand with warm soapy water and rinse thoroughly.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Cleaning Mode:** Utilize the dedicated "Cleaning" processing mode for internal cleaning cycles as instructed on the touchscreen.

6.2. Periodic Maintenance

- Inspect the power cord for any signs of damage.
- Ensure the blade locking system is functioning correctly.
- For any complex maintenance or repairs, contact authorized Pacojet service personnel.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	No power supply; power cord not properly connected.	Check power cord connection and wall outlet. Ensure the unit is plugged into a 220V supply.

Problem	Possible Cause	Solution
Poor pacotizing results (e.g., icy texture).	Ingredients not frozen sufficiently; incorrect blade installation.	Ensure ingredients are frozen to at least -18°C (-0.4°F). Verify the Gold-PLUS blade is securely locked.
Unit stops unexpectedly during operation.	Overfilled beaker; motor overload.	Reduce the amount of ingredients in the beaker. Allow the unit to cool down before restarting. Use the rescue function if applicable.
Blade not locking securely.	Debris preventing proper seating; damaged blade or holder.	Clean the blade and blade holder thoroughly. If problem persists, contact service.

8. SPECIFICATIONS

- Model:** Pacojet 2 PLUS (Model 16003)
- Brand:** Pacojet
- Operation Mode:** Fully Automatic
- Voltage:** 220 Volts
- Power Source:** Corded Electric
- Capacity:** 1.2 Liters (per beaker)
- Special Features:** Programmable Automatic Repeat Function, Intuitive Touchscreen Navigation, Gold-PLUS Blade Locking System, Four Calibratable Processing Modes (Pacotizing, Cutting/Chopping, Mixing, Cleaning), Processing with/without Over-pressure, Rescue Function, Portion Counter.
- Included Components:** Main Unit, Pacotizing Beaker, Beaker Lid, Gold-PLUS Pacotizing Blade, Spoon.
- Dishwasher Safe Parts:** Beaker, Lid, Blade.
- Item Weight:** Approximately 50 pounds (22.7 kg)
- UPC:** 844007057397

9. WARRANTY AND SUPPORT

The Pacojet 2 PLUS comes with a powerful motor backed by up to a five-year warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Pacojet website.

For technical support, service, or to order genuine spare parts, please contact your authorized Pacojet dealer or the manufacturer directly.

Manufacturer: Pacojet

Website: www.pacojet.com (Example link, actual link may vary)