

## Brentwood TS-1405BL

# Brentwood TS-1405BL Waffle Cone Maker User Manual

Model: TS-1405BL

## INTRODUCTION

Thank you for purchasing the Brentwood TS-1405BL Waffle Cone Maker. This appliance is designed to create delicious sugar, wafer, and waffle cones with ease. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock,

this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PRODUCT OVERVIEW



Image: The Brentwood TS-1405BL Waffle Cone Maker in blue, with its lid open, revealing the circular non-stick waffle plates. The appliance features a compact design with a handle for opening and closing.

### Key Features:

- 750 Watts of power for efficient heating.
- Designed to make sugar, wafer, and waffle cones.
- 7-inch diameter non-stick waffle plates.
- Power and Preheat indicator lights for easy monitoring.
- Adjustable temperature range for customized cooking.

- Non-slip feet for stability during use.
- Locking lid for consistent waffle thickness.
- Compact upright storage design.

## SETUP

---

1. Unpack the waffle cone maker and remove all packaging materials.
2. Wipe the cooking plates with a damp cloth or sponge, then dry thoroughly.
3. Place the appliance on a stable, heat-resistant, and dry surface.
4. Ensure the power cord is not tangled and is positioned away from hot surfaces.
5. For first use, it is recommended to operate the appliance empty for about 5-10 minutes on a medium setting to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Allow to cool and wipe plates clean before first actual use.

## OPERATING INSTRUCTIONS

---

### Before First Use:

- Prepare your waffle cone batter according to your recipe.
- Ensure the appliance is clean and dry.

### Making Waffle Cones:

1. Plug the waffle cone maker into a 120V AC electrical outlet. The power indicator light will illuminate.
2. Adjust the temperature control dial to your desired setting. The preheat indicator light will turn on.
3. Allow the appliance to preheat until the preheat indicator light turns off, signaling it has reached the set temperature.
4. Carefully open the lid. Lightly grease both the upper and lower non-stick waffle plates with cooking oil or spray, especially for the first waffle or if waffles begin to stick.
5. Pour approximately 3-4 tablespoons of batter onto the center of the lower waffle plate. Avoid overfilling.
6. Close the lid and gently press down to engage the locking mechanism. This ensures even cooking and proper thickness.
7. Cook for approximately 1 to 3 minutes, or until the waffle is golden brown and crisp. Cooking time may vary based on batter consistency and desired crispness. Monitor closely, especially since there is no built-in timer.
8. Once cooked, carefully open the lid. Using a non-metallic utensil (e.g., wooden spatula), gently remove the hot waffle from the plate.
9. Immediately roll the hot waffle into a cone shape using the provided cone rolling tool. Work quickly as the waffle will harden as it cools. Pinch the end of the cone to seal.
10. Place the formed cone on a wire rack to cool and fully crisp.
11. Repeat the process for additional cones. If making multiple batches, allow the appliance to reheat between waffles if the preheat light comes back on.
12. When finished, unplug the appliance from the outlet and allow it to cool completely before cleaning.

## CLEANING AND MAINTENANCE

---

- Always unplug the appliance and allow it to cool completely before cleaning.
- The waffle cone maker requires **hand washing** only. Do not immerse the appliance, cord, or plug in water or any other liquid.

- Wipe the exterior of the appliance with a damp cloth.
- For the non-stick cooking plates, use a soft, damp cloth or sponge to wipe away any batter residue. For stubborn residue, a small amount of cooking oil can be applied to soften it before wiping. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
- Ensure all parts are thoroughly dry before storing.
- For compact storage, the appliance can be stored upright.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Waffles are not cooking evenly or are too thin/thick.	Incorrect batter amount; lid not fully locked; uneven batter spread.	Ensure correct batter quantity (approx. 3-4 tbsp). Close lid firmly to engage lock. Spread batter evenly before closing.
Waffles are sticking to the plates.	Plates not sufficiently greased; batter recipe issue; plates not fully preheated.	Lightly grease plates before each waffle. Ensure plates are fully preheated (preheat light off). Review batter recipe.
Waffles are not crisp.	Insufficient cooking time; temperature setting too low; batter too moist.	Increase cooking time. Adjust temperature setting higher. Ensure batter is not overly moist. Allow cones to cool on a wire rack to crisp.
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure appliance is securely plugged into a working 120V AC outlet. Check circuit breaker.

## SPECIFICATIONS

- **Model:** TS-1405BL
- **Brand:** Brentwood
- **Power:** 750 Watts
- **Voltage:** 120 Volts
- **Material:** Plastic
- **Color:** Blue
- **Product Dimensions:** 5"D x 10"W x 12"H
- **Item Weight:** 2.75 Pounds
- **Special Features:** Temperature Control, Power/Preheat Indicator Lights, Non-Slip Feet, Locking Lid, Compact Upright Storage
- **Care Instructions:** Hand Wash
- **UPC:** 812330023778

## WARRANTY AND SUPPORT

This Brentwood TS-1405BL Waffle Cone Maker comes with a **Limited One-Year Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal household use. For warranty claims, technical support, or inquiries, please contact Brentwood Appliances customer service. Please retain your proof of purchase for warranty validation. Contact information for support can typically be found on the manufacturer's official website or on the product packaging.

