

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [JMEXSUSS](#) /

› [JMEXSUSS 2 Pack 100 LED Blue Fairy Lights Battery Operated Instruction Manual](#)

JMEXSUSS 2 Pack Blue Fairy Lights

JMEXSUSS 2 Pack 100 LED Blue Fairy Lights Battery Operated Instruction Manual

Model: 2 Pack Blue Fairy Lights

Brand: JMEXSUSS

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your JMEXSUSS 2 Pack 100 LED Blue Fairy Lights. These battery-operated string lights are designed for both indoor and outdoor decorative purposes, featuring a remote control with multiple lighting modes and a timer function. Please read this manual thoroughly before operation and retain it for future reference.

PACKAGE CONTENTS

- 2 x 100 LED Blue Fairy Light Strings (66 feet / 20 meters each)
- 2 x Waterproof Battery Boxes (requires 3 AA batteries each, not included)
- 2 x Remote Controls
- 1 x User Guide



Image: The complete package contents, including two sets of blue fairy lights, battery boxes, and remote controls.

SETUP

1. Battery Installation

1. Open the waterproof battery box by unlatching the clips on the sides.
2. Insert 3 AA batteries into the battery compartment, ensuring correct polarity (+/-).
3. Securely close the battery box, ensuring the clips are latched to maintain its waterproof seal.

2. Remote Control Preparation

- Remove the plastic insulation tab from the remote control's battery slot before first use.

OPERATING INSTRUCTIONS

The fairy lights can be operated using either the button on the battery box or the included remote control.

Using the Remote Control

REMOTE CONTROL

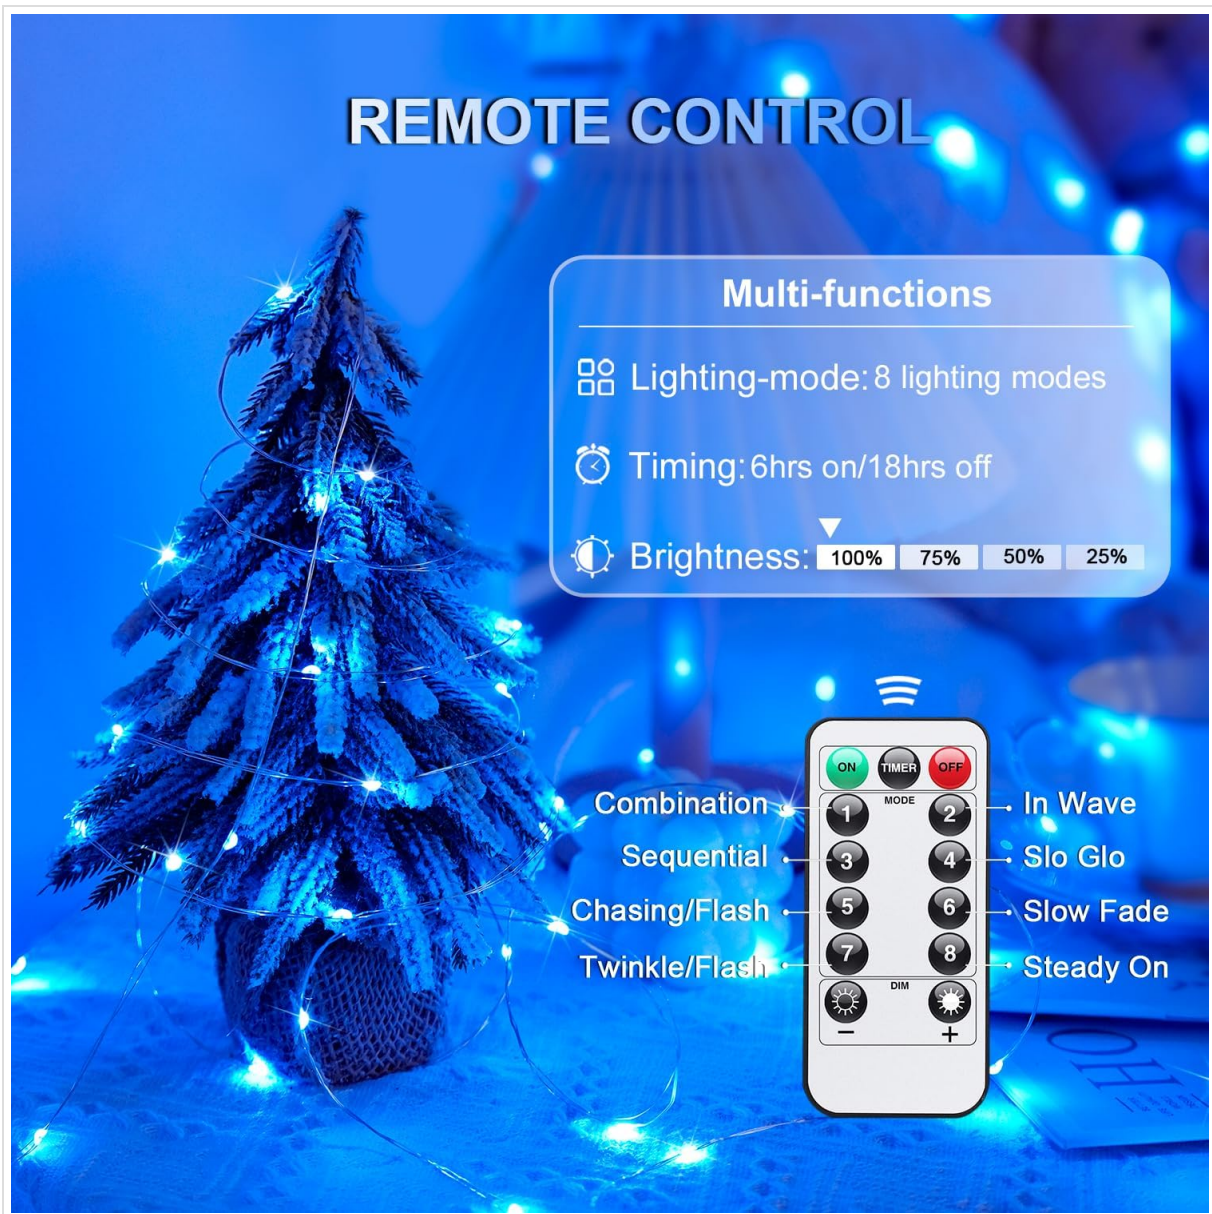


Image: Remote control detailing various functions and modes.

- **ON/OFF:** Press the green 'ON' button to turn the lights on, and the red 'OFF' button to turn them off.
- **MODE:** Cycle through 8 different lighting modes by pressing the 'MODE' button or selecting a number from 1 to 8.
- **TIMER:** Activate the timer function by pressing the 'TIMER' button. The lights will stay on for 6 hours and then automatically turn off for 18 hours, repeating the cycle.
- **DIM +/-:** Adjust the brightness level (100%, 75%, 50%, 25%) using the dimming buttons.

Lighting Modes

1. Combination
2. In Wave
3. Sequential
4. Slo Glo
5. Chasing/Flash
6. Slow Fade
7. Twinkle/Flash
8. Steady On

Using the Battery Box Button

- Press the button on the battery box to cycle through the 8 lighting modes. A ninth press will turn the lights off.

FEATURES AND USAGE

- **Waterproof Design:** The battery box is designed with an IPX7 rating, making it suitable for outdoor use without worry of rain or snow. Do not submerge the battery box in water.
- **Flexible Copper Wire:** The lights are strung on durable and flexible copper wire, allowing for easy shaping and customization for various decorations.
- **Wide Application:** Ideal for decorating bedrooms, Christmas trees, wedding backdrops, parties, patios, gardens, yards, and porches.



Image: Waterproof battery box and lights in a rainy outdoor setting.

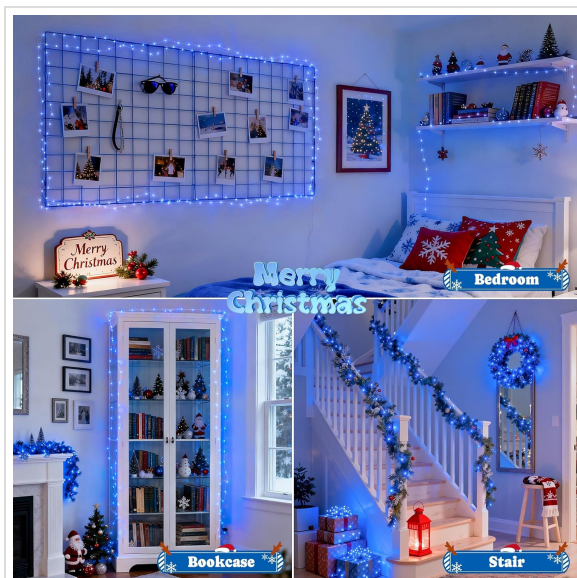


Image: Various indoor decoration ideas using the blue fairy lights.



Image: Close-up of the flexible copper wire lights.



Image: Bedroom decor with blue fairy lights on a canopy bed.



Image: Outdoor decoration examples with blue fairy lights on landscaping.

IMPORTANT SAFETY INSTRUCTIONS

- Carefully check the product for any damage before use.
- Do not cut, twist, or connect the product with lights from other brands.
- Keep the product away from fire, heat sources, and do not immerse the battery box in water.
- Use only the specified AA batteries.
- Remove batteries from the product if it will not be used for an extended period.
- Always ensure the battery compartment is securely closed.
- Keep the product and batteries away from children.

TROUBLESHOOTING

- **Lights not turning on:** Ensure batteries are correctly installed and charged. Check if the remote control's plastic insulation tab has been removed.
- **Remote not responding:** Verify the remote's battery is functional and that the plastic tab is removed. Ensure there are no obstructions between the remote and the battery box.
- **Dimming issues:** Cycle through brightness levels using the DIM +/- buttons on the remote.

SPECIFICATIONS

Brand	JMEXSUSS
Model Number	2 Pack Blue Fairy Lights
Color	Blue
Light Source Type	LED
Power Source	Battery Powered (3 AA batteries required per box)
Material	Copper
Number of Light Sources	100 per string (200 total)
Item Length	66 Feet (20 meters) per string
Bulb Spacing	3.94 inches
Voltage	4.5 Volts
Wattage	3 watts
Ingress Protection (IP) Rating	IPX7 (Battery Box)
Included Components	Remote Control, Battery Box

WARRANTY AND SUPPORT

For any questions, concerns, or sharing your thoughts about the product, please contact JMEXSUSS customer support:

- **Email:** service@jmexsuss.com.cn
- **Facebook:** [JMEXSUSS](#)

