

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER BHFEV182CP-QW 18V 2Ah 4-in-1 PowerSeries Extreme Pet Vacuum Cleaner User Manual

BLACK+DECKER BHFEV182CP-QW

BLACK+DECKER BHFEV182CP-QW 18V 4-in-1 PowerSeries Extreme Pet Vacuum Cleaner User Manual

Model: BHFEV182CP-QW

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your BLACK+DECKER BHFEV182CP-QW 18V 4-in-1 PowerSeries Extreme Pet Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.

PRODUCT OVERVIEW

The BLACK+DECKER 18V POWERSERIES™ Extreme upright vacuum cleaner is designed for quick, easy, and efficient cleaning. It features a powerful anti-tangling head, three speed settings, and a transparent, easy-to-drain 650 ml dust container. This 4-in-1 vacuum is part of the 18V POWERCONNECT™ system.



Figure 1: Overview of the BLACK+DECKER BHFEV182CP-QW vacuum cleaner and its included accessories, including the main unit, handheld vacuum, battery, charger, wall bracket, animal hair brush, and crevice tool.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not use the appliance outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

SETUP

Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts listed in the 'Included Components' section of the specifications are present. The vacuum cleaner can be assembled in various configurations for different cleaning tasks.

1. Main Unit Assembly:

- a. Connect the main vacuum body to the extension wand.
- b. Attach the floor head to the bottom of the extension wand. Ensure all connections click securely into place.

2. Handheld Mode:

- a. Detach the main vacuum body from the extension wand.
- b. Attach desired accessories (e.g., crevice tool, animal hair brush) directly to the handheld unit.



Figure 2: All components of the BHFEV182CP-QW vacuum cleaner, including the main unit, handheld section, battery, charger, wall mount, crevice tool, and pet brush, ready for assembly.

Charging the Battery

The BHFEV182CP-QW uses an 18V Lithium-Ion battery. For optimal performance, fully charge the battery before first use.

1. Insert the battery pack into the charger. Ensure it clicks into place.
2. Plug the charger into a standard electrical outlet. The battery indicator lights on the vacuum or charger will show charging status.
3. A full charge typically takes several hours. Refer to the battery indicator for charge completion.
4. The battery indicator shows how long you can expect the battery to last and when it needs charging.

OPERATING INSTRUCTIONS

Powering On/Off and Speed Settings

The vacuum features three speed settings to adapt to different cleaning needs.

1. To turn on the vacuum, press the power button.
2. Press the speed selection button to cycle through the three available speeds: Low, Medium, and High. Use the high speed setting for maximum deep cleaning, especially on carpets.
3. To turn off the vacuum, press the power button again.

Using the Vacuum

The 4-in-1 design allows for versatile cleaning across various surfaces.

- **Floor Cleaning (Stick Vacuum Mode):**

Use the vacuum in its upright stick configuration for cleaning hard floors and carpets. The motor floor brush is designed to clean all floor types without hair tangling.



Figure 3: The BHFEV182CP-QW vacuum cleaner being used on a carpeted floor, demonstrating its effectiveness in upright mode for general floor cleaning.

- **Handheld Cleaning:**

Detach the handheld unit for cleaning upholstery, stairs, car interiors, and other hard-to-reach areas. Attach the appropriate accessory for the task.



Figure 4: The handheld component of the BHFEV182CP-QW vacuum cleaner being used to clean a pillow, highlighting its versatility for upholstery and detailed cleaning.

- **Using Accessories:**

- **Animal Hair Brush:** Ideal for removing pet hair from upholstery, carpets, and other surfaces.
- **Crevice Tool:** Perfect for narrow spaces, corners, and edges.

MAINTENANCE

Emptying the Dust Container

The transparent 650 ml dust container should be emptied regularly to maintain optimal suction performance.

1. Ensure the vacuum is turned off and the battery is removed before emptying.
2. Locate the dust container release button, typically near the handle. Press it to detach the container.
3. Position the container over a trash bin. Open the bottom flap to release the collected dirt and debris. The "pepper mill system" allows for easy removal and cleaning of the filter.
4. Close the flap and reattach the dust container to the vacuum until it clicks securely.

Cleaning the Filters

Regular cleaning of the cartridge filter is crucial for maintaining suction power and preventing motor strain.

1. With the dust container detached, carefully remove the filter assembly.
2. Tap the filter gently over a trash bin to remove loose dust.
3. If necessary, rinse the filter under cool running water. Ensure it is completely dry before reinserting it into the vacuum. Allow at least 24 hours for air drying.

4. Reassemble the filter and dust container, then reattach to the vacuum.

Cleaning the Brush Roll

The anti-tangling motor floor brush minimizes hair wrap, but occasional cleaning may be required.

1. Turn off the vacuum and remove the battery.
2. Access the brush roll compartment, usually by releasing a latch or cover on the floor head.
3. Remove any tangled hair or debris from the brush roll using scissors or a brush.
4. Reinsert the brush roll and secure the cover.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery not charged or not properly inserted.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dust container full; Filter clogged; Blockage in hose/nozzle.	Empty dust container; Clean or replace filter; Check for and remove blockages.
Brush roll not spinning.	Hair/debris tangled in brush roll; Brush roll jammed.	Clean brush roll; Check for and remove obstructions.
Battery not charging.	Charger not plugged in; Faulty charger/battery.	Ensure charger is properly connected; Contact customer support if issue persists.

If the problem persists after attempting these solutions, please contact BLACK+DECKER customer support.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	BHFEV182CP-QW
Special Feature	Bagless
Filter Type	Cartridge
Included Components	1 x battery handle vacuum cleaner, 1 x animal hair brush, 1 x 18V/2.0Ah battery, 1 x wall bracket, 1 x charger, Crevice Tool
Is Cordless?	Yes
Capacity	650 Milliliters
Wattage	36 Watt-hours
Runtime	58 minutes
Recommended Uses For Product	Hard Floor, Carpet, Bare Floor

Feature	Detail
Form Factor	Portable
Color	Purple
Product Dimensions	28.35"L x 12.99"W x 6.69"H
Battery Description	Lithium-Ion
Noise Level	80 dB
Manufacturer	Stanley Black&Decker
Number of Items	1
Controller Type	Hand Control
Control Method	Touch
Style	Stick
Number of Speeds	3
Portable	Yes
Number of Power Levels	3
Indoor/Outdoor Usage	Indoor
Manufacture Year	2019
Item Weight	6.83 pounds
Specific instructions for use	Bare Floor, Carpet, Hard Floor, Stair Steps, Upholstery

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Keep your proof of purchase for warranty claims.

For technical support, replacement parts, or service inquiries, please contact BLACK+DECKER customer service. Contact details can typically be found on the manufacturer's website or on the product packaging.

You can also find additional resources and FAQs on the [BLACK+DECKER Store on Amazon](#).

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided data for this model. Please check the manufacturer's official website or product page for any available video resources.