Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- ARCADE1UP /
- > Arcade1Up Marvel Super Heroes Home Arcade Machine Instruction Manual

ARCADE1UP 7661

Arcade1Up Marvel Super Heroes Home Arcade Machine Instruction Manual

Model: 7661

1. Introduction

This manual provides essential instructions for the assembly, operation, maintenance, and troubleshooting of your Arcade1Up Marvel Super Heroes Home Arcade Machine. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product.

The Arcade1Up Marvel Super Heroes Home Arcade Machine includes three classic games: *Marvel Super Heroes, X-Men Children of the Atom,* and *The Punisher*.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present. The package should include:

- · Arcade cabinet panels and hardware
- 17-inch LCD display
- · Control panel with joysticks and buttons
- Power adapter
- · Riser (if included with your model)
- Instruction manual (this document)

3. SETUP AND ASSEMBLY

Assembly typically takes approximately one hour. It is recommended to have a second person assist with certain steps for ease and safety.

- Unpack Components: Carefully remove all parts from the packaging and lay them out in an organized manner.
- 2. **Assemble Cabinet Base:** Follow the included diagrams to connect the side panels, back panel, and bottom panel using the provided hardware. Ensure all connections are secure.
- 3. **Install Display:** Before securing the monitor, gently peel off any protective film from the monitor's edges. Install the 17-inch LCD display into the designated slot within the cabinet. Connect the display cables as instructed.

- 4. **Attach Control Panel:** Secure the control panel to the top front of the cabinet. Ensure all joystick and button connections are properly seated.
- 5. **Install Marquee:** Attach the light-up marquee to the top of the cabinet. Connect its power cable.
- 6. **Riser Assembly (Optional):** If your model includes a riser, assemble it according to its separate instructions and place the arcade cabinet on top of it. The riser increases the overall height of the machine to approximately 57.8 inches.
- 7. **Final Connections:** Connect the main power adapter to the arcade machine and then to a standard electrical outlet.





Image 1: Fully assembled Arcade1Up Marvel Super Heroes Home Arcade Machine with riser. This image displays the full cabinet with its vibrant Marvel artwork, control panel, and screen.



Image 2: Close-up view of the control panel for the Arcade1Up Marvel Super Heroes machine. It features two sets of joysticks and action buttons, along with an ON/OFF switch and volume controls.

4. OPERATING INSTRUCTIONS

This arcade machine operates without the need for coins.

- 1. **Power On:** Locate the ON/OFF switch, typically on the control panel or near the power input. Flip the switch to the 'ON' position. The marquee will illuminate, and the display will power on.
- 2. **Game Selection:** Upon startup, the machine will display a game selection menu. Use the joysticks to navigate and the designated button (usually 'Player 1 Start' or a specific 'Select' button) to choose your desired game from the available titles: *Marvel Super Heroes, X-Men Children of the Atom*, or *The Punisher*.

3. Gameplay:

- Joysticks: Control character movement.
- Action Buttons: Perform in-game actions such as punching, kicking, jumping, or special moves. Refer to the in-game instructions or game-specific guides for detailed control schemes.

- Player Start Buttons: Initiate a game for Player 1 or Player 2.
- 4. **Volume Control:** The machine features a volume control switch, typically offering 'OFF', 'LOUD', and 'LOUDER' settings. Adjust to your preference. Note that fine-grain volume adjustment is not available through this switch.
- 5. Power Off: To turn off the machine, flip the ON/OFF switch to the 'OFF' position.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your arcade machine.

- Cleaning the Cabinet: Use a soft, dry cloth to wipe down the exterior surfaces of the cabinet. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by drying thoroughly. Avoid abrasive cleaners or solvents.
- Cleaning the Display: Use a soft, lint-free cloth specifically designed for electronics screens. Do not spray cleaning solutions directly onto the screen; apply to the cloth first.
- **Control Panel Care:** The control panel is protected by a clear deck protector. Keep this area clean and dry. Avoid excessive force on joysticks and buttons.
- **Dust Management:** Periodically dust vents and openings to prevent dust buildup, which can affect internal components.
- **Power Cord:** Inspect the power cord regularly for any signs of damage. If damaged, discontinue use and contact customer support for a replacement.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not power on.	Power cord not connected; power outlet not active; ON/OFF switch in 'OFF' position.	Ensure power cord is securely plugged into the machine and a working outlet. Verify the ON/OFF switch is in the 'ON' position.
No image on screen.	Display cable loose; display not receiving power.	Check all display cable connections. Power cycle the machine.
No sound or sound is too loud.	Volume switch setting; internal speaker issue.	Adjust the volume switch to 'OFF' or 'LOUD' as desired. If sound is consistently too loud, consider placing a thick book or similar item over the speaker holes to muffle the sound, or consult a technician for potential modification.
Controls (joystick/buttons) unresponsive.	Loose connections; internal component issue.	Power cycle the machine. Ensure all control panel connections are secure during assembly. If the problem persists, contact customer support.

7. SPECIFICATIONS

• Model Number: 7661

• Product Dimensions (without riser): 22.75" D x 19" W x 45.8" H

• Product Dimensions (with riser): 22.75" D x 19" W x 57.8" H

• Item Weight: Approximately 80 pounds

• Display: 17-inch Color LCD

• Games Included: Marvel Super Heroes, X-Men Children of the Atom, The Punisher

• Power: AC adapter (included)

• Recommended Age: 14 years and up

8. WARRANTY INFORMATION

For detailed warranty information regarding your Arcade1Up Marvel Super Heroes Home Arcade Machine, please refer to the official documentation included with your product or visit the manufacturer's official website.

9. Customer Support

Should you require technical assistance, have questions about assembly, or need to report a defective part, please contact ARCADE1UP customer support. Contact information can typically be found on the official ARCADE1UP website or on the packaging materials.

Official Website: www.arcade1up.com

Related Documents - 7661



Arcade1Up X-Men Owners Manual: Setup, Troubleshooting, and Game Controls

This owners manual for the Arcade1Up X-Men arcade machine provides safety precautions, setup instructions, troubleshooting tips, game settings, and control layouts for an optimal gaming experience.



Arcade1Up Marvel vs. Capcom Owner's Manual

Comprehensive owner's manual for the Arcade1Up Marvel vs. Capcom arcade machine, providing setup, operation, troubleshooting, and safety guidelines in English, French, and Spanish.



Arcade1Up The Simpsons Owners Manual: Safety, Setup, and Troubleshooting

Comprehensive owners manual for the Arcade1Up The Simpsons arcade machine. Includes essential safety precautions, setup guidelines, troubleshooting tips, game controls, and technical specifications for an optimal gaming experience.



Arcade1Up TRON Owner's Manual

This owner's manual provides instructions and troubleshooting tips for the Arcade1Up TRON arcade machine. It covers safety precautions, game settings, controls, and assistance information.



Arcade1Up Terminator 2 Owners Manual: Setup, Safety, and Troubleshooting Guide

Official owner's manual for the Arcade1Up Terminator 2 arcade machine (Model TER-A-10159). Provides essential safety precautions, setup guidance, troubleshooting steps, game settings, control explanations, and technical specifications.



Arcade1Up Class of 81 Owner's Manual - MSP-A-10171

Comprehensive owner's manual for the Arcade1Up Class of 81 (MSP-A-10171) featuring safety instructions, troubleshooting, game settings, and control layouts for classic arcade games.