

[Manuals.plus](#) /

> [Ovitar](#) /

> Ovitar Android TV Box Replacement Remote Control Instruction Manual for MXQ Pro, MX10, T95M, T95Q, T95mini, mx9, H96, H96 pro+, H96max, x96mini, x96max, v88, hk1max, hk1play

Ovitar 6b625b54-b39f-467c-ba46-b733810eb706

Ovitar Android TV Box Replacement Remote Control Instruction Manual

Model: 6b625b54-b39f-467c-ba46-b733810eb706

This manual provides instructions for the setup, operation, and maintenance of your Ovitar replacement remote control.

1. COMPATIBILITY

This Ovitar replacement remote control is designed for use with specific Android TV Box models. It is compatible with the following models:

- MXQ Pro
- MX10
- T95M
- T95Q
- T95mini
- mx9
- H96
- H96 pro+
- H96max
- x96mini
- x96max
- v88
- hk1max
- hk1play

Note: This remote control is specifically designed for the listed Android TV Box models and may not function correctly with other devices.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA (UM-4) batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 2.1: Battery compartment with cover removed, showing battery orientation.



Figure 2.2: Remote control with battery compartment closed.

2.2 Initial Use (No Programming Required for Android TV Box)

This replacement remote control is designed to work immediately with the compatible Android TV Box models listed above without any additional programming. Once batteries are installed, point the remote at your Android TV Box and begin use.

2.3 Programming for Other Devices (e.g., TV, Stereo)

While the remote works out-of-the-box for the Android TV Box, some users have reported success in programming certain buttons to control other devices like a TV or stereo. This functionality is not officially supported for all buttons or devices, but can be attempted as follows:

1. Press and hold the **"SET"** button on the remote until the LED indicator light stays on.
2. Press the button on the Ovitara remote that you wish to program (e.g., Power button for your TV). The LED will flash.
3. Point your original TV/stereo remote control's infrared (IR) emitter directly at the IR emitter of the

Ovitar remote (usually at the top).

4. Press and hold the corresponding button on your original TV/stereo remote (e.g., Power button for your TV) until the LED on the Ovitar remote stays on steady. This indicates successful learning.
5. Repeat for any other buttons you wish to program.
6. Press the "SET" button again to exit programming mode. The LED will turn off.

***Disclaimer:** This advanced programming feature is based on user feedback and may not be available or fully functional for all devices or remote control units. Functionality is not guaranteed.*

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions on your Ovitar replacement remote control.



3.1 Button Functions

- **Power (Red Button):** Turns the Android TV Box on or off.
- **SET:** Used for programming the remote to other devices (refer to Section 2.3).
- **AV/TV:** Switches input source on a TV if programmed.
- **Directional Pad (Up, Down, Left, Right):** Navigates menus and selections.
- **OK:** Confirms selections or opens items.
- **Volume Up (+):** Increases volume.
- **Volume Down (-):** Decreases volume.
- **Mute:** Mutes or unmutes audio.
- **Back/Return:** Returns to the previous screen or menu.
- **Home:** Returns to the main home screen of the Android TV Box.
- **Menu/Options:** Opens context-sensitive menus or options.
- **Media Playback Controls (Play/Pause, Stop, Fast Forward, Rewind, Next, Previous):** Controls media playback.
- **Numeric Keypad (0-9):** For direct input of numbers or channel selection.
- **@ / Mouse Icon:** May activate a mouse pointer function on some Android TV Boxes.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the Android TV Box's IR receiver.
 - Confirm you are within the effective operating range (typically up to 10 meters) and pointing the remote directly at the device.
- **Specific Buttons Not Working:**
 - Check if the button is stuck or physically damaged.
 - If you attempted to program the button for another device, try resetting the remote by removing

and reinserting batteries, then re-test with the Android TV Box.

- **Compatibility Issues:**

- Verify that your Android TV Box model is listed in the compatibility section (Section 1). This remote is not universally compatible with all Android TV Boxes.
- For example, some users have reported that this remote may not operate with the "v88" model despite being listed as compatible in some descriptions. If you experience this, double-check your specific device's requirements.

6. SPECIFICATIONS

Brand	Ovitar
Model Number	6b625b54-b39f-467c-ba46-b733810eb706
Product Dimensions	6.14 x 1.73 x 0.78 inches
Item Weight	1.6 ounces
Connectivity Technology	Infrared (IR)
Compatible Devices	Android TV Box (Specific models listed in Section 1)
Power Source	2 x AAA Batteries (not included)



Figure 6.1: Remote Control Dimensions.

7. WARRANTY AND SUPPORT

This product undergoes 100% testing before shipping to ensure functionality. Specific warranty details are not provided with the product. For any support inquiries or issues not covered in this manual, please contact the seller or manufacturer directly through your purchase platform.

© 2023 Ovitir. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.