

Daewoo SYM-1373

Daewoo SYM-1373 1000W Soup Maker Instruction Manual

Model: SYM-1373

1. INTRODUCTION

Thank you for purchasing the Daewoo SYM-1373 1000W Soup Maker. This appliance is designed to simplify the process of making delicious homemade soups, smoothies, and other blended recipes. Please read this instruction manual carefully before first use to ensure safe and efficient operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Be careful when handling the sharp blades.
- Ensure the lid is securely locked before operating.
- Do not fill above the MAX fill line (1000ml) or below the MIN fill line (800ml).

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Daewoo Soup Maker.



Figure 1: The Daewoo SYM-1373 Soup Maker, showing the main unit with its stainless steel jug, integrated handle, and the control panel on top. The control panel features buttons for various programs (Smooth, Chunky, Compote, Juice, Re-heat, Blend) and an LED display.



Figure 2: The Daewoo SYM-1373 Soup Maker disassembled, showing the stainless steel jug with its handle and internal MAX/MIN fill lines, and the separate lid assembly which contains the motor and blade unit.

Components:

- **Motor Unit / Lid:** Contains the motor, heating element, and blending blades.
- **Stainless Steel Jug:** The main container for ingredients, with integrated handle and fill level markings (MAX 1000ml, MIN 800ml).
- **Control Panel:** Features an LED display and program selection buttons.
- **Power Cord:** For connecting to an electrical outlet.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and ensure all parts are present and undamaged.
2. **Clean:** Before first use, clean the jug and lid assembly (excluding the electrical parts of the lid) with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the motor unit with a damp cloth.
3. **Position:** Place the soup maker on a stable, flat, heat-resistant surface.
4. **Assemble:** Ensure the lid is correctly seated and locked onto the jug.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet. The LED display will illuminate.

5. OPERATING INSTRUCTIONS

The Daewoo SYM-1373 offers multiple programs for versatile use.

General Operation:

1. Add your desired ingredients to the stainless steel jug. Ensure ingredients are cut into small pieces (approx. 2-3 cm) for optimal blending and cooking.
2. Pour in liquid (water, broth, milk) up to the desired level, ensuring it is between the MIN (800ml) and MAX (1000ml) markings.

3. Securely place the lid onto the jug and ensure it is locked into position.
4. Plug the appliance into the power outlet. The LED display will show the standby mode.
5. Press the 'MODE' button repeatedly to cycle through the available programs. The selected program will be indicated on the LED display.
6. Once the desired program is selected, press the 'START' button to begin operation. The appliance will automatically cook and blend according to the program's pre-set cycle.
7. When the program is complete, the appliance will beep and return to standby mode. Unplug the appliance and carefully remove the lid.
8. Serve your freshly made soup or blend.

Available Programs:

- **SMOOTH:** For creamy soups and purees. This program typically cooks and blends ingredients to a fine consistency.
- **CHUNKY:** For soups with a thicker, more textured consistency, leaving some ingredients in larger pieces. This program primarily cooks and may blend minimally at the end.
- **COMPOTE:** Ideal for making fruit compotes or sauces.
- **JUICE:** For blending fruits and vegetables into juices or smoothies. This program focuses on blending without heating.
- **RE-HEAT:** To warm up pre-cooked soups or liquids without further blending.
- **BLEND:** A manual blending function for quick blending or to achieve a desired consistency after a cooking program.

Note: The appliance features an LED control panel for easy program selection and status indication.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your soup maker. The Daewoo SYM-1373 is designed for easy cleaning.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Empty:** Empty any remaining contents from the jug.
3. **Clean Jug:** Fill the jug with warm soapy water. You can use a soft brush to clean the interior and around the blades. For stubborn residue, let it soak for a few minutes.
4. **Clean Lid:** Carefully wipe the exterior of the motor unit/lid with a damp cloth. **Do not immerse the motor unit in water or any other liquid.** Be cautious around the blades.
5. **Rinse and Dry:** Rinse the jug thoroughly with clean water. Dry all parts completely before storing.
6. **Storage:** Store the soup maker in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your soup maker, refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check that the lid is correctly and securely placed on the jug. The appliance has a safety interlock.

- **Blending is ineffective:**

- Ensure ingredients are cut into small, manageable pieces.
- Check that the liquid level is between the MIN and MAX markings. Too little liquid can hinder blending.
- If using the 'CHUNKY' program, it is designed for less blending. Use 'SMOOTH' or 'BLEND' for finer results.

- **Soup is not heating:**

- Verify that a heating program (e.g., SMOOTH, CHUNKY, COMPOTE, RE-HEAT) has been selected.
- Ensure the appliance is not overloaded.

- **Overheating protection activated:**

- If the appliance stops unexpectedly, it may have overheated. Unplug it and allow it to cool down for at least 30 minutes before attempting to use it again.
- Ensure proper ventilation around the appliance during operation.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	SYM-1373
Power / Wattage	1000 W
Voltage	240 V
Capacity	1 Liter (Max fill line)
Minimum Fill	800 ml
Material (Jug)	Aluminum / Stainless Steel
Blade Material	Stainless Steel
Special Features	Programmable, LED Control
Product Dimensions	31 x 21.5 x 21.5 cm
GTIN	05412479022141

9. WARRANTY AND SUPPORT

This Daewoo appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service inquiries, please contact the retailer where you purchased the product or refer to the official Daewoo website for customer service contact information in your region.

