

UpStart Components ALB-4713-001013-DL24

UpStart Components Microwave Light Bulb Replacement Manual

Model: ALB-4713-001013-DL24

1. INTRODUCTION

This manual provides essential information for the safe and effective use of the UpStart Components 4713-001013 Microwave Light Bulb. This product is designed as a replacement light bulb for compatible Samsung microwave models, specifically MC17J8000CS/AA. Please read this manual thoroughly before installation and operation to ensure proper function and safety.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage:

- **Disconnect Power:** Before attempting any installation or maintenance, always unplug the microwave oven from the electrical outlet to prevent electric shock.
- **Allow Cooling:** If the previous bulb was recently in use, allow it to cool completely before handling to avoid burns.
- **Handle with Care:** Light bulbs are fragile. Handle the new bulb carefully to prevent breakage.
- **Proper Disposal:** Dispose of old bulbs according to local regulations.
- **Compatibility:** Ensure the replacement bulb specifications match the original bulb's requirements for your microwave model.

3. PRODUCT OVERVIEW

The UpStart Components 4713-001013 Microwave Light Bulb is a high-quality replacement designed for durability and performance. It features an Intermediate Screw Base (E17) and is rated for 40W at 110V-130V. The bulb is constructed with high-temperature resistant glass, making it suitable for use in oven conditions.



Figure 3.1: The UpStart Components microwave light bulb, shown with its branding.



Figure 3.2: A detailed view of the light bulb, highlighting its E17 screw base and filament structure.



Figure 3.3: The product packaging, a simple white box with the UpStart Components logo.

4. SETUP AND INSTALLATION

Follow these steps to replace the microwave light bulb:

1. **Unplug the Microwave:** Ensure the microwave oven is completely disconnected from the power

supply.

2. **Locate the Bulb Compartment:** Refer to your microwave's original user manual to locate the light bulb access panel. This is typically on the side, back, or bottom of the microwave, often secured by screws.
3. **Remove the Access Panel:** Using a screwdriver, carefully remove the screws securing the light bulb access panel. Set the screws aside in a safe place.
4. **Remove the Old Bulb:** Gently unscrew the old bulb counter-clockwise until it is free from the socket. If the bulb is broken, use pliers or wear protective gloves to remove any remaining pieces.
5. **Install the New Bulb:** Carefully screw the new UpStart Components bulb into the socket clockwise until it is snug. Do not overtighten.
6. **Reattach the Access Panel:** Align the access panel and secure it with the screws removed earlier.
7. **Restore Power:** Plug the microwave oven back into the electrical outlet.
8. **Test:** Turn on the microwave light to confirm proper operation.

5. OPERATING INSTRUCTIONS

This light bulb functions as an illumination source within your microwave oven. Once installed, it will operate automatically when the microwave door is opened or when the internal light function is activated, depending on your microwave model's design. No specific user operation is required for the bulb itself beyond proper installation.

6. MAINTENANCE

The UpStart Components light bulb requires minimal maintenance. Periodically, you may:

- **Inspect:** Visually inspect the bulb for any signs of damage or loosening during routine microwave cleaning.
- **Clean:** If necessary, gently wipe the exterior of the bulb (when cool and power is disconnected) with a soft, dry cloth to remove dust or grease buildup. Do not use abrasive cleaners.

7. TROUBLESHOOTING

If the light bulb does not illuminate after installation, consider the following:

- **No Power:** Ensure the microwave oven is securely plugged into a working electrical outlet. Check your home's circuit breaker if other appliances are also not receiving power.
- **Improper Installation:** Verify that the bulb is screwed in tightly and correctly into the socket.
- **Defective Bulb:** Although rare, a new bulb can sometimes be defective. If all other troubleshooting steps fail, consider testing with another compatible bulb if available.
- **Microwave Malfunction:** If the bulb is correctly installed and confirmed to be functional, but still does not light, there may be an issue with the microwave's internal wiring or light circuit. In this case, consult a qualified appliance technician.

8. SPECIFICATIONS

Attribute	Value
-----------	-------

Attribute	Value
Brand	UpStart Components
Model Number	ALB-4713-001013-DL24
Part Number	4713-001013
Wattage	40 watts
Voltage	110V-130V
Bulb Shape Size / Base Type	E17 (Intermediate Screw Base)
Light Source Type	Incandescent
Unit Count	1 Count
Compatibility	Samsung MC17J8000CS/AA (0000) Microwave and other compatible models

9. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part and is not an OEM (Original Equipment Manufacturer) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. For support or warranty inquiries, please contact the seller or UpStart Components directly through the platform where the purchase was made.