

Ant Esports GP100

Ant Esports GP100 Wired Gamepad Instruction Manual

1. INTRODUCTION

The Ant Esports GP100 is a versatile wired gamepad designed for an enhanced gaming experience across multiple platforms. This controller offers broad compatibility with PC (Windows 7/8/8.1/10/Steam), PlayStation 3, and Android devices (version 4.0 or above with OTG function). It features a plug-and-play design, multi-mode functionality (Xinput, Dinput, Android, PS3), vibration feedback, and a TURBO function for continuous button presses. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your gamepad.



Image 1.1: The Ant Esports GP100 gamepad highlighting its compatibility with Windows, Android, PlayStation 3, and Steam Deck.

2. PRODUCT OVERVIEW

The Ant Esports GP100 gamepad features an ergonomic design for comfortable handling during extended gaming sessions. It includes standard gaming controls and special function buttons.

- **Left Joystick:** For directional control.
- **D-pad:** Digital directional pad.
- **LED Indicator:** Displays connection status and mode.
- **Right Joystick:** For camera control or other directional inputs.
- **A, B, X, Y Buttons:** Action buttons.
- **START Button:** Initiates game or menu functions.
- **SELECT Button:** Selects options or menu functions.
- **TURBO Button:** Activates continuous button press function.
- **CLEAR Button:** Deactivates TURBO function.
- **HOME Button:** Returns to system menu or switches modes.
- **L1, L2 Buttons:** Left shoulder and trigger buttons.
- **R1, R2 Buttons:** Right shoulder and trigger buttons.

Zero Delay Function Buttons

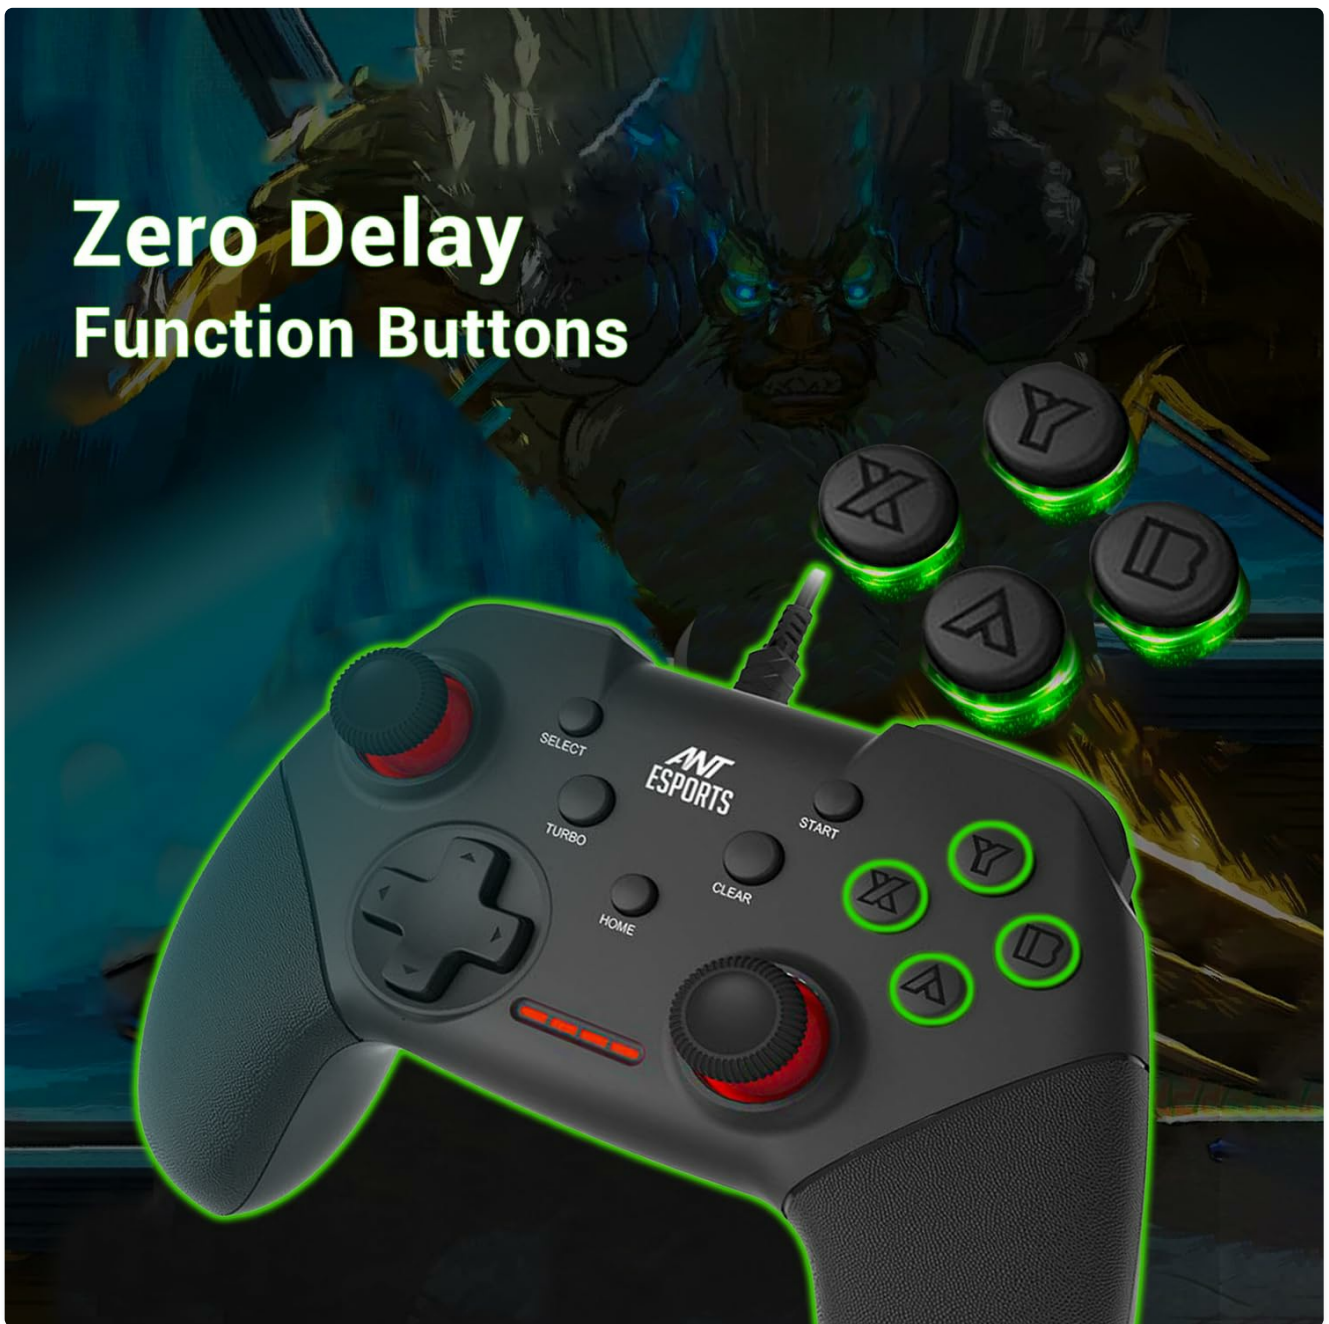


Image 2.1: Detailed view of the Ant Esports GP100 gamepad, showing the layout of its buttons, D-pad, and dual analog sticks.



Image 2.2: The gamepad emphasizing its eccentric 360-degree dual analog sticks for precise control.

3. SETUP AND CONNECTION

The Ant Esports GP100 gamepad is designed for easy plug-and-play functionality across supported platforms. Follow these steps to connect your gamepad.



Image 3.1: The gamepad in use, demonstrating its plug-and-play capability for immediate gaming.

3.1 PC Platform Connection

1. Connect the gamepad to your computer via the USB cable.
2. When the LED1 light remains on, the gamepad is successfully connected.
3. For Windows 10 or above, DirectX 9.0c or higher may be required. If issues arise, try installing the latest version of the Xbox 360 Controller gamepad driver.

3.2 Android Platform Connection (Smart Phone / Tablet / Smart TV / TV Box)

1. Connect the gamepad to your Android device using the USB cable. An OTG adapter is required for Android smartphones and tablets.
2. Press the HOME button for 3 seconds to switch to Android mode.
3. When the LED2/LED3 lights remain on, the gamepad is successfully connected.
4. Ensure your Android device is version 4.0 or above and fully supports OTG function.

3.3 PlayStation 3 Platform Connection

1. Connect the gamepad to your PS3 console via the USB cable.
2. When the LED light remains on, the gamepad is successfully connected.

4. OPERATING INSTRUCTIONS

4.1 Mode Exchange (Xinput - Dinput)

The gamepad supports both Xinput and Dinput modes for PC gaming.

- To switch between Xinput and Dinput modes, press the HOME button for 5 seconds.
- **X-input Mode:** Indicated by LED1 remaining on. This mode is compatible with most modern PC games.
- **D-input Mode:** Indicated by LED2 remaining on. This mode is compatible with older PC games.

4.2 TURBO Function

The TURBO function allows for continuous button presses, useful in games requiring rapid input.



Image 4.1: The gamepad highlighting the TURBO function, used for continuous button presses.

Setting TURBO Function:

1. Press and hold one or more desired buttons (e.g., A, B, X, Y, L1, R1, D-pad, joysticks, SELECT, or START).
2. While holding the button(s), press the TURBO button. The selected button(s) will now activate the TURBO function.

Clearing TURBO Function:

1. Press and hold the button(s) for which you want to clear the TURBO function.
2. While holding the button(s), press the CLEAR button. The TURBO function will be deactivated for the selected button(s).

5. MAINTENANCE

To ensure the longevity and optimal performance of your Ant Esports GP100 gamepad, please observe the following maintenance guidelines:

- Avoid subjecting the gamepad to strong vibrations or impacts.
- Do not attempt to disassemble, refit, or repair the gamepad yourself. Unauthorized alterations will void the warranty.
- Keep the gamepad away from humid, high-temperature, or dusty environments.
- Prevent water or other liquids from entering the gamepad, as this can affect its performance.
- Keep the gamepad away from fire sources.
- Ensure the USB power supply is within the standard range (USB 3.5-5.5V DC).
- Children should use this product under adult supervision.
- Clean the gamepad with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

6. TROUBLESHOOTING

If you encounter issues with your Ant Esports GP100 gamepad, refer to the following common problems and solutions:

6.1 Gamepad Not Identified by Computer

- Verify that your computer's USB port is functioning correctly. Try connecting another USB device or using a different USB port.
- Ensure the computer's USB voltage is stable. A short power supply can cause instability.
- Check if the necessary USB drivers are installed.
- For Windows systems below Windows 10 (including XP), you may need to install the Xbox 360 gamepad software. You can download the latest drivers from the Ant Esports website.

6.2 No Vibration Feedback

- Confirm that the game you are playing supports gamepad vibration feedback.
- Check the in-game settings to ensure that vibration feedback is enabled.

6.3 Gamepad Not Responding

- Ensure the game you are playing supports gamepad input. Some games may require button mapping before use.
- Verify the gamepad is in the correct mode (Xinput/Dinput/Android) for the game/platform.

7. SPECIFICATIONS

Feature	Specification
Working Platform	Android / PC / PS3
Working Modes	Android Standard / Xinput / Dinput
Working Temperature	-20°C ~ 65°C
Working Humidity	20 ~ 80%
Product Dimensions (LxWxH)	160 x 104 x 59 mm (6.3 x 4.1 x 2.3 inches)
Net Weight	189 g (0.42 lbs)
Cable Length	1.8 meters (5.9 feet)

Feature	Specification
Working Current	<30mA (No Vibration)
Indicator Light	LED

8. WARRANTY INFORMATION

The Ant Esports GP100 wired gamepad comes with a **1-year international warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

Please note that any alteration, disassembly, or unauthorized repair of this device will void the warranty. Damage resulting from misuse, accidents, or improper maintenance is not covered.

Retain your proof of purchase (receipt or invoice) as it will be required for any warranty claims.

9. SUPPORT

For further assistance, technical support, or to download the latest drivers, please contact Ant Esports through the following channels:

- **Website:** www.antesports.com
- **Email:** support@antesports.com
- **Driver Downloads:** <http://antesports.com/downloads>

If you have any quality problems or suggestions, please do not hesitate to contact our customer service team. We are committed to serving you wholeheartedly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question