

[Manuals.plus](#) /

› [SACKit](#) /

› SACKit Rockit Wireless In-Ear Headphones User Manual

SACKit Onyx

SACKit Rockit Wireless In-Ear Headphones User Manual

Model: Onyx

INTRODUCTION

Thank you for choosing SACKit Rockit Wireless In-Ear Headphones. These headphones are designed to provide a superior audio experience with comfort, durability, and advanced features. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Image: SACKit Rockit Wireless In-Ear Headphones, showing both earbuds and the charging case.

SETUP

Package Contents

Your SACKit Rockit headphones package should contain the following items:

- SACKit Rockit Wireless In-Ear Headphones (Left and Right earbuds)
- Charging Case
- USB-C Charging Cable
- Multiple sizes of ear tips
- User Manual (this document)

Charging the Headphones and Case

Before first use, fully charge your SACKit Rockit headphones and the charging case. The headphones offer up to 8 hours of playback on a single charge, with the charging case providing an additional 20 hours, totaling 28 hours of wireless sound.

- To charge the earbuds: Place them into the charging case. They will magnetically snap into place and begin charging automatically. A red LED on the earbuds indicates charging.

- To charge the case:
 - Connect the USB-C charging cable to the port on the back of the case and to a power source.
 - Alternatively, place the charging case on a Qi-compatible wireless charging pad.

The charging case has a single LED indicator that blinks to show its charge level: 1 blink (0-25%), 2 blinks (25-50%), 3 blinks (50-75%), 4 blinks (75-100%).



Image: SACKit Rockit earbuds placed inside their open charging case, showing the magnetic charging points.



Image: Top-down view of the SACKit Rockit charging case, highlighting the SACKit logo and the unique 'X' design element.

Pairing with a Device

The SACKit Rockit headphones use Bluetooth for wireless connectivity. They can remember up to 8 devices.

1. Ensure the headphones are charged and inside the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), go to Bluetooth settings.
4. Select "SACKit Rockit" from the list of available devices.
5. Once connected, you will hear an audible confirmation, and the earbuds' LED indicators will change.

The headphones automatically detect if they should operate in mono or stereo mode.

OPERATING INSTRUCTIONS

Touch Controls

The SACKit Rockit headphones feature intuitive touch controls on each earbud, allowing you to manage music playback and calls without needing to access your device.



Image: A woman wearing SACKit Rockit headphones while working on a laptop, illustrating the convenience of intuitive touchscreen controls.

Common Touch Gestures

Action	Gesture
Play/Pause Music	Single tap on either earbud
Next Track	Double tap on the right earbud
Previous Track	Double tap on the left earbud
Increase Volume	Tap and hold on the right earbud
Decrease Volume	Tap and hold on the left earbud

Action	Gesture
Answer/End Call	Single tap on either earbud
Reject Call	Tap and hold on either earbud
Activate Voice Assistant (Siri/Google Assistant)	Triple tap on either earbud

Note: Specific gestures may vary slightly depending on your device and software version.

Hands-Free Calling

The built-in microphone allows for clear hands-free calls. Passive noise reduction helps to dampen ambient noise during conversations.

Waterproof Design (IPX5)

With IPX5 technology, your SACKit Rokit headphones are waterproof, making them suitable for use during workouts, in light rain, or when sweating. They are designed to withstand splashes and sweat, but should not be submerged in water.



Image: A man engaged in a workout while wearing SACKit Rockit headphones, emphasizing their waterproof design suitable for sports.

Noise Cancelling

The headphones feature passive noise cancellation, which helps to reduce ambient noise by creating a seal in your ear canal. This enhances your listening experience by minimizing distractions from your surroundings.

NOISE CANCELLING



Image: A man exercising while wearing SACKit Rockit headphones, illustrating the benefit of noise cancelling for focused activity.

MAINTENANCE

Proper care will extend the lifespan of your SACKit Rockit headphones.

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters any openings. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in their charging case to protect them from dust, dirt, and physical damage. Store in a cool, dry place away from extreme temperatures.
- **Ear Tips:** Periodically remove the ear tips and clean them with mild soap and water. Ensure they are completely dry before reattaching them to the earbuds.

TROUBLESHOOTING

If you encounter issues with your SACKit Rockit headphones, try the following solutions:

• **No Sound/Poor Sound Quality:**

- Ensure the headphones are charged.
- Check the volume level on both the headphones (via touch controls) and your connected device.
- Make sure the headphones are properly paired and connected to your device. Try re-pairing if necessary.
- Ensure there are no obstructions between the headphones and your device.
- Clean any debris from the earbud speakers and ear tips.

• **Headphones Not Pairing:**

- Ensure Bluetooth is enabled on your device.
- Make sure the headphones are in pairing mode (open the case).
- Turn off Bluetooth on your device, then turn it back on.
- Forget "SACKit Rockit" from your device's Bluetooth list and try pairing again.
- Ensure the headphones and case are charged.

• **One Earbud Not Working:**

- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open it again.
- Ensure both earbuds are charged.
- Try re-pairing the headphones with your device.

• **Touch Controls Not Responding:**

- Ensure your fingers are clean and dry.
- Try restarting the headphones by placing them in the case and taking them out again.

If the problem persists, please refer to the support section or contact SACKit customer service.

SPECIFICATIONS

Feature	Detail
Model Name	Onyx
Connectivity Technology	Wireless (Bluetooth)
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	Passive Noise Cancellation
Water Resistance Level	IPX5 (Waterproof)
Average Battery Life (Headphones)	8 Hours
Total Battery Life (with Case)	28 Hours
Charging Time	Approx. 2 hours for full charge
Charging Interface	USB-C, Wireless (Qi-compatible)

Feature	Detail
Case Weight	Approx. 50g
Earbud Weight	Approx. 12g (each)
Compatible Devices	Bluetooth-enabled devices
Material	Faux Leather (case accent)

WARRANTY AND SUPPORT

SACKit products are designed for quality and durability. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official SACKit website.

If you require technical assistance or have questions not covered in this manual, please contact SACKit customer support. Keep your purchase receipt and product model number (Onyx) handy when contacting support.

Return Policy: Products purchased on Amazon.co.uk typically have a 30-day return/replacement policy from the seller.

© 2024 SACKit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question