

[Manuals.plus](#) /

› [TRIXIE](#) /

› TRIXIE TX4+1 Automatic Pet Feeder User Manual

TRIXIE 24384

TRIXIE TX4+1 Automatic Pet Feeder User Manual

Model: 24384

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your TRIXIE TX4+1 Automatic Pet Feeder. Please read these instructions carefully before use and retain them for future reference.

The TRIXIE TX4+1 Automatic Pet Feeder is designed to provide scheduled meals for your cat or dog, accommodating up to 5 meals per day with portion control. It is suitable for both dry and semi-moist food.

PRODUCT OVERVIEW

The TRIXIE TX4+1 Automatic Pet Feeder features a removable tray with five compartments, each capable of holding up to 1 cup of food. It includes a programmable timer for setting feeding intervals.



Figure 1: Top view of the TRIXIE TX4+1 Automatic Pet Feeder in its closed state, showing the sleek white and grey design with a small display panel.



Figure 2: The TRIXIE TX4+1 Automatic Pet Feeder with its top cover removed, revealing the grey five-compartment food tray ready for filling.



Figure 3: The removable grey five-compartment food tray, detached from the main feeder unit, highlighting its design for easy cleaning and filling.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: the main feeder unit, the removable 5-compartment tray, and the lid.
2. **Battery Installation:** The feeder requires batteries for operation. Locate the battery compartment on the underside of the unit. Insert the required batteries (not included) according to the polarity indicators.
3. **Tray Placement:** Place the clean 5-compartment food tray into the main unit, ensuring it sits securely and aligns with the central rotation mechanism.
4. **Filling Compartments:** Fill each compartment with up to 1 cup of dry or semi-moist pet food. The first meal will be immediately accessible in the exposed compartment.
5. **Lid Placement:** Securely place the lid back onto the feeder unit.



Figure 4: View of the feeder's base with the top cover and food tray removed, indicating the location for battery installation.

OPERATING INSTRUCTIONS

Setting the Timer for Scheduled Meals

The TRIXIE TX4+1 allows you to program up to 4-time delayed feeding intervals within a 24-hour period, in addition to the

first immediately available meal.

1. **Accessing Controls:** The control panel with a digital display and buttons is located on the top of the feeder.
2. **Setting Current Time:** Use the "SET" button to enter programming mode. Adjust the current time using the arrow buttons (up/down). Confirm with "SET".
3. **Programming Meal Times:** After setting the current time, you can program the delay in hours and minutes for each of the 4 subsequent meals. For example, if you want the next meal in 6 hours, set the delay to 06:00.
4. **Confirmation:** Once all desired meal delays are set, the feeder will begin its cycle. The first meal is available immediately, and subsequent meals will be presented at the programmed intervals.



Figure 5: Detailed view of the feeder's control panel, showing the digital display and buttons for setting the timer and programming meal schedules.

Feeding Your Pet

Once programmed, the feeder will automatically rotate the tray to expose the next filled compartment at the scheduled time. This ensures your pet receives meals consistently.



Figure 6: A dog consuming food from the TRIXIE TX4+1 Automatic Pet Feeder, demonstrating its use during a scheduled mealtime.

MAINTENANCE

Cleaning

- **Removable Tray:** The plastic 5-compartment food tray is dishwasher safe (top rack only) for easy and thorough cleaning.
- **Main Unit:** Wipe the main feeder unit with a damp cloth. Do not submerge the main unit in water, as it contains electronic components.

- **Drying:** Ensure all parts are completely dry before reassembling the feeder and adding food.

Battery Replacement

When the display dims or the feeder's rotation becomes inconsistent, it is time to replace the batteries. Refer to the "Setup" section for battery installation instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder does not turn on/display is blank.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new batteries.
Tray does not rotate at scheduled time.	Incorrect timer settings; low batteries; obstruction.	Verify timer settings. Replace batteries. Ensure no food or debris is blocking the tray's rotation.
Food is ejected during rotation.	Overfilled compartments; feeder not on a stable surface.	Do not overfill compartments (max 1 cup). Place feeder on a flat, stable surface.
Display shows incorrect time.	Time not set correctly; battery interruption.	Reset the current time as per operating instructions.

SPECIFICATIONS

Feature	Detail
Model Number	24384
Brand	TRIXIE
Material	Plastic
Color	Black/White
Target Species	Cat, Dog
Capacity	5 compartments, each holding up to 1 cup (approx. 240 ml)
Special Features	Portion Control, Programmable Timer
Operation Mode	Automatic
Power Source	Battery Powered (Batteries not included)
Recommended Use	Indoor
Product Dimensions (LxWxH)	33.02 x 35.56 x 6.35 cm (approx. 13 x 14 x 2.5 inches)
Item Weight	1.35 kg (approx. 2.98 lbs)
Care Instructions	Removable tray: Top-rack dishwasher safe; Main unit: Hand wash only (wipe clean)
Included Components	TX4+1 Automatic Pet Feeder (main unit, 5-compartment tray, lid)



Figure 7: Diagram illustrating the dimensions of the TRIXIE TX4+1 Automatic Pet Feeder, showing length, width, and height measurements.

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the available product data. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage and how to contact customer support.

Manufacturer: TRIXIE Heimtierbedarf GmbH & Co. KG

© 2025 TRIXIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07TK2TSQX>

More documents and user manuals: <https://manuals.plus/>