



Manuals.plus /

› ShineMe /

› ShineMe Upgrade Travel Kettle User Manual

## ShineMe 190149280491

# ShineMe Upgrade Travel Kettle User Manual

Model: 190149280491 | Brand: ShineMe

## INTRODUCTION

---

Thank you for choosing the ShineMe Upgrade Travel Kettle. This portable electric kettle is designed for convenience and efficiency, featuring food-grade silicone and dual voltage compatibility for global use. Please read this manual thoroughly before operation to ensure safe and optimal performance.

# DIMENSIONS



Image: The ShineMe Upgrade Travel Kettle in its expanded, ready-to-use state.

## PRODUCT FEATURES

- **Durable Material:** Constructed with food-grade, BPA-free silicone body and 304 stainless steel heating plate and lid for safety and longevity.
- **Safety Features:** Equipped with boil-dry protection, which automatically shuts off the kettle when no water is detected, preventing damage.
- **Heat Preservation:** Features a built-in temperature control switch. If the power switch is left in the 'ON' position, the kettle will automatically reheat water when its temperature drops below 170°F (76°C). To disable this, switch to 'O' after boiling.
- **Easy Storage:** Cleverly designed to collapse for compact storage, making it ideal for travel. It expands to a 555ml capacity.
- **Dual Voltage:** Supports 110V (100-120V) and 220V (220-240V) operation, adjustable via a switch on the kettle base, allowing use worldwide.



Image: Visual representation of the kettle's heat preservation and boil-dry protection mechanisms.

## WHAT'S INCLUDED

Your ShineMe Upgrade Travel Kettle package includes:

- 1 x Collapsible Electric Kettle
- 1 x Detachable Power Cord
- 1 x Universal Travel Adapter
- 1 x Foldable Silicone Cup
- 1 x Carrying Bag



FDA Approved



3C Certificate



FDA Food Grade Material Report



LFGB Food Grade Material Report



ISO9001

Image: The travel kettle and its included accessories, including the carrying bag.

## SETUP

- Adjust Voltage:** Before first use, locate the voltage selector switch on the bottom of the kettle. Use a screwdriver or coin to adjust it to match the local voltage (110V for North America, 220V for most other regions). Failure to do so may damage the appliance.
- Attach Handle:** If the handle is detached for compact storage, align the handle with the slots on the kettle base and push it firmly until it clicks into place.
- Unfold Kettle:** Gently pull the top section of the silicone body upwards until the kettle is fully extended. Ensure the silicone is taut and the kettle is stable.
- Initial Cleaning:** To eliminate any residual manufacturing odor, fill the kettle with water and a small amount of lemon juice or vinegar. Boil the mixture, then discard. Repeat this process 2-3 times with fresh water. Leave the lid open to air dry.
- Connect Power:** Attach the detachable power cord to the kettle's base and plug it into a suitable power outlet using the provided universal adapter if necessary.

# DUAL VOLTAGE

110V (100-120V) & 220V (220-240V)



Image: Adjusting the dual voltage switch on the kettle's base.

# Portable Gift Box



Image: Instructions for attaching the handle and unfolding the kettle.



## DETACHABLE POWER CODE

more convenient to store  
and more unimpeded to  
pour water.

Image: The detachable power cord for easy storage and pouring.

### OPERATING INSTRUCTIONS

---

1. **Fill with Water:** Open the lid and fill the kettle with water. Do not exceed the 'MAX' fill line (555ml) to prevent overflow during boiling. Do not fill below the 'MIN' line.
2. **Close Lid:** Securely close the lid before operating the kettle.
3. **Power On:** Press the power switch to the 'ON' position. The indicator light will illuminate, signifying that the kettle has begun heating.
4. **Boiling Process:** The water will heat rapidly. Once it reaches a rolling boil, the kettle will automatically shut off.
5. **Serve:** Carefully pour the hot water. If you wish to turn off the auto heat-preservation feature, press the power switch to 'O' after the water has boiled.



Image: Pouring water from the kettle after boiling.

Your browser does not support the video tag.

Video: Demonstration of filling the kettle with water and the boiling process.

## SAFETY PRECAUTIONS

---

- Always ensure the correct voltage (110V or 220V) is selected on the kettle base before plugging it in.
- Do not operate the kettle without water. The boil-dry protection will activate, but repeated dry boiling can damage the heating element.
- Never heat anything other than water in the kettle. Heating other liquids or food items can cause damage, residue buildup, or safety hazards.
- Exercise caution when handling the kettle after boiling, as the exterior and steam can be hot.
- Do not attempt to unplug the power cord from the kettle base while it is full and hot. Always bring your cup to the kettle for pouring.
- The included foldable cup is suitable for holding liquids but may not be stable enough for use with pour-over coffee makers or similar accessories. Use a sturdy mug for such applications.
- Keep the kettle out of reach of children and pets.

## MAINTENANCE AND CLEANING

---

- **Regular Cleaning:** The kettle should be hand washed and wiped clean. Do not immerse the electrical base in water.
- **Eliminating Odor:** If a silicone odor is present, boil water with lemon slices or vinegar several times. Ensure

the kettle is thoroughly aired out after cleaning.

- **Storage:** Allow the kettle to cool and dry completely before collapsing and storing it in its carrying bag.

## TROUBLESHOOTING

---

- **Kettle not heating:** Ensure the power cord is securely connected, the kettle is plugged into a working outlet, and the power switch is in the 'ON' position. Verify the voltage selector is set correctly for your region.
- **Water has an unusual taste/smell:** This can occur with new silicone products. Perform the initial cleaning steps (boiling with lemon/vinegar) multiple times. The odor should dissipate with use.
- **Kettle shuts off prematurely:** Check if the water level is too low, triggering the boil-dry protection. Ensure the lid is properly closed.
- **Kettle does not turn off after boiling:** Ensure the power switch is not stuck. If the heat preservation feature is active, it will reheat the water below 170°F. To turn it off completely, switch to 'O'.

## SPECIFICATIONS

---

<b>Brand</b>	ShineMe
<b>Model Name</b>	Upgrade Travel Kettle
<b>Model Number</b>	190149280491
<b>Capacity</b>	550 Milliliters
<b>Material</b>	Food Grade Silicone, 304 Stainless Steel
<b>Voltage</b>	110V / 220V (Dual Voltage)
<b>Wattage</b>	700 watts
<b>Item Dimensions (L x W x H)</b>	5.47" x 5.2" x 6.69"
<b>Item Weight</b>	1.1 Pounds
<b>Special Feature</b>	Boil Dry Protection, Collapsible Design

# DIMENSIONS



Image: Product dimensions for the kettle and foldable cup.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official ShineMe website. Keep your purchase receipt as proof of purchase.