

manuals.plus /

> [Nintendo](#) /

> [Nintendo 2DS Crimson Red Handheld Console User Manual](#)

Nintendo Nintendo 2DS

Nintendo 2DS Crimson Red Handheld Console User Manual

Model: Nintendo 2DS

1. INTRODUCTION

Welcome to the user manual for your Nintendo 2DS Crimson Red handheld console. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. The Nintendo 2DS offers a unique 2D gaming experience, compatible with both Nintendo DS and Nintendo 3DS game titles.

Included in the package:

- Nintendo 2DS Crimson Red handheld console
- AC Adapter (Charger)

Note: Games are not included with this renewed console. An SD card may be required for certain functionalities or game saves, and is not always included with renewed units.



Figure 1: Front view of the Nintendo 2DS Crimson Red console, showing the top screen with the Nintendo 2DS logo and the bottom touchscreen displaying various application icons like Camera, Mii Maker, and eShop.

2. SETUP

2.1. Charging the Console

Before initial use, ensure your Nintendo 2DS console is fully charged. Connect the included AC adapter to the charging port on the console and then plug it into a standard wall outlet. The orange charging indicator light will illuminate. Once charging is complete, the light will turn off.

2.2. Initial Power-On and System Settings

1. Locate the Power button on the right side of the console. Press and hold it until the power indicator light turns blue.
2. Follow the on-screen prompts to configure initial system settings, including:
 - Language selection
 - Date and time settings
 - User profile creation (Mii character)
 - Parental Controls setup (optional but recommended)

2.3. SD Card Installation (If Applicable)

The Nintendo 2DS uses an SD card for saving game data, downloaded software, and multimedia files. If your renewed console did not include an SD card, you will need to purchase one separately for full

functionality. The SD card slot is typically located on the side of the console. Insert the SD card firmly until it clicks into place.

3. OPERATING INSTRUCTIONS

3.1. Console Layout and Controls

Familiarize yourself with the console's buttons and ports:

- **D-Pad (Directional Pad):** Located on the left, used for menu navigation and game control.
- **Circle Pad:** Located above the D-Pad, provides analog input for movement in games.
- **A/B/X/Y Buttons:** Located on the right, primary action buttons for games and menu selection.
- **L/R Buttons:** Shoulder buttons on the top edge of the console.
- **START/SELECT Buttons:** Located below the A/B/X/Y buttons, used for in-game functions and menu options.
- **HOME Button:** Located below the bottom screen, returns to the HOME Menu.
- **Power Button:** On the right side, turns the console on/off.
- **Sleep Switch:** On the bottom right, slides to put the console into Sleep Mode.
- **Volume Slider:** On the left side, adjusts audio output.
- **Game Card Slot:** On the top edge, for inserting Nintendo DS/3DS game cards.
- **Stylus Slot:** On the right side, holds the included stylus.
- **Microphone (MIC):** Located below the D-Pad.
- **Camera:** Front-facing camera above the top screen, and two rear-facing cameras on the back.

3.2. Navigating the HOME Menu

The HOME Menu is the central hub for your Nintendo 2DS. Use the D-Pad or Circle Pad to highlight icons, and the A button or touchscreen to select them. The top screen displays the selected application, while the bottom screen shows a grid of icons for installed software, system settings, and other features.

3.3. Playing Games

1. Insert a Nintendo DS or Nintendo 3DS game card into the Game Card slot until it clicks.
2. The game icon will appear on the HOME Menu. Select it to start playing.
3. All Nintendo 3DS games will be displayed in 2D on the Nintendo 2DS console.

3.4. Wireless Communication (StreetPass and SpotPass)

The Nintendo 2DS supports wireless communication features:

- **StreetPass:** Exchange game data with other Nintendo 2DS/3DS users you pass by while your console is in Sleep Mode.
- **SpotPass:** Automatically receive content, notifications, and software updates via a wireless internet connection. Ensure your console is connected to a Wi-Fi network for SpotPass functionality.

3.5. Camera Functionality

The Nintendo 2DS includes a camera application. Select the camera icon from the HOME Menu to launch it. You can take photos using both the front and rear cameras.

4. MAINTENANCE

4.1. Cleaning the Console

To clean your Nintendo 2DS, use a soft, dry cloth. For stubborn smudges, lightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the console's finish and screens.

4.2. Battery Care

The Nintendo 2DS uses a Lithium-Ion battery. To prolong battery life:

- Avoid extreme temperatures.
- Charge the console regularly, but avoid leaving it fully discharged for extended periods.
- If storing the console for a long time, charge it to about 50% before storage.

4.3. Software Updates

Periodically check for system software updates via the System Settings menu. Updates can improve performance, add new features, and enhance security. A stable internet connection is required for updates.

5. TROUBLESHOOTING

If you encounter issues with your Nintendo 2DS, try the following solutions:

- **Console not turning on:** Ensure the battery is charged. Connect the AC adapter and try again.
- **Screen is blank or frozen:** Hold the Power button for several seconds to force a shutdown, then restart the console.
- **Game card not recognized:** Remove the game card and reinsert it firmly. Ensure the card is clean and free of debris.
- **Touchscreen unresponsive:** Try recalibrating the touchscreen via System Settings.
- **No sound:** Check the volume slider on the left side of the console. Ensure headphones are not plugged in if you expect sound from speakers.
- **Wireless connection issues:** Verify your Wi-Fi network settings in System Settings. Ensure you are within range of a strong signal.

For further assistance, refer to the official Nintendo Support website or contact the seller of your renewed console.

6. SPECIFICATIONS

Model Number	Nintendo 2DS
Dimensions (Approx.)	8.35 x 5.43 x 1.46 inches
Weight (Approx.)	14.7 ounces
Battery Type	1 Lithium Ion battery (required)
Compatible Games	Nintendo DS and Nintendo 3DS (2D display only)
Wireless Communication	Wi-Fi (IEEE 802.11 b/g), StreetPass, SpotPass

7. WARRANTY AND SUPPORT

This Nintendo 2DS console is a renewed product. Warranty coverage for renewed items is typically provided by the seller or the renewal program (e.g., Amazon Renewed). Please refer to the specific warranty information provided at the time of purchase or contact the seller directly for details regarding your warranty period and coverage.

For general product information and support resources, you may visit the official Nintendo Support website:

[Nintendo Official Support](#)