

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VINABTY](#) /

› VINABTY EN3V39H Replacement Remote Control User Manual for Hisense TVs

VINABTY EN3V39H

VINABTY EN3V39H Replacement Remote Control User Manual

For Hisense TV Models: 55H6E, 55R6000E, 49H6E, 65H6E, 65H6080E, 65R6E, 65R6070E, 50H6080E, 50H6E, 55EU6070, 55H6080E, 55R6000, 55R6000E, 55R7E, 55R6E, 55R6040E

1. INTRODUCTION

This manual provides instructions for the VINABTY EN3V39H replacement remote control. This remote is designed to be compatible with various Hisense TV models, offering direct functionality without the need for programming.

Model: EN3V39H

Brand: VINABTY

2. PACKAGE CONTENTS

- 1 x VINABTY EN3V39H Remote Control

3. SETUP AND BATTERY INSTALLATION

The VINABTY EN3V39H remote control is pre-programmed and does not require any additional setup or pairing with your Hisense TV. Simply install batteries to begin use.

- 1. Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide or press the latch to open it.
- 2. Insert Batteries:** Insert two AAA batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 3. Close the Battery Compartment:** Replace the battery cover, ensuring it clicks securely into place.
- 4. Test the Remote:** Point the remote control towards your Hisense TV and press the Power button. The TV should respond.







Image 1: Front view of the VINABTY EN3V39H remote control, showing all buttons and their labels.

4. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your VINABTY EN3V39H remote control.





Image 2: Angled view of the VINABTY EN3V39H remote control, highlighting its ergonomic design.

4.1. Basic Functions

- **Power (Red Button):** Turns the TV on or off.
- **Input:** Selects the input source (HDMI, AV, etc.).
- **Picture:** Adjusts picture settings.
- **Sound:** Adjusts sound settings.
- **Aspect:** Changes the screen aspect ratio.
- **Sleep:** Sets a sleep timer for the TV.
- **Number Buttons (0-9):** Directly select channels.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **TV:** Switches to TV mode.
- **VOL +/-:** Increases or decreases the volume.
- **Mute:** Mutes or unmutes the TV sound.
- **CH ^/v:** Changes channels up or down.
- **Home (House Icon):** Accesses the TV's home screen or smart features.

4.2. Navigation and Menu Controls

- **Menu (Three Horizontal Lines):** Opens the main menu.
- **APPS:** Direct access to the applications menu.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.

4.3. Media Playback Controls

- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by application or TV menu. Refer

to your TV's on-screen guide.

- **Rewind (<<):** Rewinds media playback.
- **Play/Pause (>||):** Plays or pauses media playback.
- **Fast Forward (>>):** Fast forwards media playback.
- **Stop (Square):** Stops media playback.
- **Record (Circle):** Initiates recording (if supported by TV and connected device).
- **MTS:** Multi-channel Television Sound.
- **NRT:** (Functionality may vary, often related to network features).

4.4. Quick Access Buttons

- **Setting:** Direct access to TV settings.
- **Sports:** Direct access to sports content or mode (if supported by TV).
- **Netflix:** Launches the Netflix application.
- **Claro-video:** Launches the Claro-video application.
- **TIKILIVE:** Launches the TIKILIVE application.
- **YouTube:** Launches the YouTube application.

5. MAINTENANCE AND CARE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Some Buttons Not Working:**
 - While this remote is designed for broad compatibility, some specific advanced functions or smart TV features might not be fully supported on all Hisense TV models. This is generally due to variations in TV firmware or specific model requirements.
 - Ensure your TV's software is up to date.
 - Clean the remote's buttons and surface to ensure no debris is interfering with button presses.
- **Short Remote Range:**
 - Replace batteries with fresh ones.
 - Ensure the remote's infrared emitter (at the front) is clean and unobstructed.

7. SPECIFICATIONS

Feature	Detail
Model Number	EN3V39H
Brand	VINABTY
Compatible Devices	Hisense Televisions (specific models listed in introduction)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	8.8 x 2 x 0.65 inches
Item Weight	3 ounces
Special Feature	Ergonomic design

8. WARRANTY AND SUPPORT

For any issues or questions regarding your VINABTY EN3V39H remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty information and customer service contacts.

Manufacturer: VINABTY factory