

INJUSA 6495

INJUSA Kawasaki Ninja ZX10 12V Electric Motorcycle User Manual

Model: 6495

1. INTRODUCTION

Thank you for choosing the INJUSA Kawasaki Ninja ZX10 12V Electric Motorcycle. This manual provides essential information for the safe assembly, operation, and maintenance of your new ride-on toy. Please read it thoroughly before use and retain it for future reference.

The INJUSA Kawasaki Ninja ZX10 is a 12V battery-powered electric motorcycle, officially licensed, and recommended for children aged 3 years and older. It features an ergonomic design with stabilizer wheels and acceleration controlled by the right handlebar grip. The motorcycle reaches a maximum speed of 6 km/h and includes an MP3 input for music playback. It comes with a 12V battery and charger, and is manufactured in Spain, complying with EU safety standards.

2. SAFETY INFORMATION

WARNING: To prevent the risk of serious injury, adult supervision is required at all times. Never leave children unattended while operating this vehicle.

- This product is intended for children aged 36 months and older.
- Maximum user weight: 13 kg.
- Always wear a helmet and appropriate safety gear (e.g., knee and elbow pads) when riding.
- Do not operate the vehicle on public roads, near motor vehicles, on steep inclines, or near swimming pools or other bodies of water.
- Use only on flat, dry surfaces. Avoid sand, loose dirt, or gravel.
- Ensure all components are correctly assembled and secured before each use.
- Keep hands, hair, and clothing away from moving parts.
- Only use the provided charger and battery. Do not use other chargers or batteries.
- Charging should only be performed by an adult.

3. PACKAGE CONTENTS

Please check that all items are present before beginning assembly:

- INJUSA Kawasaki Ninja ZX10 Electric Motorcycle body
- Front Wheel
- Stabilizer Wheels (2)
- 12V Rechargeable Battery
- 12V Battery Charger
- Assembly Hardware (screws, washers, nuts)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow these steps carefully. A Phillips head screwdriver and wrench (not included) may be needed.

1. Attach the Front Wheel:

Align the front wheel with the fork. Insert the axle through the fork and wheel. Secure with the provided washers and nuts on both sides. Ensure the wheel spins freely but has no excessive wobble.



Image: Detailed view of the front wheel and fork assembly.

2. **Install Stabilizer Wheels:**

Locate the mounting points at the rear of the motorcycle. Attach each stabilizer wheel arm to its respective side using the provided screws and nuts. Ensure they are securely fastened and provide stable support.



Image: Detailed view of a rear stabilizer wheel and the faux exhaust.

3. **Connect the Battery:**

Locate the battery compartment, usually under the seat. Connect the battery terminals (red to red, black to black). Ensure connections are firm. Close the battery compartment securely.

4. **Initial Charge:**

Before first use, fully charge the 12V battery for 8-12 hours. Refer to the 'Charging the Battery' section for details.

5. **OPERATING INSTRUCTIONS**

5.1. **Charging the Battery**

- Ensure the motorcycle is turned off before charging.
- Locate the charging port, typically near the battery compartment.
- Plug the charger into the charging port, then plug the charger into a standard wall outlet.
- Charge for 8-12 hours for the first charge, and 6-8 hours for subsequent charges. Do not overcharge.
- Disconnect the charger once charging is complete.

5.2. Starting and Riding

- Turn the power switch to the 'ON' position.
- To move forward, twist the right handlebar grip. Release the grip to stop.
- The motorcycle has a maximum speed of 6 km/h.
- Average battery life per charge is approximately 60 minutes, depending on usage and terrain.

5.3. MP3 Music Playback

- Locate the MP3 input port on the dashboard.



Image: Dashboard with MP3 input and controls.

- Connect an external audio device (e.g., smartphone, MP3 player) using a compatible audio cable (not included).
- Adjust volume and track selection from your external device.

6. MAINTENANCE

- **Cleaning:** Wipe the motorcycle with a damp cloth. Do not use abrasive cleaners or solvents. Do not spray water directly onto electrical components.
- **Battery Care:** Recharge the battery after each use. If storing for an extended period, charge the battery at

least once a month to prolong its lifespan.

- **Storage:** Store the motorcycle in a dry, cool place, away from direct sunlight and moisture.
- **Inspection:** Regularly check all screws, nuts, and connections to ensure they are tight and secure. Inspect wheels and tires for wear.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motorcycle does not move	Battery is low or discharged Loose battery connection Power switch is off	Charge the battery Check battery terminals and connections Turn the power switch to 'ON'
Motorcycle moves slowly	Battery is low Overloaded vehicle Operating on uneven or soft surfaces	Charge the battery Reduce weight on the vehicle Operate on flat, hard surfaces
Battery not charging	Charger not properly connected Faulty charger or battery	Ensure charger is securely plugged into motorcycle and wall outlet Contact customer support for replacement
MP3 input not working	Audio cable not connected properly Volume too low on external device	Check audio cable connection Increase volume on the connected MP3 device

8. SPECIFICATIONS

- **Model:** INJUSA Kawasaki Ninja ZX10 (6495)
- **Brand:** INJUSA
- **Battery:** 12V
- **Maximum Speed:** 6 km/h
- **Average Battery Life:** 60 minutes
- **Recommended Age:** 36 months (3 years) and up
- **Maximum User Weight:** 13 kg
- **Product Dimensions (L x W x H):** 111 cm x 54 cm x 62 cm
- **Product Weight:** 13 kg
- **Material:** Plastic, Metal
- **Assembly Required:** Yes

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact INJUSA customer service. Refer to the product packaging or INJUSA's official website for contact details.

