

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RAF](#) /

› [RAF Digital Electric Water Kettle R.7914 User Manual](#)

RAF R.7914

RAF Digital Electric Water Kettle

Model: R.7914

Brand: RAF

INTRODUCTION

Thank you for purchasing the RAF Digital Electric Water Kettle R.7914. This appliance is designed for efficient and convenient water heating with digital controls and a timer function. Please read this manual carefully before use to ensure safe operation and optimal performance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the heating cycle.
- This appliance is for household use only.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package.

- RAF Digital Electric Water Kettle (Model R.7914)
- Power Base
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your electric kettle.



Figure 1: Main view of the product. This image shows a grey cap with mesh sides and a structured brim, not the electric kettle.

1. Kettle Body: Main water reservoir.
2. Lid: Removable or hinged lid for filling.

3. Handle: For safe pouring.
4. Spout: For pouring water.
5. Digital Control Panel: Displays temperature and timer settings.
6. Power Base: Connects to the power outlet and supplies power to the kettle.

SETUP

Before First Use

1. Remove all packaging materials and labels from the kettle and power base.
2. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle or power base in water.
3. Fill the kettle with clean water to the maximum fill line.
4. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.

Placement

- Place the power base on a flat, stable, heat-resistant surface.
- Ensure the kettle is placed away from the edge of the counter to prevent accidental tipping.
- Keep the kettle away from heat sources and direct sunlight.

OPERATING INSTRUCTIONS

Filling the Kettle

1. Remove the kettle from its power base.
2. Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the minimum mark or above the maximum (3 Liter) mark.
3. Close the lid securely.
4. Place the kettle back onto its power base.

Boiling Water

1. Plug the power base into a suitable electrical outlet.
2. Press the power button (usually indicated by an 'On/Off' symbol or 'Start'). The digital display will illuminate.
3. The kettle will begin heating the water. The digital display may show the current water temperature or a heating indicator.
4. Once the water reaches boiling point, the kettle will automatically switch off.
5. Carefully pour the hot water.

Using the Digital Controls and Timer

The digital control panel allows for precise temperature selection and timer settings.

- **Temperature Selection:** Use the '+' and '-' buttons to select your desired water temperature. The kettle will heat water to this temperature and then maintain it (if a keep-warm function is available).
- **Timer Function:** Press the 'Timer' button to activate the timer. Use the '+' and '-' buttons to set a delay for when you want the kettle to start heating. Confirm the setting by pressing the 'Timer' button again or 'Start'.
- Refer to the specific icons and button labels on your kettle's control panel for exact operation.

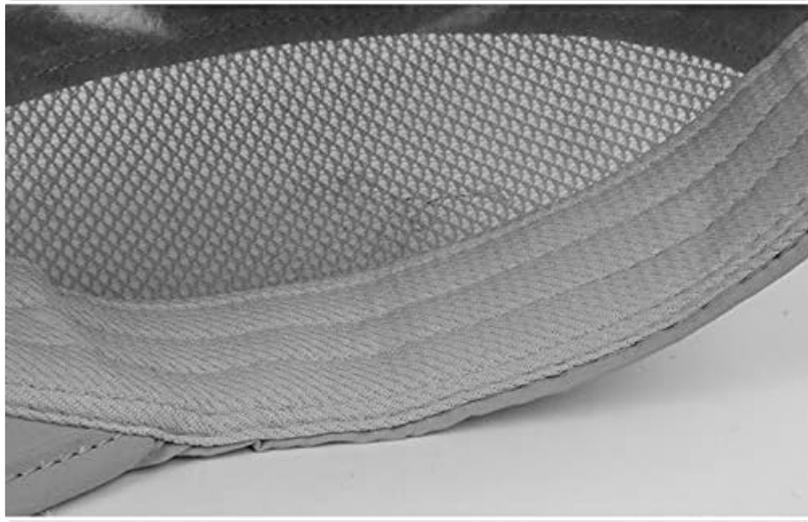


Figure 2: Interior view. This image shows the interior mesh and stitching of a grey cap, not the electric kettle.



Figure 3: Rear view. This image shows the adjustable strap and buckle on the back of a grey cap, not the electric kettle.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle.

Exterior Cleaning

1. Unplug the kettle and allow it to cool completely.
2. Wipe the exterior surface with a soft, damp cloth.
3. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

Interior Cleaning (Descaling)

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descale your kettle regularly to maintain efficiency.

1. Fill the kettle with a mixture of one part white vinegar and two parts water.
2. Boil the mixture and let it stand for at least 30 minutes, or longer if the scale is heavy.
3. Pour out the mixture and rinse the interior thoroughly with fresh water several times.
4. For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.

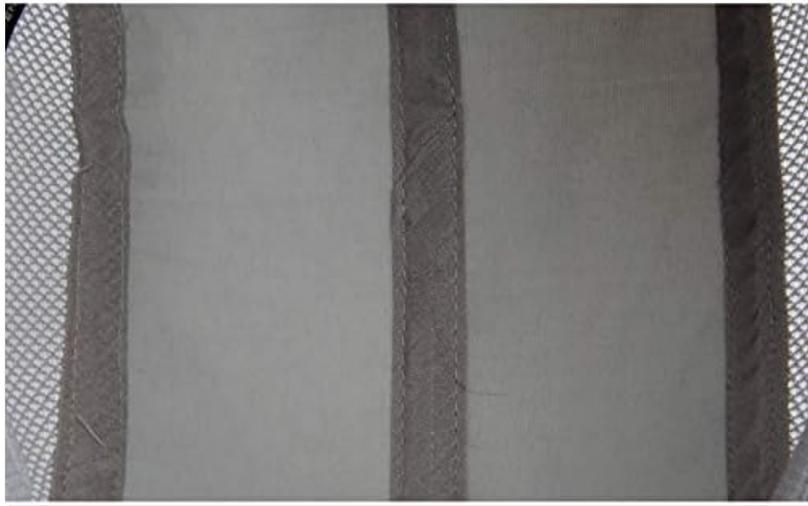


Figure 4: Interior panel detail. This image shows the interior stitching and fabric panels of a grey cap, not the electric kettle.

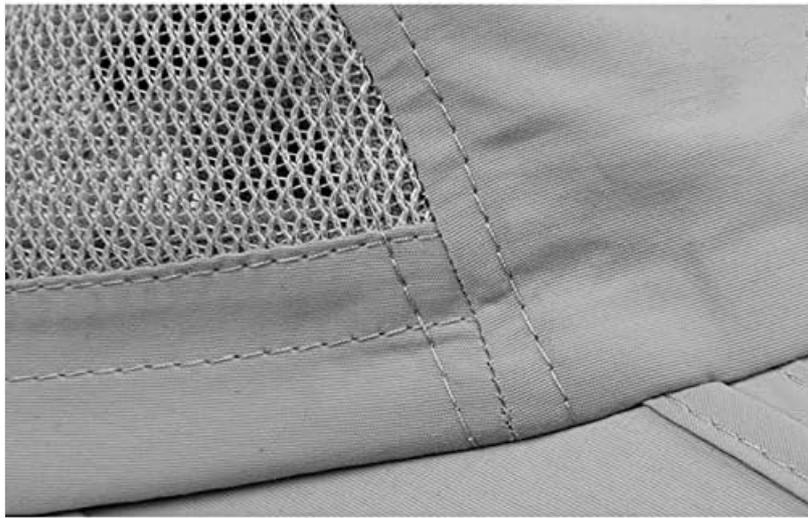


Figure 5: Side detail. This image shows the side stitching and mesh fabric on a grey cap, not the electric kettle.

TROUBLESHOOTING

If you encounter issues with your kettle, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; no power at outlet; kettle not properly seated on base.	Check power connection; test outlet with another appliance; ensure kettle is correctly placed on the power base.
Water not heating.	Kettle has automatically switched off; insufficient water.	Ensure kettle is filled above minimum level; press power button again.
Kettle switches off too soon.	Limescale buildup; lid not closed properly.	Descale the kettle; ensure the lid is securely closed.
Water tastes metallic or unusual.	New kettle residue; limescale buildup.	Perform initial cleaning steps (boil and discard water several times); descale the kettle.

SPECIFICATIONS

Model: R.7914

Power: 800 Watt

Capacity: 3 Liters

Type: Digital Electric Water Kettle with Timer

Dimensions (Shipping): 30 x 27 x 27 cm

Weight (Item): 1.4 kg

Assembly Required: No

Batteries Required: No

Included Components: Kettle

WARRANTY AND SUPPORT

Warranty Information

This RAF Digital Electric Water Kettle R.7914 comes with a one-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair. Please retain your purchase receipt as proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty service, or general inquiries, please contact your retailer or the manufacturer's customer service department. Contact details can typically be found on the product packaging or the manufacturer's official website.