



[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 6912A40002E Microwave Oven Light Bulb Replacement Manual for LG LMVM2055ST

UpStart Components ALB-6912A40002E-2PK-DL67

UpStart Components 6912A40002E Microwave Oven Light Bulb Replacement Manual

Model: ALB-6912A40002E-2PK-DL67

Brand: UpStart Components

INTRODUCTION

This manual provides instructions for the installation and use of the UpStart Components 6912A40002E Microwave Oven Light Bulb. This product is a compatible replacement part designed for specific LG microwave oven models, including the LG LMVM2055ST (ASBELGA). Each package contains two (2) replacement bulbs. Please note that this is an UpStart Components brand replacement part and not an original equipment manufacturer (OEM) product. All brand names and model descriptions mentioned are for compatibility illustration only and are registered trademarks of their respective owners.

SAFETY INFORMATION

Before attempting any installation or maintenance, please read and understand all safety precautions. Failure to follow these instructions may result in electric shock, personal injury, or damage to the microwave oven.

- **Disconnect Power:** Always unplug the microwave oven from the electrical outlet before beginning any installation or replacement procedure. This is critical to prevent electric shock.
- **Handle with Care:** Light bulbs can be fragile. Handle the new bulb carefully to avoid breakage.
- **Wear Protective Gear:** Consider wearing protective gloves to prevent cuts from broken glass and to keep the bulb free from oils that can reduce its lifespan.
- **Consult Microwave Manual:** Refer to your specific microwave oven's user manual for detailed instructions on accessing the light bulb compartment, as procedures may vary by model.

SETUP AND INSTALLATION

Follow these steps to replace the microwave oven light bulb:

1. **Disconnect Power:** Unplug the microwave oven from the wall outlet. Ensure there is no power supply to the appliance.
2. **Locate Bulb Compartment:** The light bulb compartment is typically located on the side, top, or bottom of the microwave oven, often behind a removable panel or grille. Consult your microwave oven's user manual for the exact location and

access method.

3. **Access the Bulb:** Carefully remove any screws, clips, or panels that secure the bulb compartment cover. Set these parts aside in a safe place.
4. **Remove Old Bulb:** Gently grasp the old bulb and pull it straight out from its socket. If the bulb is broken, carefully remove any remaining pieces, ensuring no glass fragments are left in the socket.
5. **Insert New Bulb:** Take one of the UpStart Components replacement bulbs. Align the two pins of the new bulb with the holes in the socket. Gently push the bulb straight into the socket until it is firmly seated. Do not force the bulb.
6. **Reassemble:** Replace the bulb compartment cover and secure it with the screws or clips removed earlier. Ensure all parts are properly reassembled.
7. **Reconnect Power:** Plug the microwave oven back into the electrical outlet.



Image 1: The UpStart Components 6912A40002E replacement microwave oven light bulb, showing its G8 base with two pins.



Image 2: Packaging for the UpStart Components replacement light bulbs, indicating the brand.

OPERATING

Once installed, the UpStart Components 6912A40002E light bulb will operate automatically with your microwave oven's internal lighting system. It will illuminate when the microwave door is opened and typically during cooking cycles, depending on your microwave model's design.

MAINTENANCE

The light bulb itself requires no specific maintenance. However, to ensure optimal performance and longevity:

- **Keep Clean:** Regularly clean the interior of your microwave oven, including the light bulb cover, to prevent grease and food splatters from obscuring the light.
- **Inspect Periodically:** Occasionally inspect the bulb and its socket for any signs of damage or loose connections.

TROUBLESHOOTING

If the new light bulb does not function after installation, consider the following:

- **No Light:**
 - Ensure the microwave oven is properly plugged into a working electrical outlet.
 - Verify that the bulb is fully and correctly seated in its socket. Remove and reinsert if necessary.
 - Check if the microwave oven's internal fuse (if applicable) has blown. If you suspect a fuse issue, it is recommended to contact a qualified technician.
 - Confirm that the microwave oven itself is functioning correctly in other aspects (e.g., heating food).
- **Flickering Light:**

- Ensure the bulb is securely inserted into the socket. A loose connection can cause flickering.

SPECIFICATIONS

Brand	UpStart Components
Model Number	ALB-6912A40002E-2PK-DL67
Base Type	G8
Wattage	20 Watts
Voltage	120 Volts
Quantity	2 Bulbs per pack
Compatibility	LG 6912A40002E, LG LMVM2055ST (ASBELGA) Microwave Oven

WARRANTY AND SUPPORT

Any warranties for this product are offered solely by UpStart Components. This product is not covered under any warranties offered by the original manufacturers of the microwave oven. For warranty claims, technical assistance, or product support, please contact UpStart Components directly through their official customer service channels.