



[Manuals.plus](#) /

> [Kearui](#) /

> Kearui T-388 Kids Walkie Talkie Instruction Manual

Kearui T-388

Kearui T-388 Kids Walkie Talkie Instruction Manual

Model: T-388

INTRODUCTION

Thank you for purchasing the Kearui T-388 Kids Walkie Talkie. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before operation and retain it for future reference.



Image: Kearui T-388 Kids Walkie Talkies and packaging.

PRODUCT FEATURES

The Kearui T-388 Walkie Talkie is designed for ease of use and durability, offering reliable communication for children's outdoor and indoor activities. Key features include:

- **8 Channels:** Provides multiple communication options to avoid interference.
- **Up to 3 Miles Range:** Effective communication range in open spaces without signal interference.
- **LED Flashlight:** Integrated light for convenience in low-light conditions.
- **LCD Backlit Display:** Clear visibility of channel and battery status.
- **Call Alert Function:** 10 selectable call ring tones to signal incoming transmissions.
- **Adjustable Volume:** Control sound output for comfortable listening.
- **High Noise Suppression (Squelch):** Enhances sound clarity by reducing background noise.
- **VOX (Voice Activated Transmission):** Allows hands-free communication.
- **Keypad Lock:** Prevents accidental changes to settings.
- **Auto Power Save:** Conserves battery life during periods of inactivity.

- **Ergonomic and Lightweight Design:** Easy for small hands to hold and carry (approx. 90g per unit).
- **Water-resistant:** Designed to withstand light splashes.



Image: Visual representation of key features.

PACKAGE CONTENTS

Upon opening the package, please ensure all items are present and in good condition:

- 2 x Kearui T-388 Walkie Talkies
- 1 x User Manual

Note: 4x AAA batteries are required for each walkie talkie and are not included in the package.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the walkie talkie.
2. Gently slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert 4 AAA batteries into the compartment, ensuring correct polarity (+ and -) as indicated inside.
4. Replace the battery compartment cover and slide it upwards until it clicks securely into place.

Repeat this process for the second walkie talkie.



Image: Battery compartment for AAA batteries.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the **Power button** (usually marked with a power symbol) until the LCD screen illuminates.

- **To Power Off:** Press and hold the **Power button** again until the LCD screen turns off.

Adjusting Volume

Use the **Up** and **Down** buttons (often labeled with arrows) to increase or decrease the listening volume.

Channel Selection

1. Press the **MENU** button once. The channel number on the LCD display will flash.
2. Use the **Up** or **Down** buttons to select your desired channel (1-8).
3. Press the **TALK** button or **MENU** button again to confirm your selection.

Important: Both walkie talkies must be on the same channel to communicate.

Transmitting (Talking)

To speak, press and hold the **TALK** (Push-to-Talk or PTT) button. Speak clearly into the microphone, holding the walkie talkie a few inches from your mouth. Release the **TALK** button when you finish speaking to allow the other party to respond.

Call Tone Function

1. Press the **CALL** button (often labeled "SEND CALL" or similar) once to send a call tone to the other walkie talkie on the same channel.
2. To change the call tone, press the **MENU** button twice. The current call tone number will flash.
3. Use the **Up** or **Down** buttons to cycle through the 10 available call tones.
4. Press the **TALK** button or **MENU** button again to confirm your selection.

LED Flashlight

Press the **LAMP** button (or a dedicated flashlight button) once to turn the LED flashlight on. Press it again to turn it off.

Keypad Lock

To prevent accidental changes to settings, press and hold the **MENU** button until a key icon appears on the LCD display. To unlock, press and hold the **MENU** button again until the key icon disappears.

VOX (Voice Activated Transmission)

VOX allows you to transmit without pressing the TALK button. When VOX is active, the walkie talkie will automatically transmit when it detects your voice.

1. Press the **MENU** button three times. The VOX icon and sensitivity level will flash.
2. Use the **Up** or **Down** buttons to select a VOX sensitivity level (e.g., 1-3, with 3 being most sensitive) or "OF" to turn VOX off.
3. Press the **TALK** button or **MENU** button again to confirm.

Did you find the treasure?

Yes, we do! We need to find him!

UP TO 3 MILES RANGE TALKING

In areas with no other signal interference and open spaces, a maximum transmission distance of 3 miles can be achieved.

Image: Illustration of the walkie talkie's communication range.

MAINTENANCE

- **Cleaning:** Wipe the walkie talkie with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Remove batteries if the device will not be used for an extended period to prevent leakage. Replace all batteries at the same time.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** While water-resistant, avoid submerging the device in water. If it gets wet, dry it thoroughly before use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Cannot communicate with other walkie talkie	Different channels selected; out of range; low battery.	Ensure both walkie talkies are on the same channel. Move closer to the other unit. Replace batteries.
Static or unclear sound	Out of range; interference; low battery.	Move closer to the other unit. Avoid obstacles. Replace batteries.
Keypad is unresponsive	Keypad lock is activated.	Press and hold the MENU button until the key icon disappears from the display.

SPECIFICATIONS

Brand	Kearui
Model Number	T-388
Color	Blue-Green
Number of Channels	8
Frequency Range	VHF
Maximum Range	Up to 3 Miles (in optimal conditions)
Power Source	4 x AAA batteries per unit (not included)
Voltage	6 Volts
Water Resistance Level	Water-resistant
Product Dimensions (L x W x H)	6.1 x 7.9 x 15 cm (approx.)
Weight	Approx. 90g per unit (without batteries)

SAFETY INFORMATION

- This product is suitable for children aged 3 and above.
- Adult supervision is recommended during use, especially in public areas, to ensure appropriate channel usage and safety.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.
- Avoid using the walkie talkie in extremely hot or cold environments.
- Do not attempt to open or modify the walkie talkie, as this will void the warranty and may cause damage.
- Keep the device away from strong magnetic fields.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact Kearui customer service through the platform where the product was purchased. Please have your purchase details and model number (T-388)

ready.

