

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [cimetech](#) /

› [Cimetech Wireless Ergonomic Optical Mouse CQ-TM004 User Manual](#)

cimetech CQ-TM004

Cimetech Wireless Ergonomic Optical Mouse User Manual

Model: CQ-TM004 | Brand: Cimetech

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Cimetech 2.4GHz Wireless Ergonomic Optical Mouse. This device offers reliable wireless connectivity, ease of use, and a comfortable design for various computing tasks.



Image: Top-down view of the Cimetech Wireless Ergonomic Optical Mouse.



Image: The mouse connected via 2.4G wireless technology, showing the USB receiver plugged into a laptop.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Cimetech Cordless Mouse
- 1 x USB Receiver (stored in the battery compartment of the mouse)
- 1 x User Manual

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the underside of the mouse.
2. Gently slide or lift the cover to open the compartment.

3. Insert one AA battery (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover.

2. USB Receiver Connection

1. Open the battery compartment cover and carefully remove the USB receiver.
2. Plug the USB receiver into an available USB port on your computer (laptop, desktop, Mac, or PC).
3. The mouse should automatically connect to your device. No additional drivers are typically required.



Image: Visual guide for installing the AA battery and connecting the USB receiver.

OPERATING INSTRUCTIONS

Button Functions

The Cimetech Wireless Mouse features 6 buttons for enhanced functionality:

- **Left Click Button:** Standard primary click function.

- **Right Click Button:** Standard secondary click function.
- **Scroll Wheel:** For vertical scrolling. Can also be pressed for middle-click functionality.
- **DPI Switch Button:** Adjusts mouse sensitivity (DPI).
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.



Image: Labeled diagram showing the location of the Left Click, Right Click, Scroll Wheel, DPI Switch, Forward, and Backward buttons, along with mouse dimensions.

DPI Adjustment

The mouse offers three adjustable DPI (Dots Per Inch) levels to control cursor speed and sensitivity. To change the DPI setting:

- Press the **DPI button** once: DPI is set to 800.
- Press the **DPI button** a second time: DPI is set to 1200 (default setting).
- Press the **DPI button** a third time: DPI is set to 1600.

The mouse retains the last selected DPI setting even after being turned off and on.

Intelligent Power-Saving Modes

The mouse is designed with three power-saving stages to conserve battery life:

- **Stage 1 (Standby):** Enters after 3 seconds of inactivity. Move the mouse to wake it up.
- **Stage 2 (Auto Shut-off):** Enters after 60 seconds of inactivity. Move the mouse to wake it up.
- **Stage 3 (Deep Sleep):** Enters after 15 minutes of inactivity. Move the mouse to wake it up.



Page Forward and Backward Buttons

Switch from Page to Page Quickly,
Definitely Helps You with More Efficient Work.

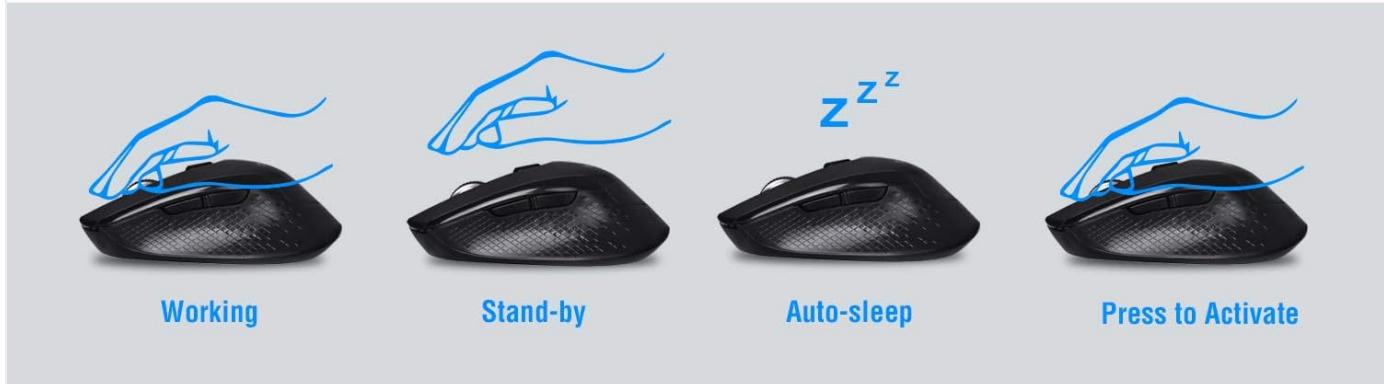


Image: Visual representation of the mouse's working, standby, auto-sleep, and activation states.

MAINTENANCE

- Keep the mouse clean by wiping it with a soft, dry cloth.
- Avoid exposing the mouse to extreme temperatures, direct sunlight, or liquids.
- When not in use for extended periods, consider removing the battery to prevent leakage.
- Store the USB receiver inside the mouse's battery compartment when traveling to prevent loss.

TROUBLESHOOTING

Problem	Solution

Problem	Solution
Mouse not responding	<ul style="list-style-type: none"> Ensure the battery is correctly installed and has sufficient charge. Replace if necessary. Verify the USB receiver is securely plugged into a working USB port. Try a different USB port. Ensure the mouse is not in a deep sleep mode. Move or click the mouse to wake it. Re-pair the mouse and receiver if possible (refer to manufacturer's website if specific pairing steps are needed, as none are provided here).
Cursor movement is erratic or imprecise	<ul style="list-style-type: none"> Clean the optical sensor on the underside of the mouse. Use the mouse on a clean, non-reflective, and uniform surface. Avoid glass or highly reflective surfaces. Adjust the DPI setting using the DPI button to find a suitable sensitivity. Ensure there are no strong wireless interferences nearby.
Forward/Backward buttons not working	<ul style="list-style-type: none"> These buttons typically function in web browsers and file explorers. Ensure you are using an application that supports these navigation commands. Check for any software conflicts or custom keybindings in your operating system settings.

SPECIFICATIONS

Model Number	CQ-TM004
DPI Levels	800 / 1200 (default) / 1600
Polling Rate	125Hz
Operating Range	Up to 50 feet (approximately 15 meters)
Connectivity	2.4GHz Wireless via USB Receiver
Battery Type	1 x AA battery (not included)
Compatibility	Windows 2000/ME/XP/7/8/10, VISTA, Mac OS
Product Dimensions	4.13 x 2.64 x 0.1 inches (10.5 x 6.7 x 0.25 cm)
Item Weight	2.82 ounces (80 grams)

COMPATIBILITY

The Cimetech Wireless Mouse is compatible with a wide range of operating systems, including:

- Windows 2000
- Windows ME
- Windows XP
- Windows Vista
- Windows 7
- Windows 8
- Windows 10
- Mac OS

It is suitable for use with desktops, laptops, PCs, and MacBooks.

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For warranty details, technical support, or further assistance, please refer to the official Cimetech website or contact their customer service directly.

You can often find support resources, FAQs, and contact information on the manufacturer's product support page.

© 2024 Cimetech. All rights reserved.