

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 4173175 Oven Light Bulb Replacement Manual

UpStart Components ALB-4173175-2PK-DL1159

UpStart Components 4173175 Oven Light Bulb Replacement Manual

Model: ALB-4173175-2PK-DL1159

1. INTRODUCTION

This manual provides instructions for the safe and proper installation and use of the UpStart Components 4173175 Light Bulb. This bulb is designed as a replacement for oven lights, compatible with models such as the Whirlpool RBS307PVS02 Oven and Whirlpool Oven Light Bulb 4174333. Please read these instructions carefully before proceeding with installation.

2. SAFETY INFORMATION

WARNING: Electrical shock hazard. Always disconnect power to the appliance before servicing. Failure to do so can result in serious injury or death.

- Ensure the oven is completely cool before attempting to replace the bulb.
- Wear protective gloves to avoid touching the new bulb directly, as oils from hands can reduce bulb life.
- Do not exceed the specified wattage (15W) for your oven's light socket.
- Dispose of old bulbs responsibly according to local regulations.

3. PACKAGE CONTENTS

Your package should contain the following items:

- 2 x UpStart Components 4173175 Oven Light Bulbs



Figure 3.1: UpStart Components 4173175 Oven Light Bulb Packaging. The image shows a white cardboard box with the "UpStart Components" logo, containing two replacement oven light bulbs.

4. INSTALLATION INSTRUCTIONS

Follow these steps to replace your oven light bulb:

1. **Disconnect Power:** Before beginning, ensure the oven is completely turned off and disconnected from its power source. This may involve unplugging the oven or turning off the circuit breaker.
2. **Allow Cooling:** Wait for the oven cavity and the existing bulb to cool down completely to prevent burns.
3. **Locate Bulb Cover:** Open the oven door and locate the light bulb cover, typically a glass or ceramic shield, inside the oven cavity.
4. **Remove Bulb Cover:** Carefully remove the bulb cover. This usually involves unscrewing it counter-clockwise or unlatching it. Refer to your oven's specific manual if you encounter difficulty.
5. **Remove Old Bulb:** Gently unscrew the old light bulb counter-clockwise. If the bulb is broken, use pliers to carefully remove the base.
6. **Install New Bulb:** Using a clean cloth or gloves, screw the new UpStart Components 4173175 light bulb clockwise into the socket until it is snug. Avoid overtightening.
7. **Replace Bulb Cover:** Reattach the bulb cover by screwing it clockwise or latching it back into place.
8. **Restore Power:** Reconnect the oven to its power source or turn on the circuit breaker.
9. **Test:** Turn on the oven light to confirm proper operation.



Figure 4.1: UpStart Components 4173175 Oven Light Bulb. This image displays the incandescent bulb with its E14s screw base, ready for installation.

5. OPERATING INSTRUCTIONS

Once installed, the UpStart Components 4173175 oven light bulb operates in conjunction with your oven's existing light switch. Simply activate the oven light switch to illuminate the oven interior. The bulb is designed for continuous use within the oven's operating temperature range up to 300°C.

6. MAINTENANCE

- **Cleaning:** If the bulb or its cover becomes dirty, ensure the oven is cool and power is disconnected. Clean with a soft, damp cloth. Do not use abrasive cleaners.
- **Inspection:** Periodically inspect the bulb and socket for any signs of damage or wear. Replace the bulb if it appears cracked or discolored.

7. TROUBLESHOOTING

Bulb Does Not Light

- **Check Power:** Ensure the oven is properly connected to power and the circuit breaker has not tripped.
- **Check Bulb Seating:** Verify that the bulb is screwed in tightly into the socket.
- **Inspect Bulb:** Remove the bulb and inspect the filament. If it appears broken or discolored, the bulb may be faulty and require replacement.
- **Test Socket:** If possible, test the socket with a known working bulb to rule out an issue with the oven's wiring or socket itself.
- **Oven Light Switch:** Ensure the oven light switch is functioning correctly.

8. SPECIFICATIONS

Feature	Specification
Brand	UpStart Components
Model Number	ALB-4173175-2PK-DL1159
Part Number	4173175
Compatibility	Whirlpool RBS307PVS02 Oven, Whirlpool Oven Light Bulb 4174333, 4174525
Wattage	15 Watts
Voltage	120 Volts
Base Type	E14s
Heat Resistance	Up to 300°C
Material	Copper (base)

9. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. For warranty claims or technical support, please contact UpStart Components directly through their official customer service channels. This product is not affiliated with any other brands mentioned, and their original manufacturers do not cover it under their warranties.

© 2023 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07TPQX8XQ>

More documents and user manuals: <https://manuals.plus/>