

[Manuals.plus](#) /

› [UpStart Components](#) /

› Instruction Manual for UpStart Components WP4452164 Oven Light Bulb Replacement

UpStart Components ALB-WP4452164-6PK-DL652

Instruction Manual

UPSTART COMPONENTS WP4452164 OVEN LIGHT BULB REPLACEMENT

Model: ALB-WP4452164-6PK-DL652

Product Overview

This manual provides instructions for the UpStart Components WP4452164 Oven Light Bulb Replacement, designed for compatibility with KitchenAid KEBS247DWH9 Ovens. This product is a high-quality replacement part intended to restore illumination within your oven.

Key features include:

- Premium quality materials for lasting performance and durability.
- Easy DIY fix for a dead oven light.
- Base Type: G8.
- Specifications: 5W, 12V.
- Quantity: 6 bulbs per pack.



Components



Image: A pack of six UpStart Components oven light bulbs, clearly showing the product and branding.

Installation Instructions

Before beginning installation, ensure the oven is completely cool and disconnected from the power supply to prevent electric shock or burns.

1. **Safety First:** Turn off the circuit breaker supplying power to your oven. Confirm the oven is completely off.
2. **Locate the Bulb:** Open the oven door and locate the light bulb cover, typically found on the side or back wall of the oven interior.
3. **Remove Cover:** Carefully remove the protective glass cover. This may involve unscrewing it or unlatching clips, depending on your oven model. Refer to your oven's specific user manual if unsure.

4. **Remove Old Bulb:** Gently pull the old bulb straight out from its socket. Avoid twisting if it's a G8 base, as this can damage the pins or socket.
5. **Insert New Bulb:** Align the two pins of the new UpStart Components bulb with the holes in the socket. Gently push the bulb straight into the socket until it is firmly seated. Do not force it.
6. **Replace Cover:** Reattach the protective glass cover securely.
7. **Restore Power:** Turn the circuit breaker back on.
8. **Test:** Turn on the oven light to confirm the new bulb is functioning correctly.



Image: A detailed view of a single UpStart Components oven light bulb, showing its G8 base pins.

Operation

The UpStart Components oven light bulb operates in conjunction with your oven's existing lighting system. Once installed,

the bulb will illuminate when the oven light switch is activated, or automatically when the oven door is opened, depending on your specific oven model's design.

This bulb is designed for continuous use within the oven's operating temperature range.

Maintenance

The oven light bulb requires minimal maintenance. Periodically, you may wish to clean the glass cover to ensure maximum light output. Always ensure the oven is cool and power is disconnected before cleaning.

- **Cleaning:** Use a soft, damp cloth to wipe the glass cover. Avoid abrasive cleaners that could scratch the surface.
- **Replacement:** Replace the bulb when it burns out. The lifespan of the bulb can vary depending on usage.

Troubleshooting

Problem	Possible Cause	Solution
Bulb does not light up after installation.	• No power to the oven. • Bulb not seated correctly. • Faulty bulb (rare). • Oven light switch is off or faulty.	• Check circuit breaker and oven power supply. • Ensure bulb pins are fully inserted into the socket. • Try a different bulb from the pack to confirm. • Consult your oven's manual for light switch troubleshooting.
Bulb flickers.	• Loose connection. • Bulb nearing end of life.	• Ensure bulb is firmly seated. • Replace the bulb.

Specifications

Attribute	Value
Brand	UpStart Components
Model Number	ALB-WP4452164-6PK-DL652
Compatible With	KitchenAid WP4452164 Light Bulb, KitchenAid KEBS247DWH9 Oven
Power/Wattage	5 watts
Voltage	12V
Base Type	G8
Quantity	6 bulbs per pack



Image: The packaging box for the UpStart Components oven light bulbs, displaying the brand logo.

Warranty and Support

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. For specific warranty details or support inquiries, please refer to the information provided with your purchase or contact UpStart Components directly.

Typically, products purchased through Amazon.ca may be eligible for a return/replacement within 30 days of purchase, subject to Amazon's return policy and the seller's terms.

© 2024 UpStart Components. All rights reserved.

This manual is for informational purposes only. Always follow safety precautions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07TPT35P2>

More documents and user manuals: <https://manuals.plus/>